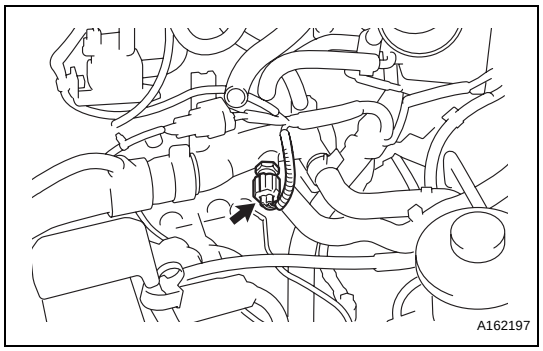


INSTALLATION

1. **INSTALL ENGINE COOLANT TEMPERATURE SENSOR**
   (a) Install the engine coolant temperature sensor.
   Torque: 20 N*m (204 kgf*cm, 15 ft.*lbf)
   (b) Connect the engine coolant temperature sensor connector.
2. **INSTALL AIR CLEANER CASE SUB-ASSEMBLY (See page EM-59)**
3. **INSTALL AIR CLEANER CAP SUB-ASSEMBLY (See page ES-496)**
4. **INSTALL NO. 1 AIR CLEANER INLET (See page EM-59)**
5. **INSTALL NO. 2 AIR CLEANER INLET (See page EM-60)**
6. **ADD ENGINE COOLANT (See page CO-7)**
7. **INSPECT FOR ENGINE COOLANT LEAK (See page CO-1)**
8. **INSTALL V-BANK COVER SUB-ASSEMBLY (See page EM-63)**