


KNOCK SENSOR

COMPONENTS

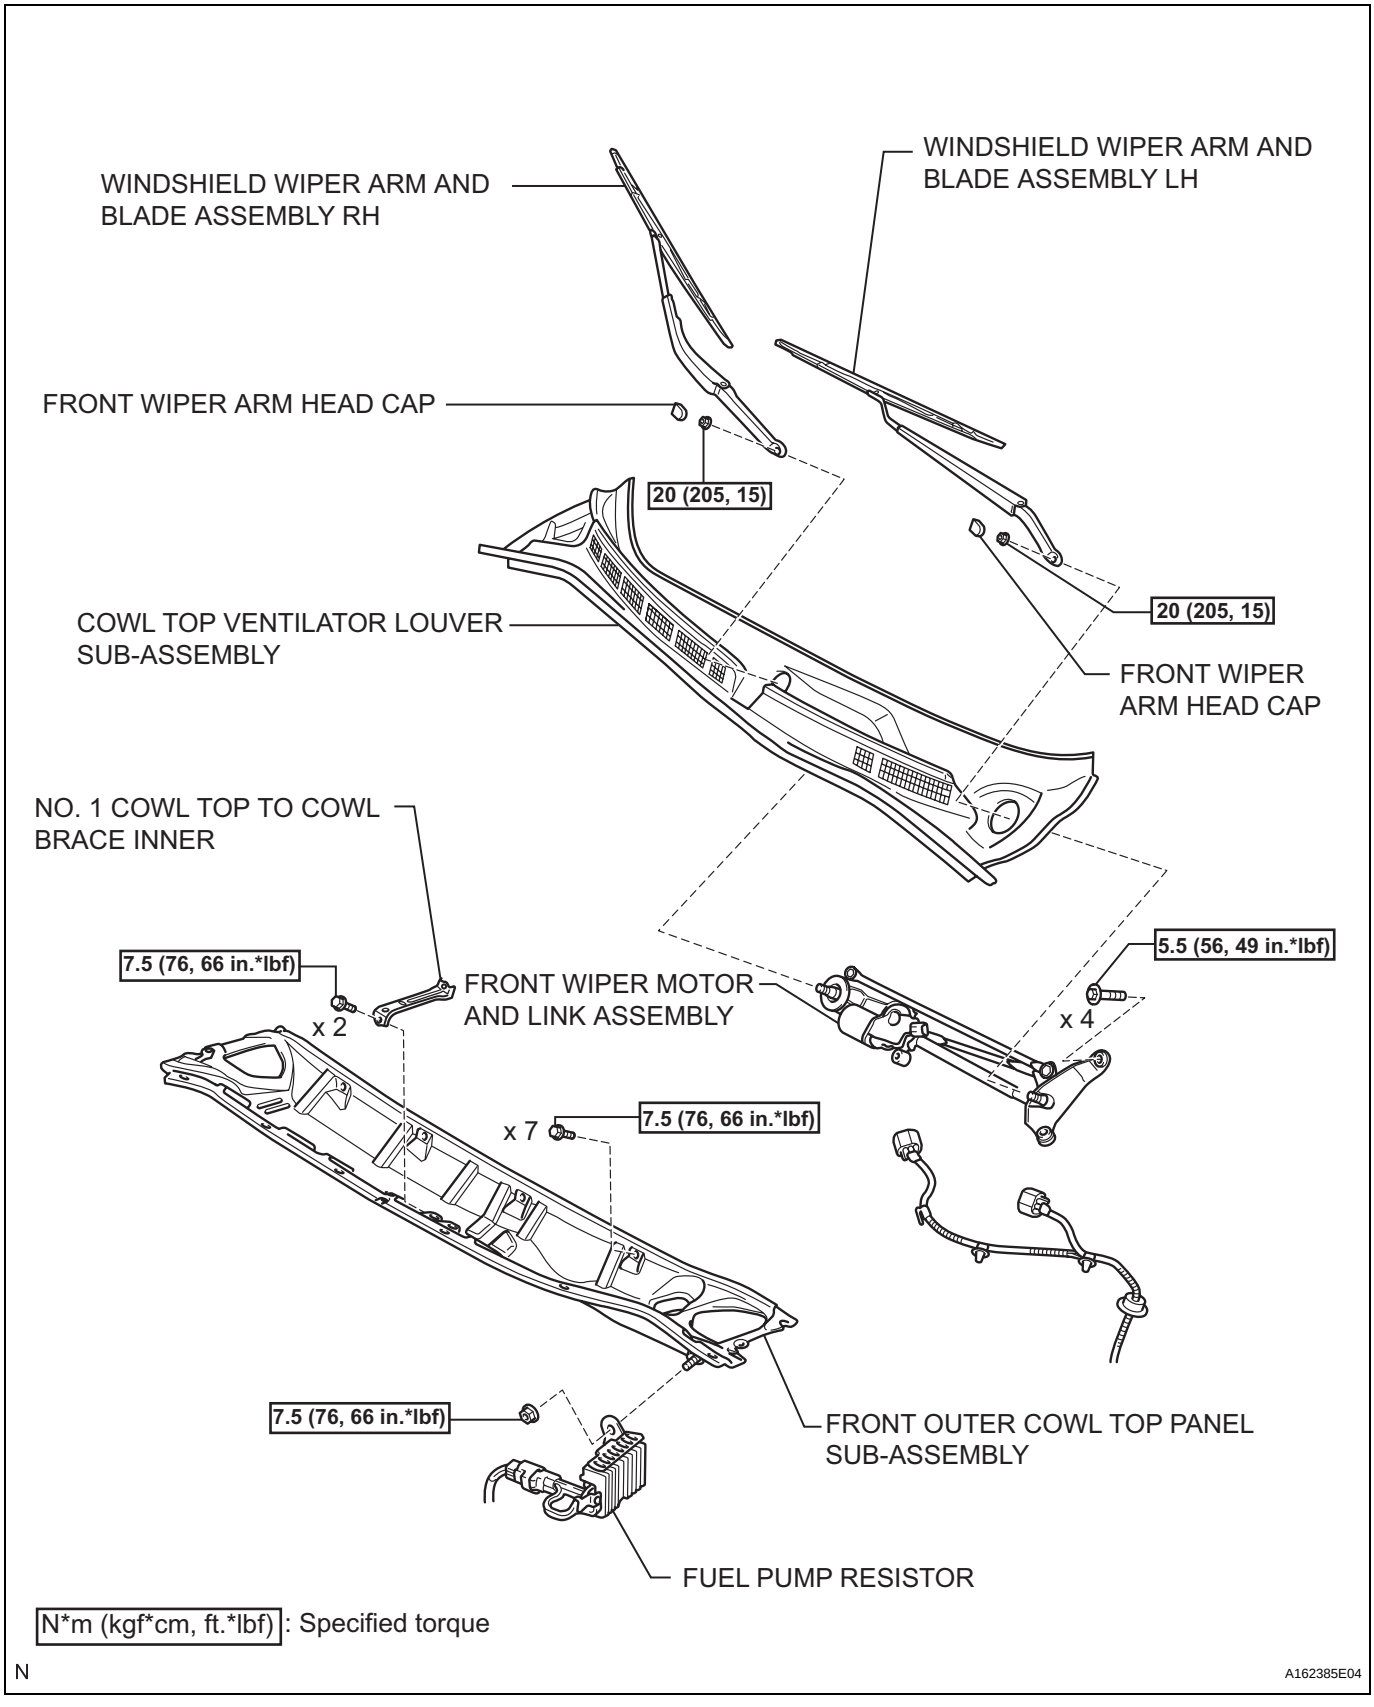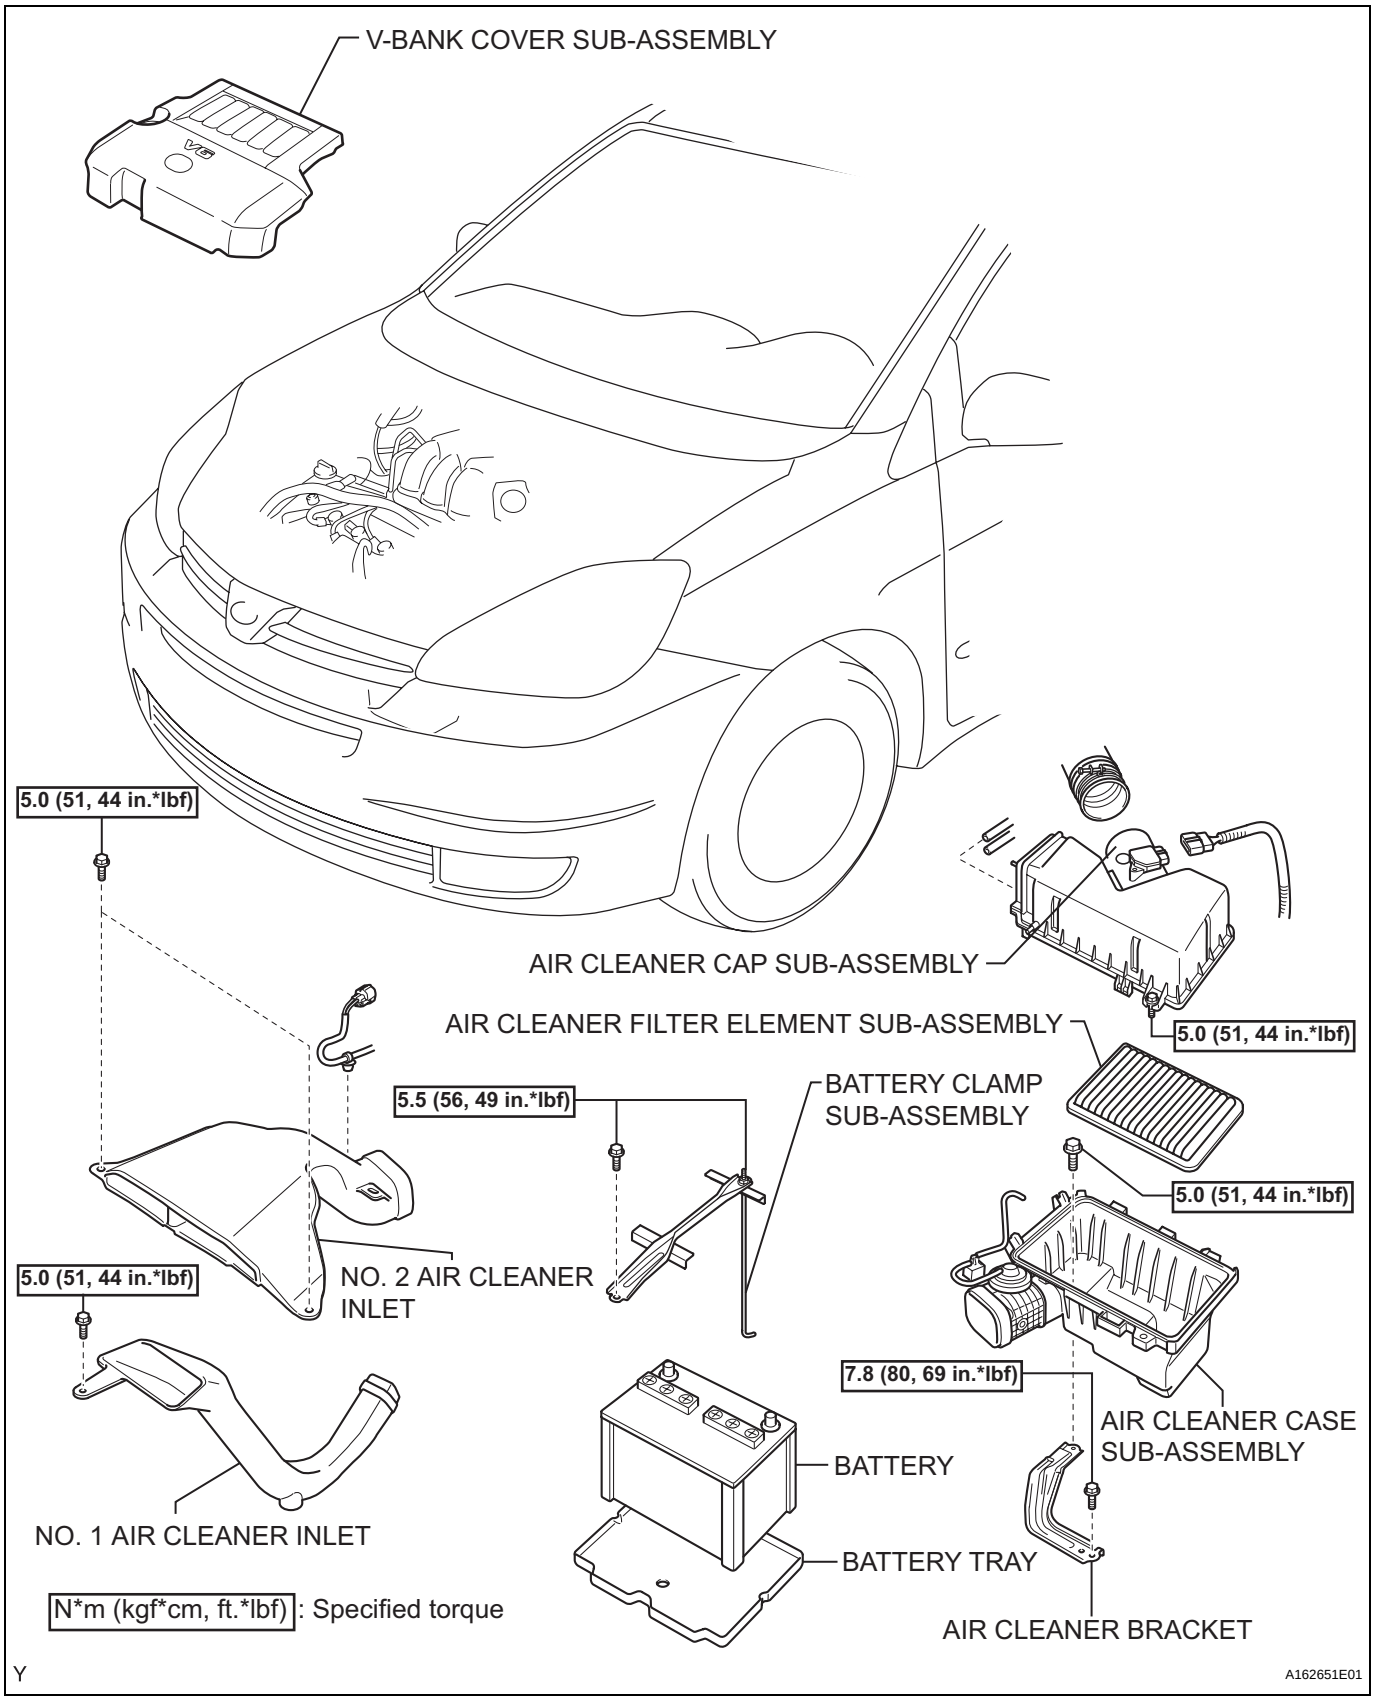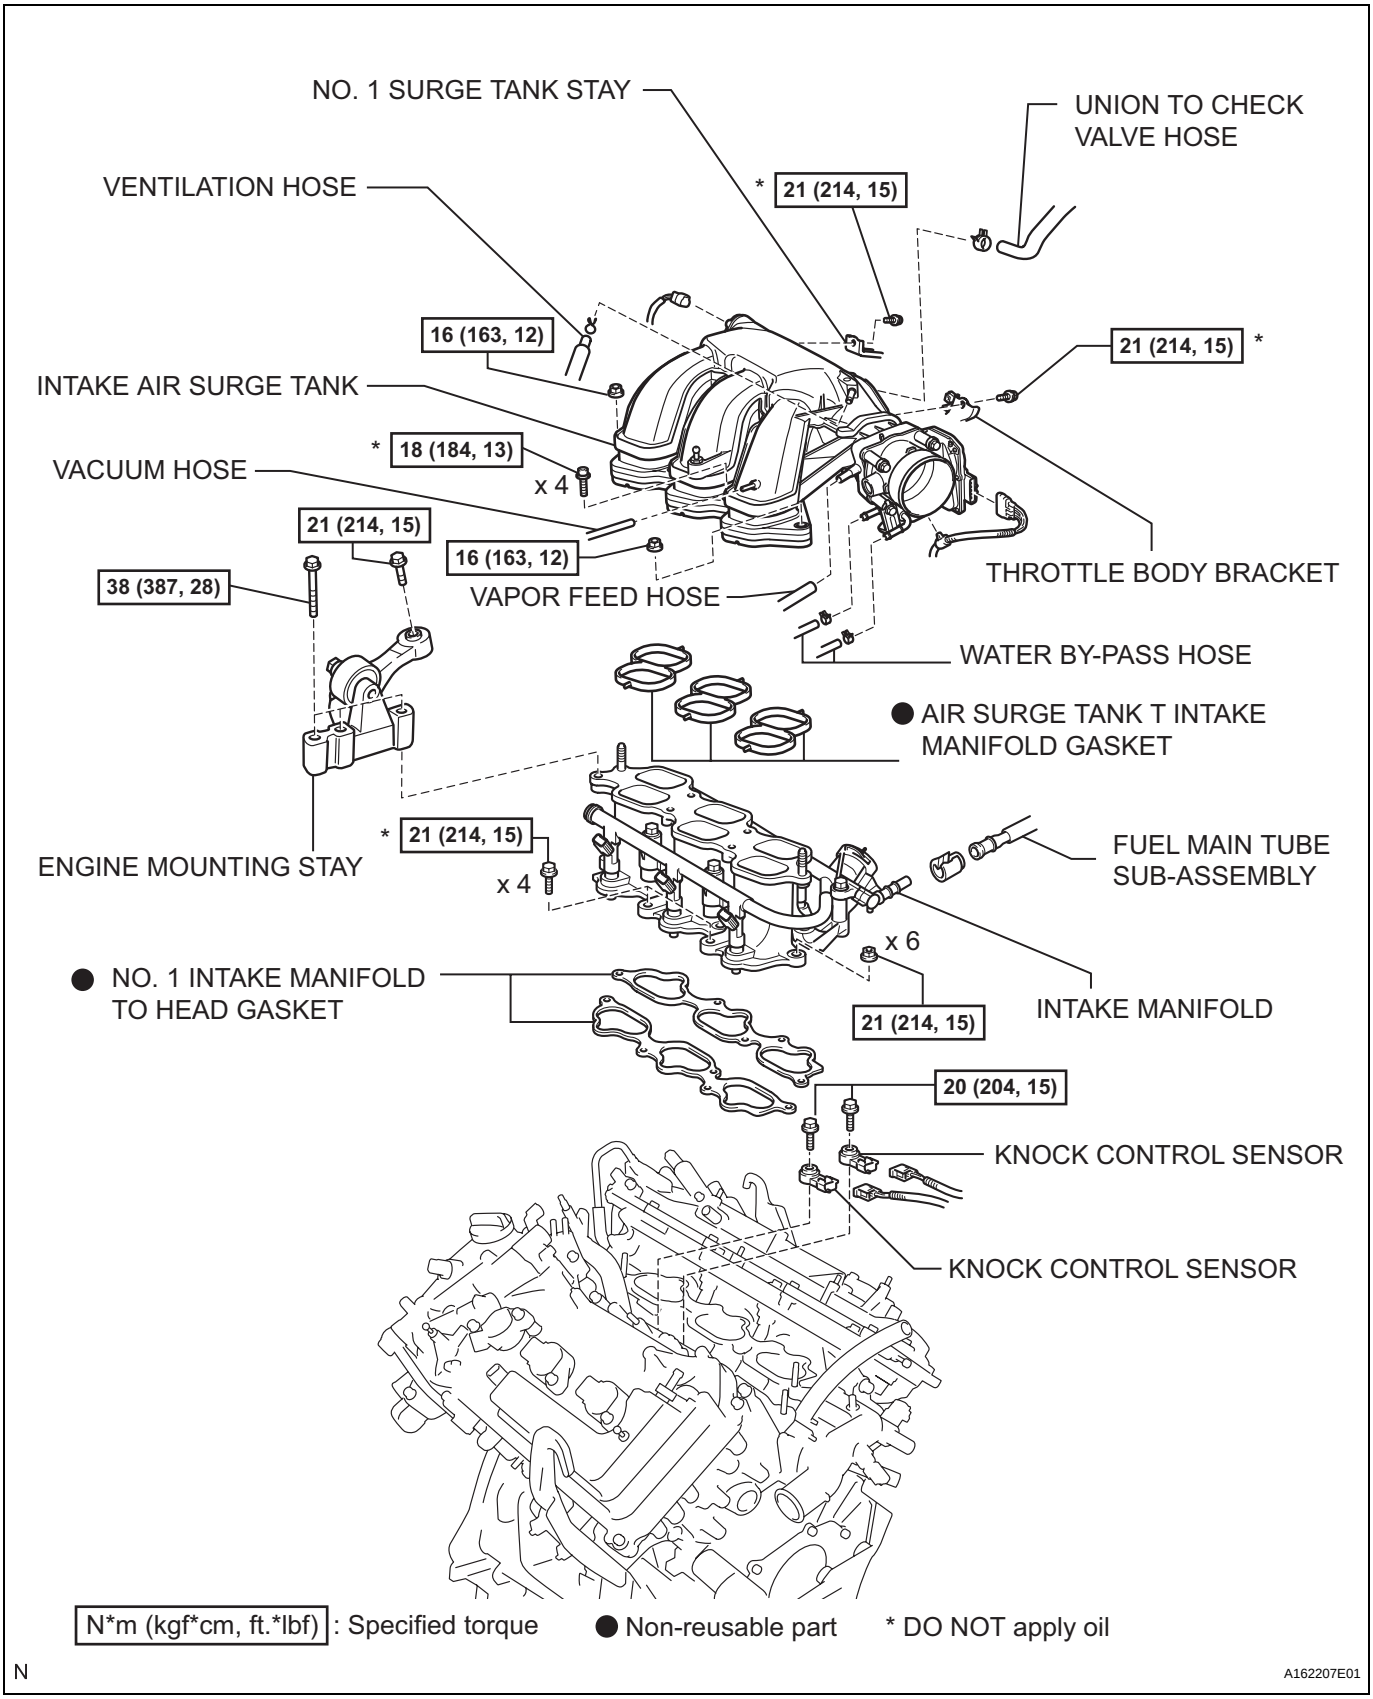


V-BANK COVER SUB-ASSEMBLY
5.0 (51, 44 in.*lbf)
AIR CLEANER CAP SUB-ASSEMBLY
AIR CLEANER FILTER ELEMENT SUB-ASSEMBLY
5.0 (51, 44 in.*lbf)
5.5 (56, 49 in.*lbf)
BATTERY CLAMP SUB-ASSEMBLY
5.0 (51, 44 in.*lbf)
5.0 (51, 44 in.*lbf)
NO. 2 AIR CLEANER INLET
7.8 (80, 69 in.*lbf)
AIR CLEANER CASE SUB-ASSEMBLY
BATTERY
BATTERY TRAY
NO. 1 AIR CLEANER INLET
AIR CLEANER BRACKET
N*m (kgf*cm, ft.*lbf): Specified torque
Y
A162651E01


NO. 1 SURGE TANK STAY
UNION TO CHECK VALVE HOSE
VENTILATION HOSE
* 21 (214, 15)
16 (163, 12)
21 (214, 15) *
INTAKE AIR SURGE TANK
* 18 (184, 13)
x 4
VACUUM HOSE
21 (214, 15)
16 (163, 12)
38 (387, 28)
VAPOR FEED HOSE
THROTTLE BODY BRACKET
WATER BY-PASS HOSE
● AIR SURGE TANK T INTAKE MANIFOLD GASKET
* 21 (214, 15)
x 4
ENGINE MOUNTING STAY
FUEL MAIN TUBE SUB-ASSEMBLY
x 6
● NO. 1 INTAKE MANIFOLD TO HEAD GASKET
21 (214, 15)
INTAKE MANIFOLD
20 (204, 15)
KNOCK CONTROL SENSOR
KNOCK CONTROL SENSOR
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
* DO NOT apply oil
N
A162207E01