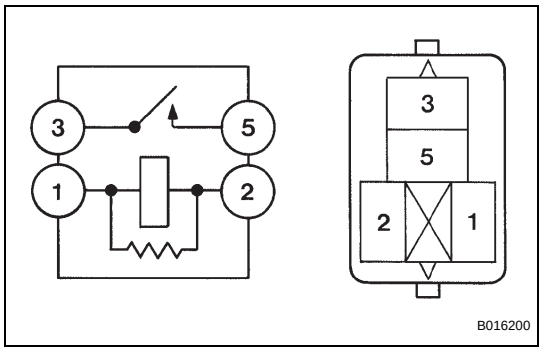


AIR FUEL RATIO SENSOR RELAY

INSPECTION

1. INSPECT AIR FUEL RATIO SENSOR RELAY

(a) Using an ohmmeter, measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (Apply battery voltage between terminals 1 and 2)

If the result is not as specified, replace the relay.

ES