

FUEL INJECTOR

COMPONENTS

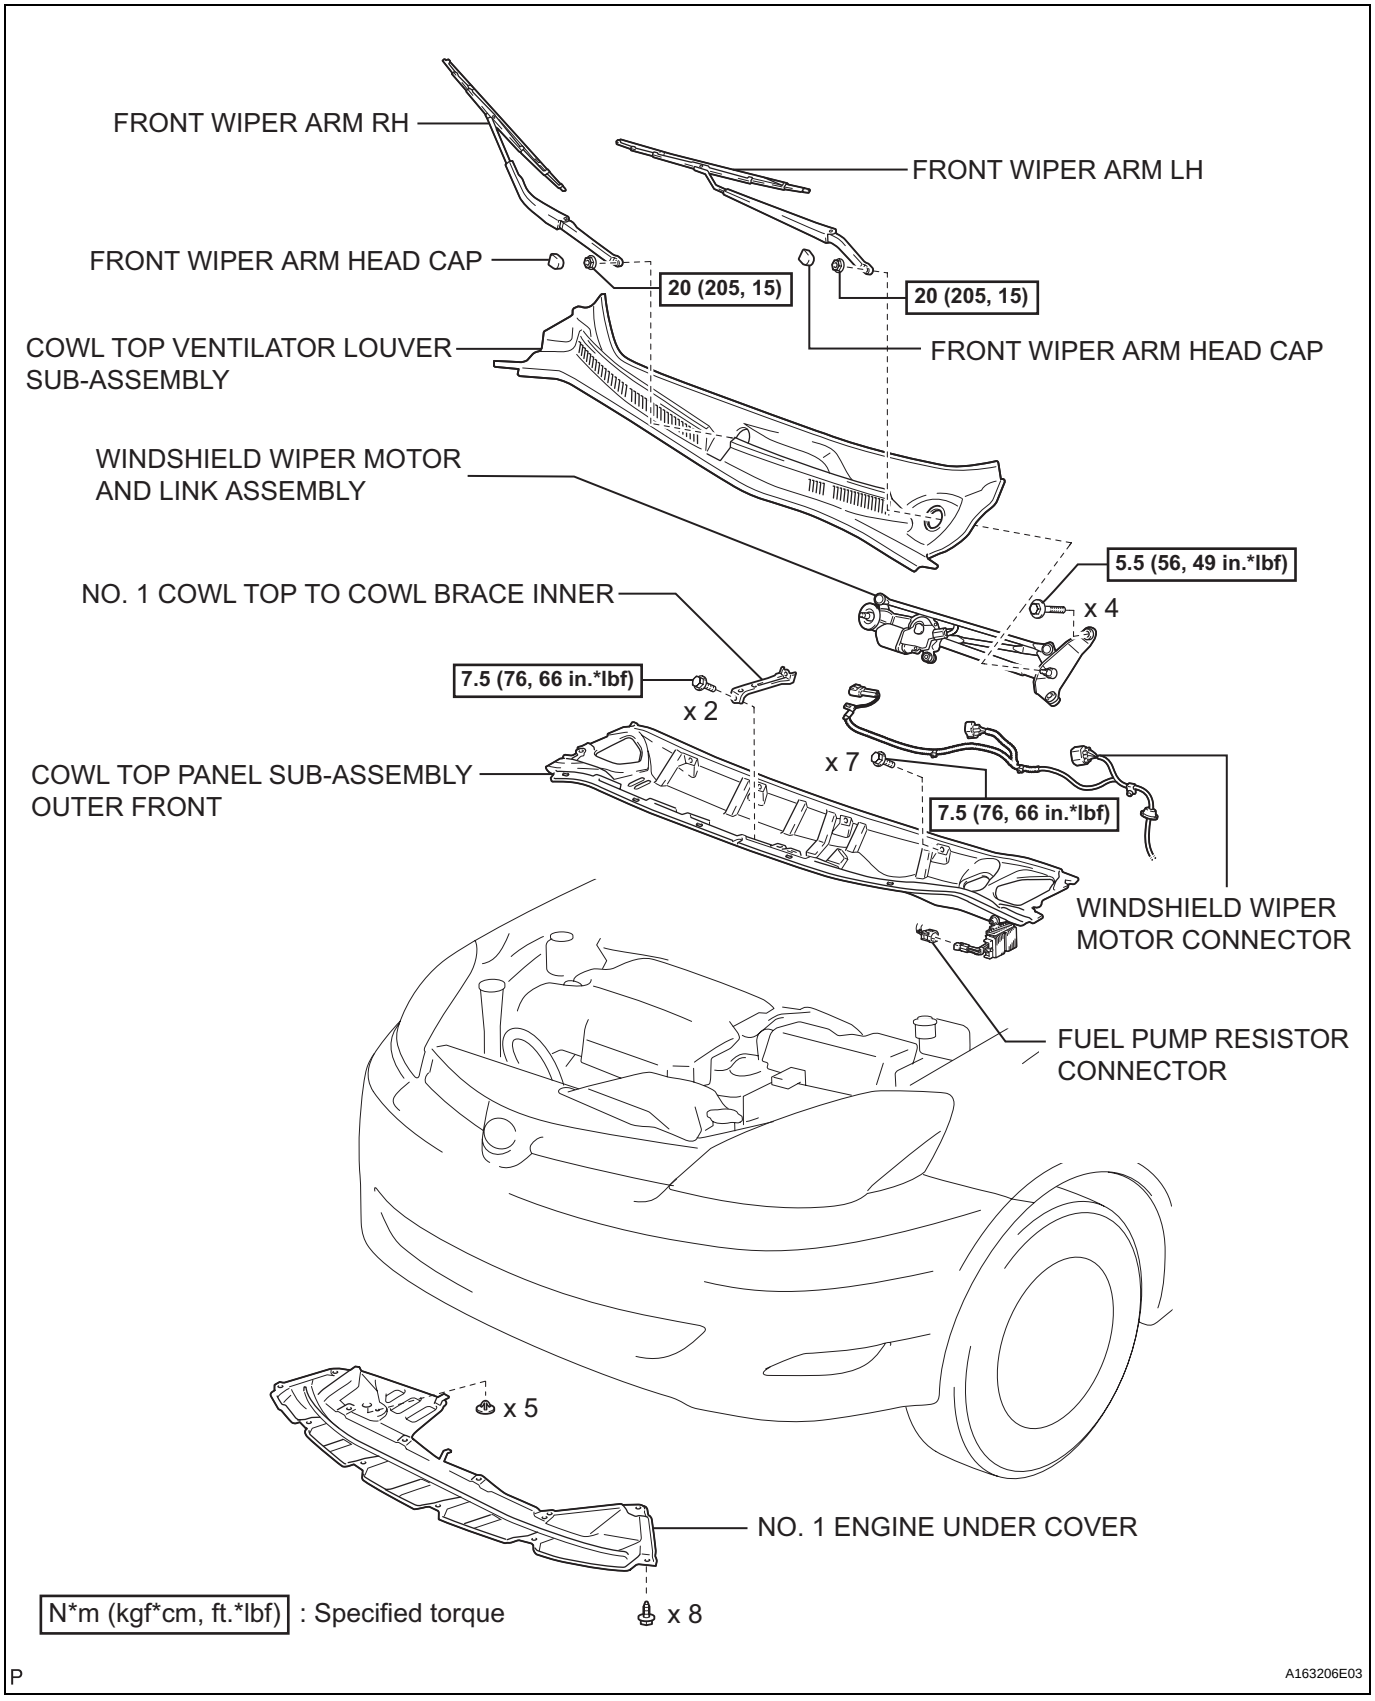

FU


FU

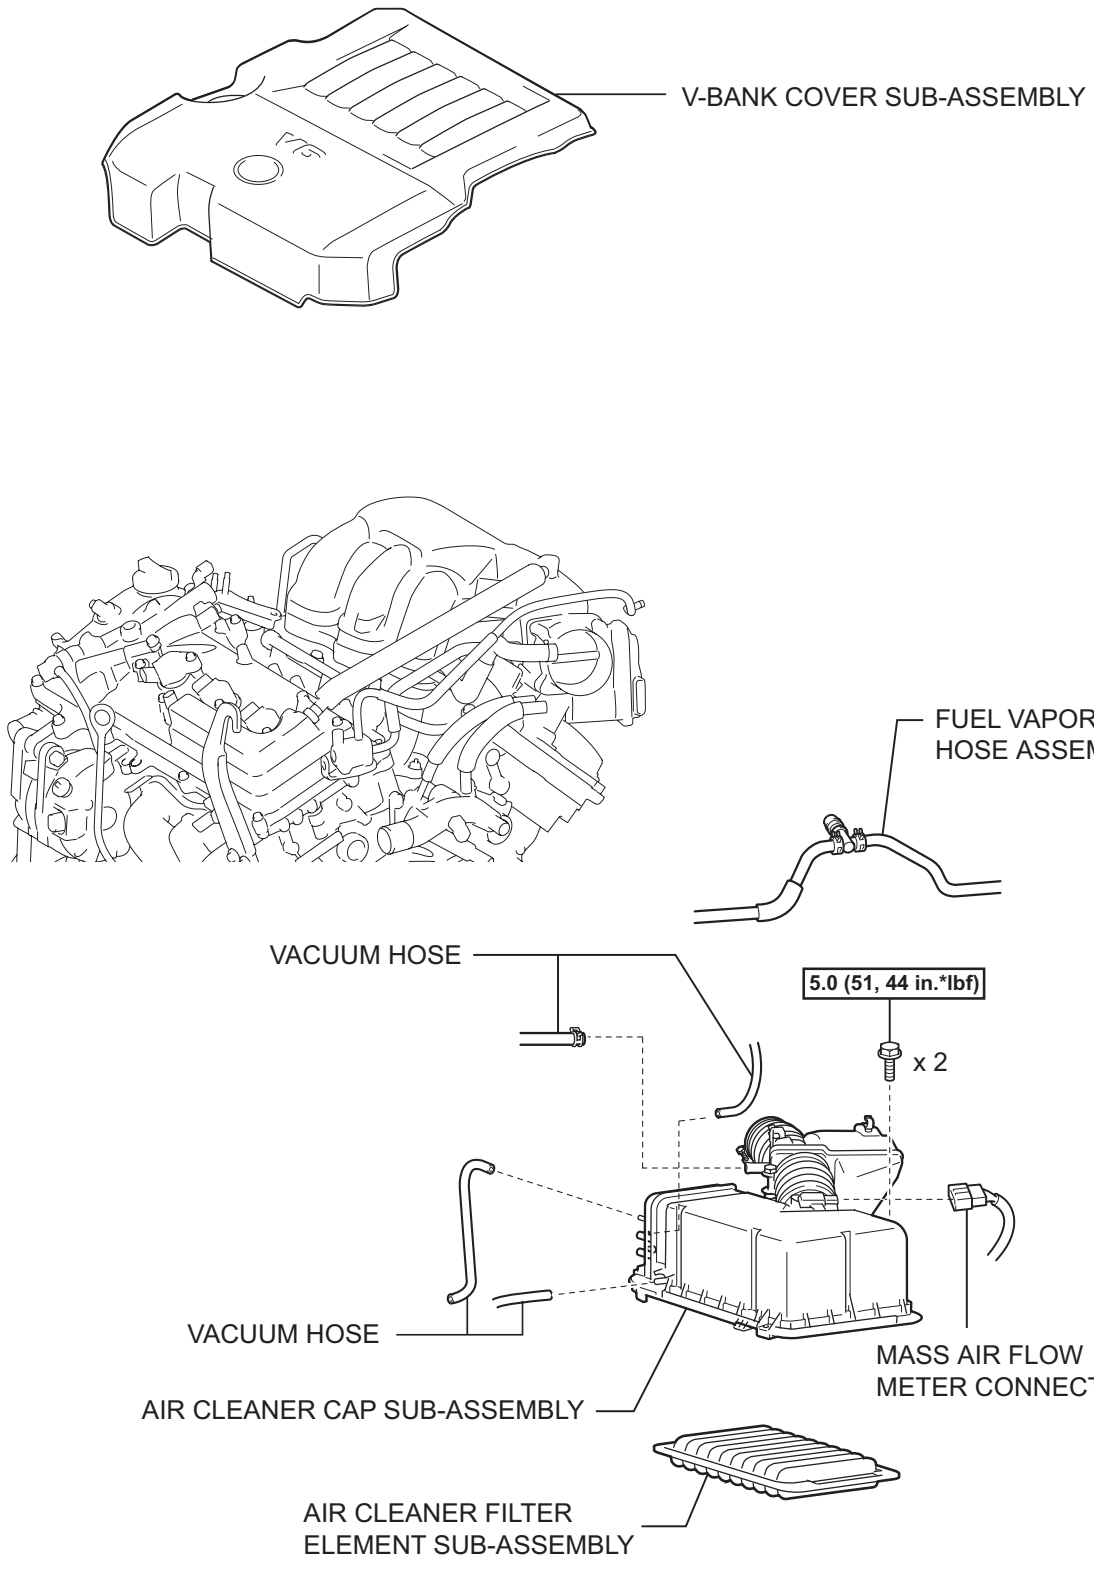

N*m (kgf*cm, ft.*lbf) : Specified torque


P

A163155E01

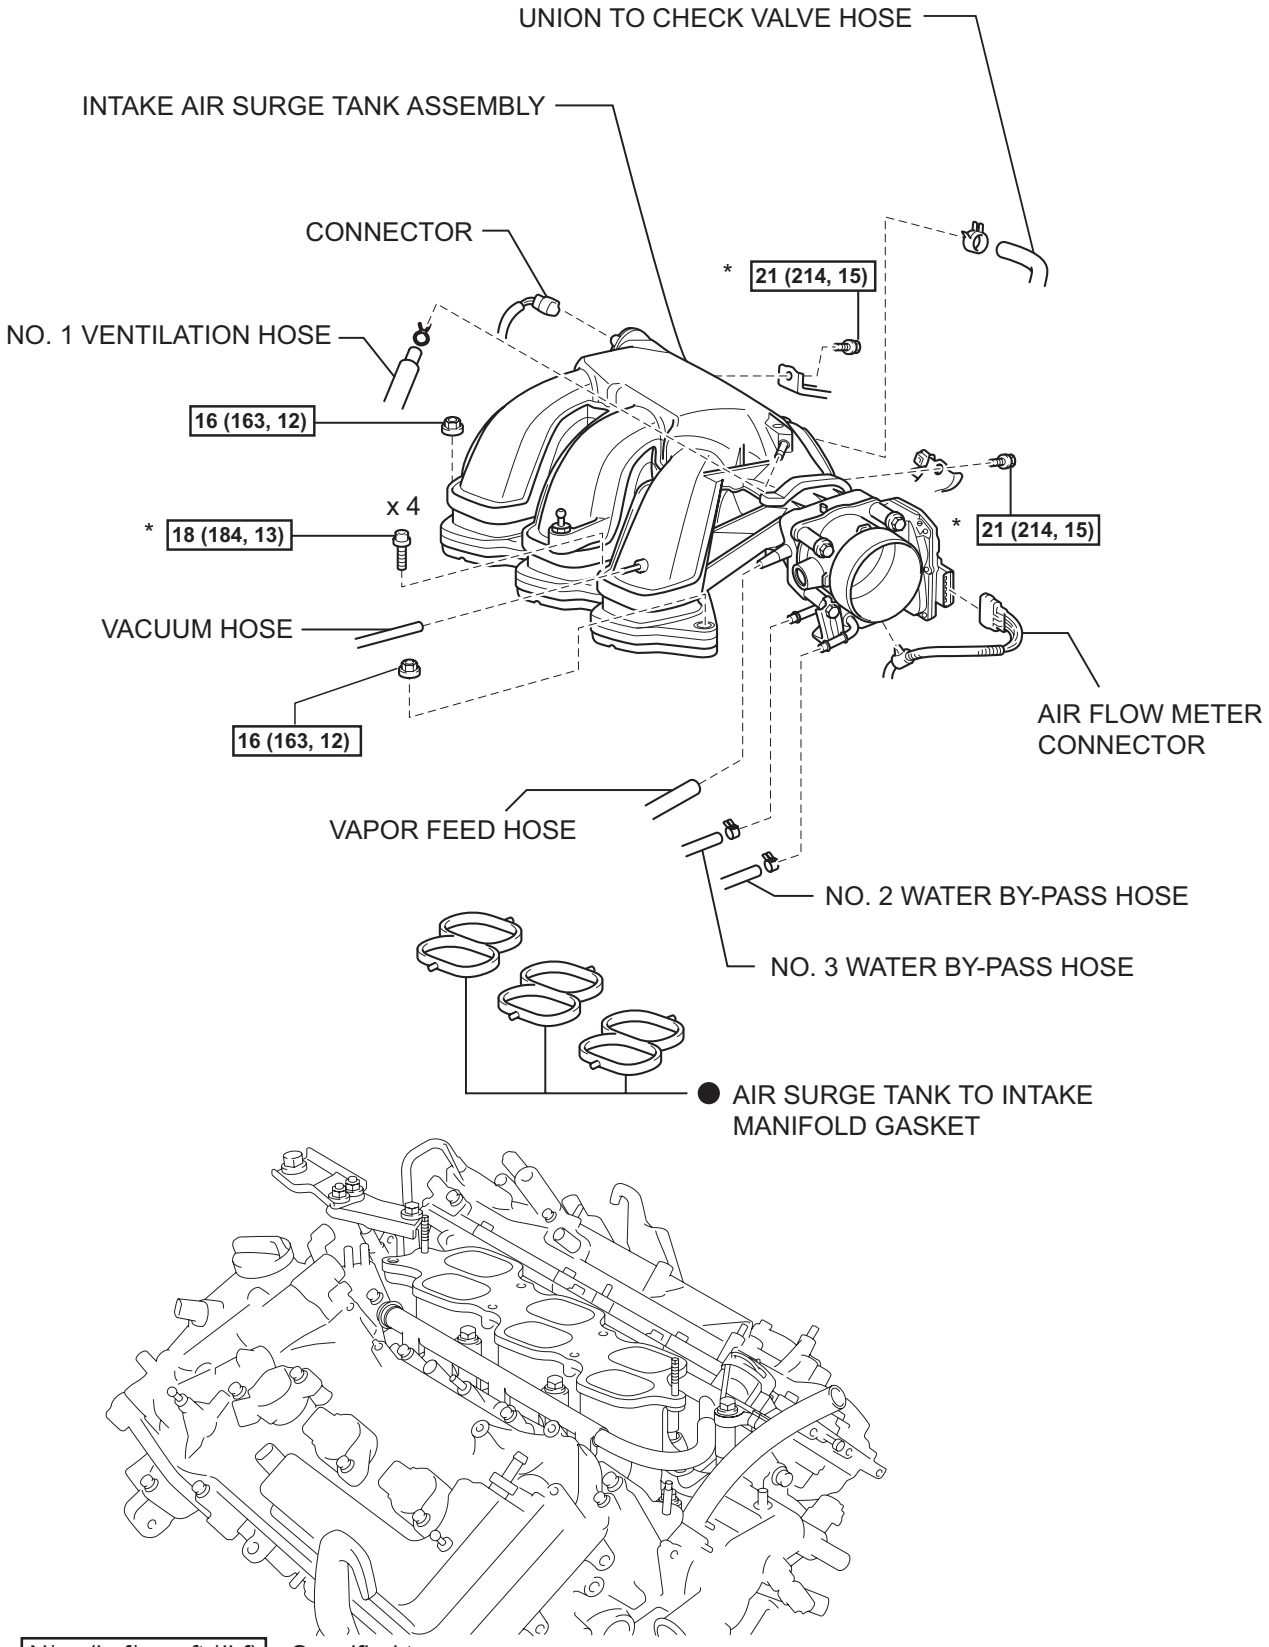
UNION TO CHECK VALVE HOSE
INTAKE AIR SURGE TANK ASSEMBLY
CONNECTOR
* 21 (214, 15)
NO. 1 VENTILATION HOSE
16 (163, 12)
x 4
* 18 (184, 13)
* 21 (214, 15)
VACUUM HOSE
16 (163, 12)
AIR FLOW METER CONNECTOR
VAPOR FEED HOSE
NO. 2 WATER BY-PASS HOSE
NO. 3 WATER BY-PASS HOSE
● AIR SURGE TANK TO INTAKE MANIFOLD GASKET
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
* DO NOT apply oil
A161998E02

FU

FU

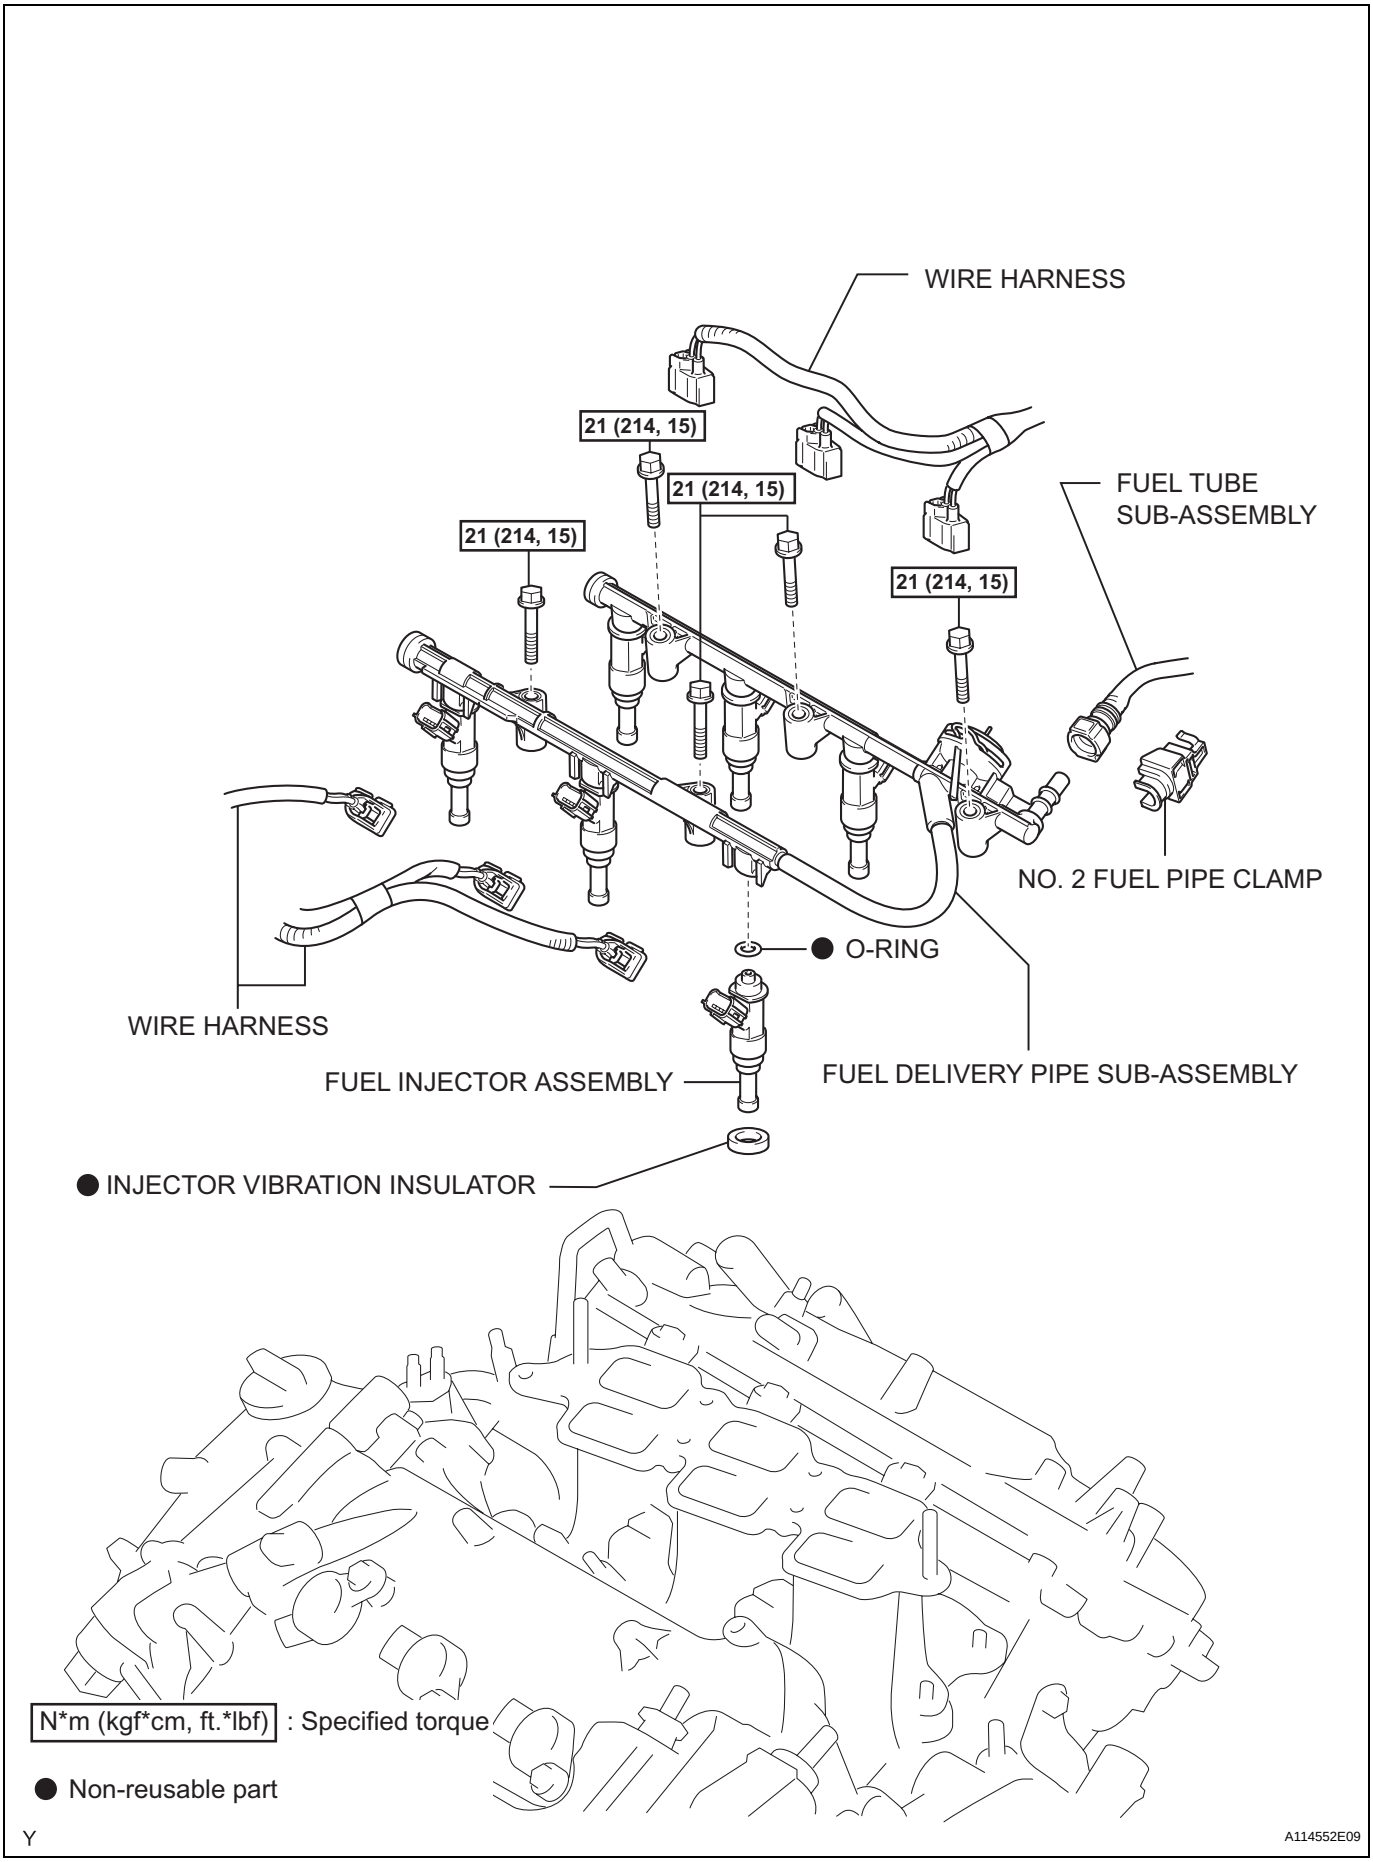
WIRE HARNESS
21 (214, 15)
21 (214, 15)
21 (214, 15)
21 (214, 15)
FUEL TUBE
SUB-ASSEMBLY
NO. 2 FUEL PIPE CLAMP
● O-RING
WIRE HARNESS
FUEL INJECTOR ASSEMBLY
FUEL DELIVERY PIPE SUB-ASSEMBLY
● INJECTOR VIBRATION INSULATOR
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
Y
A114552E09