


FUEL PUMP

COMPONENTS

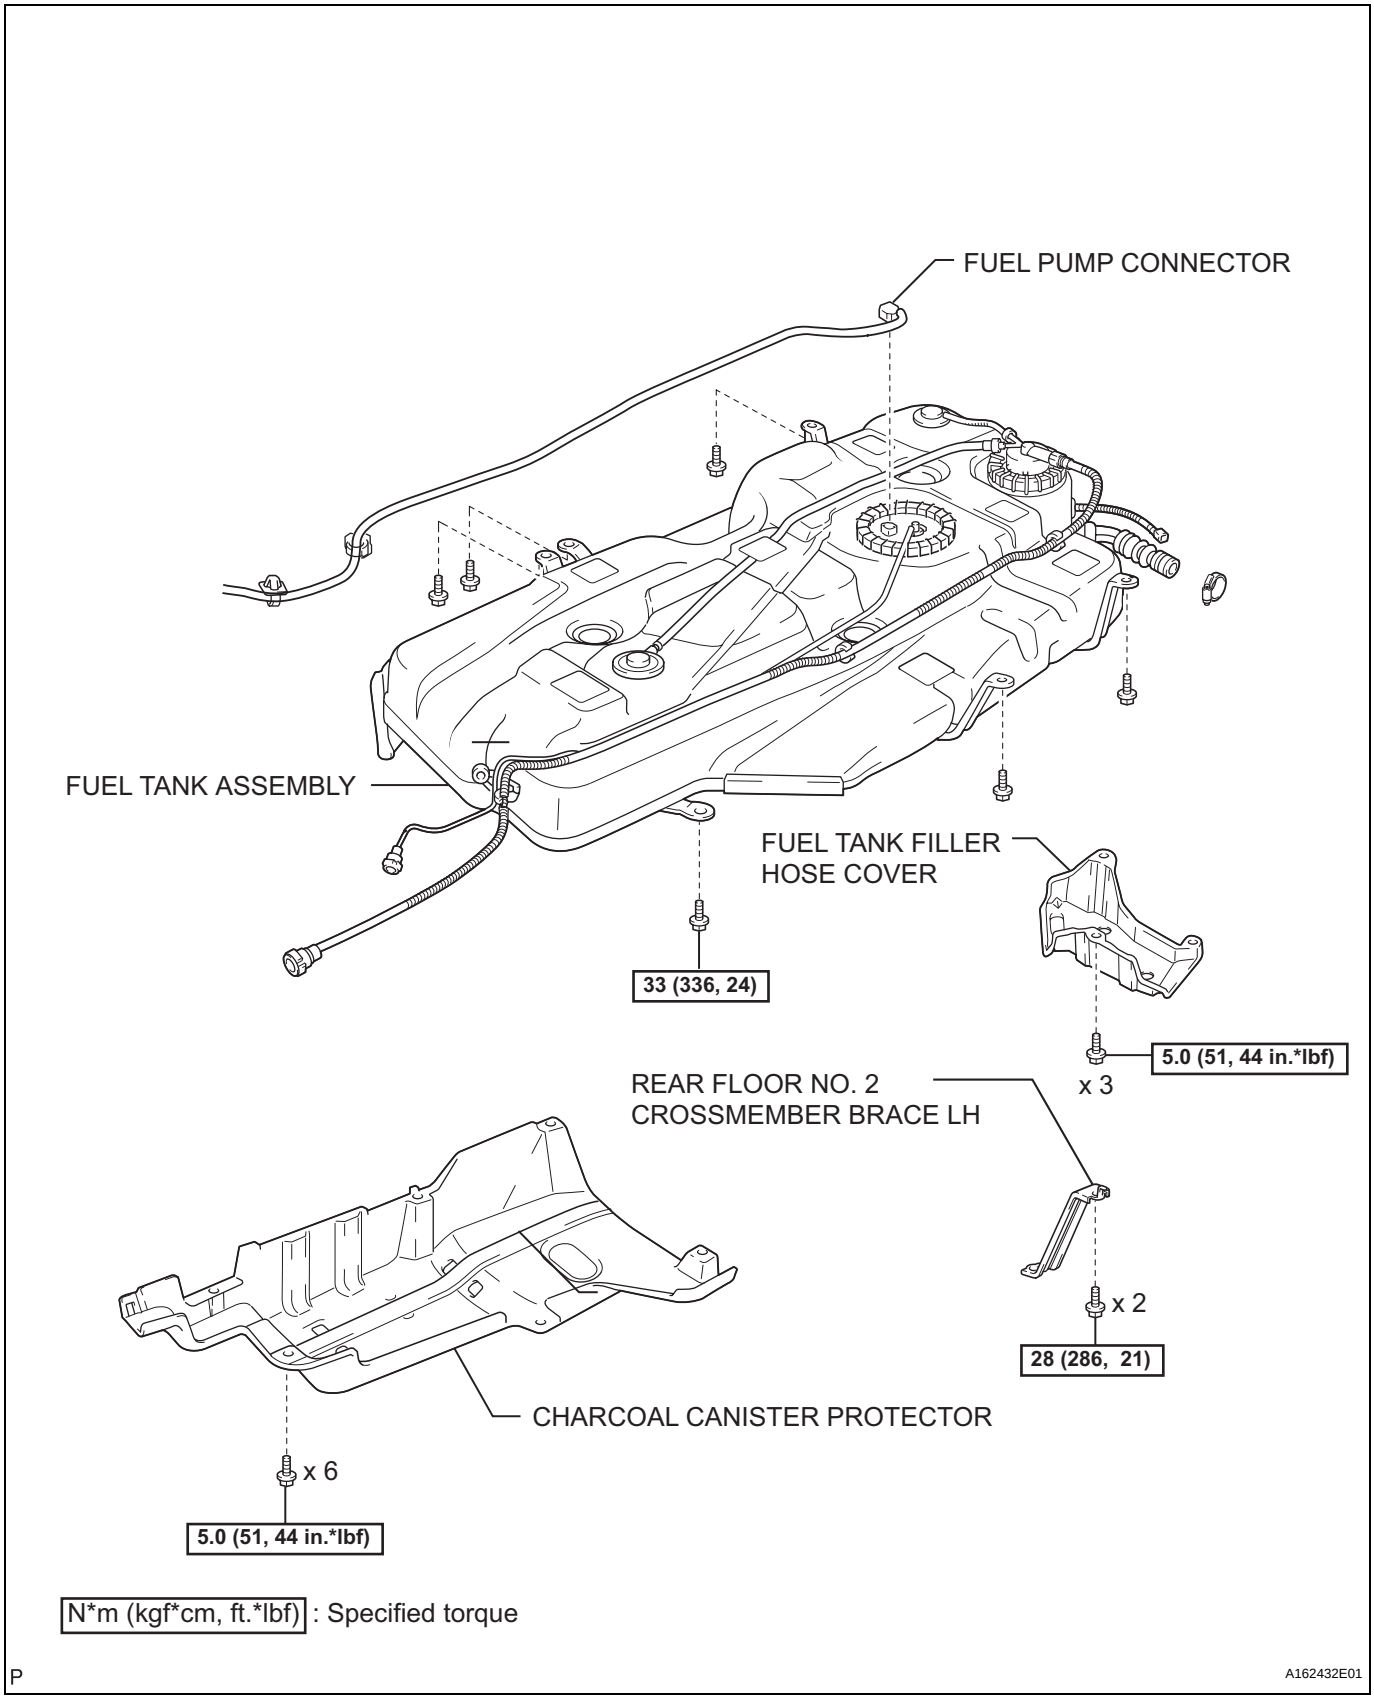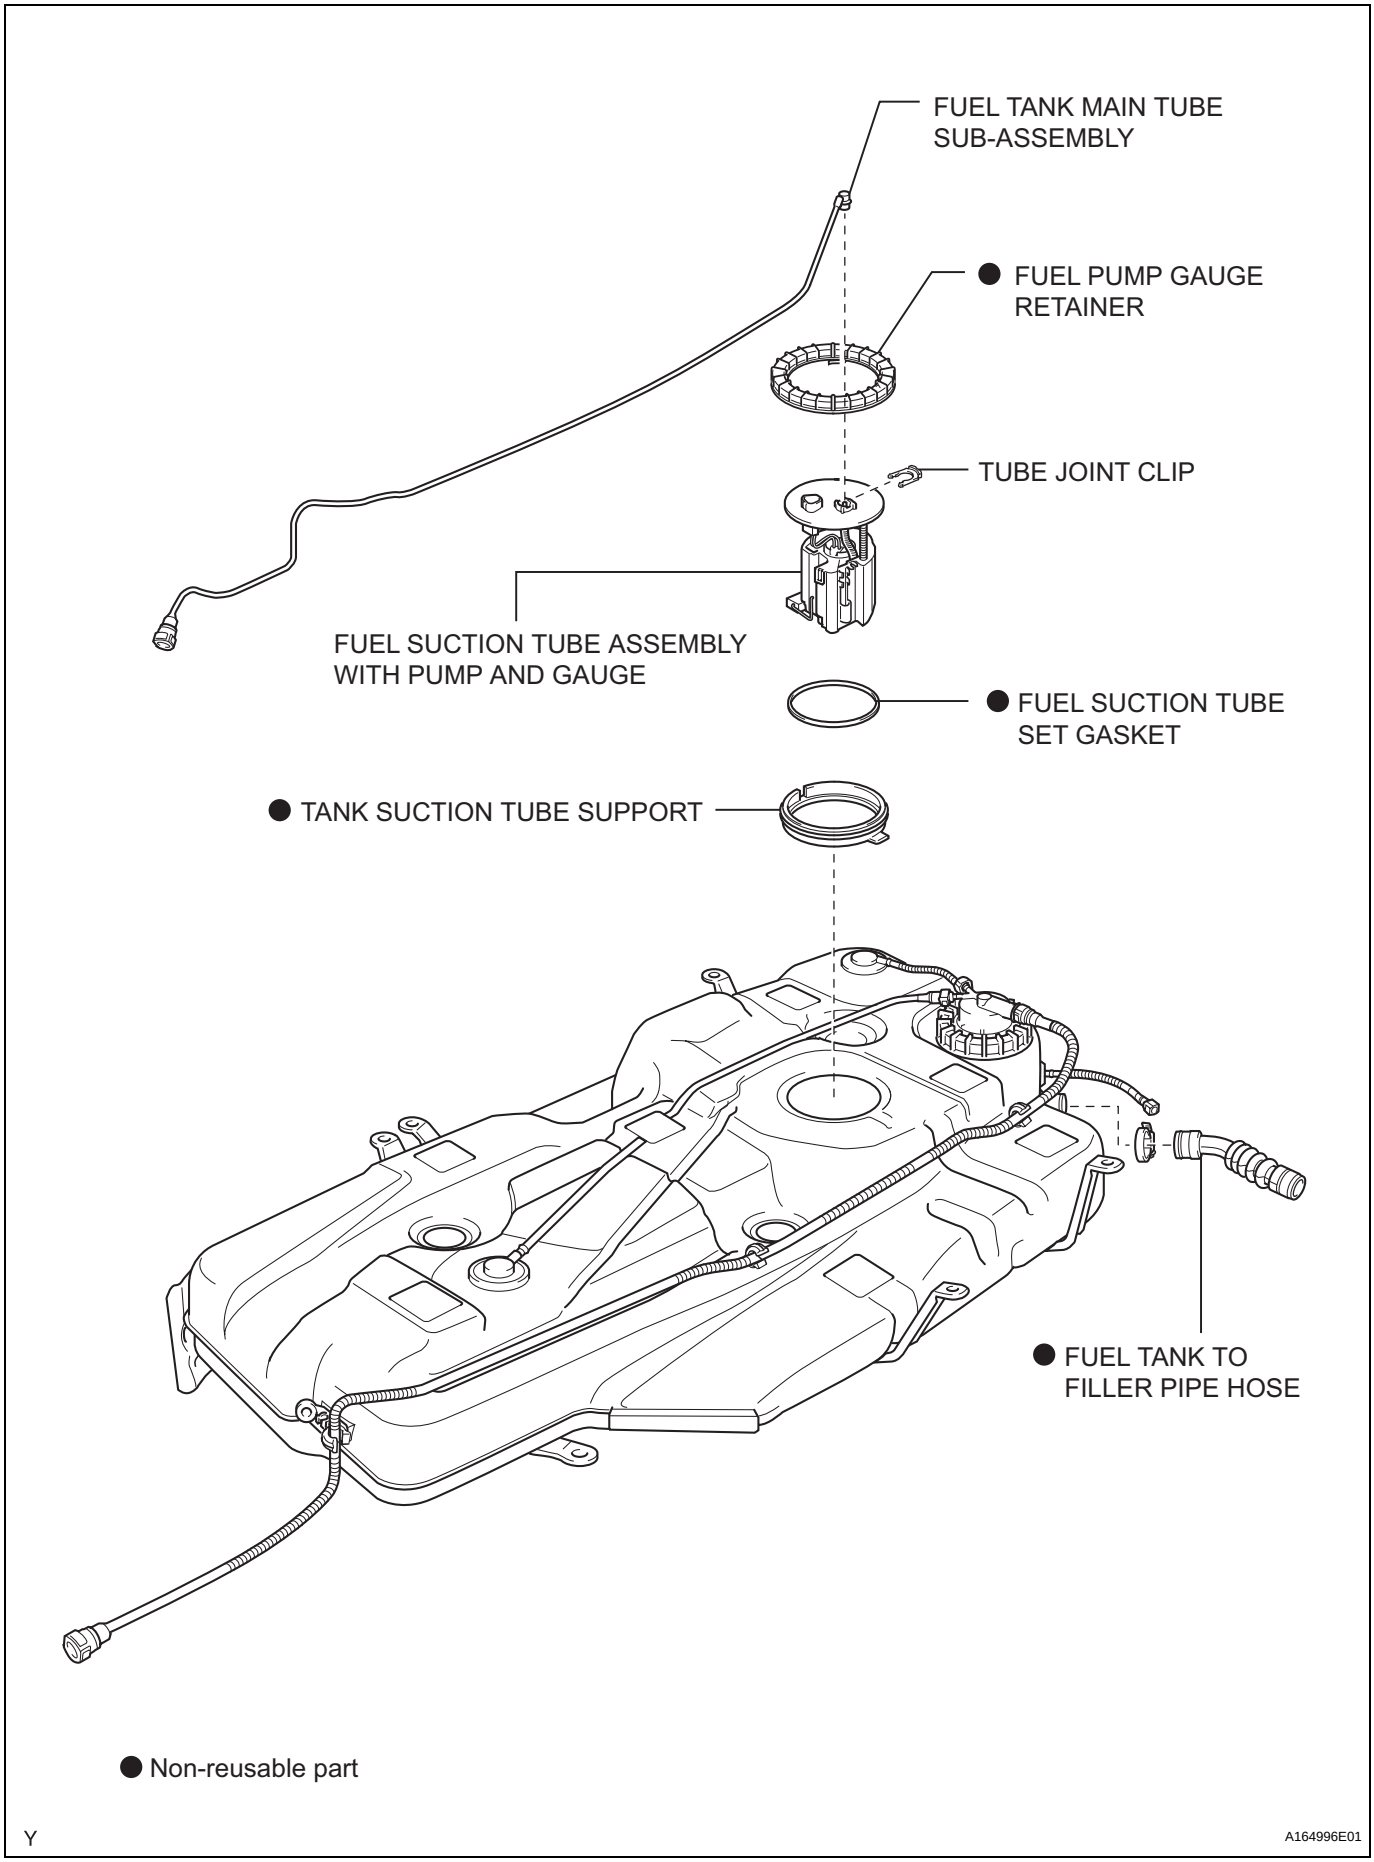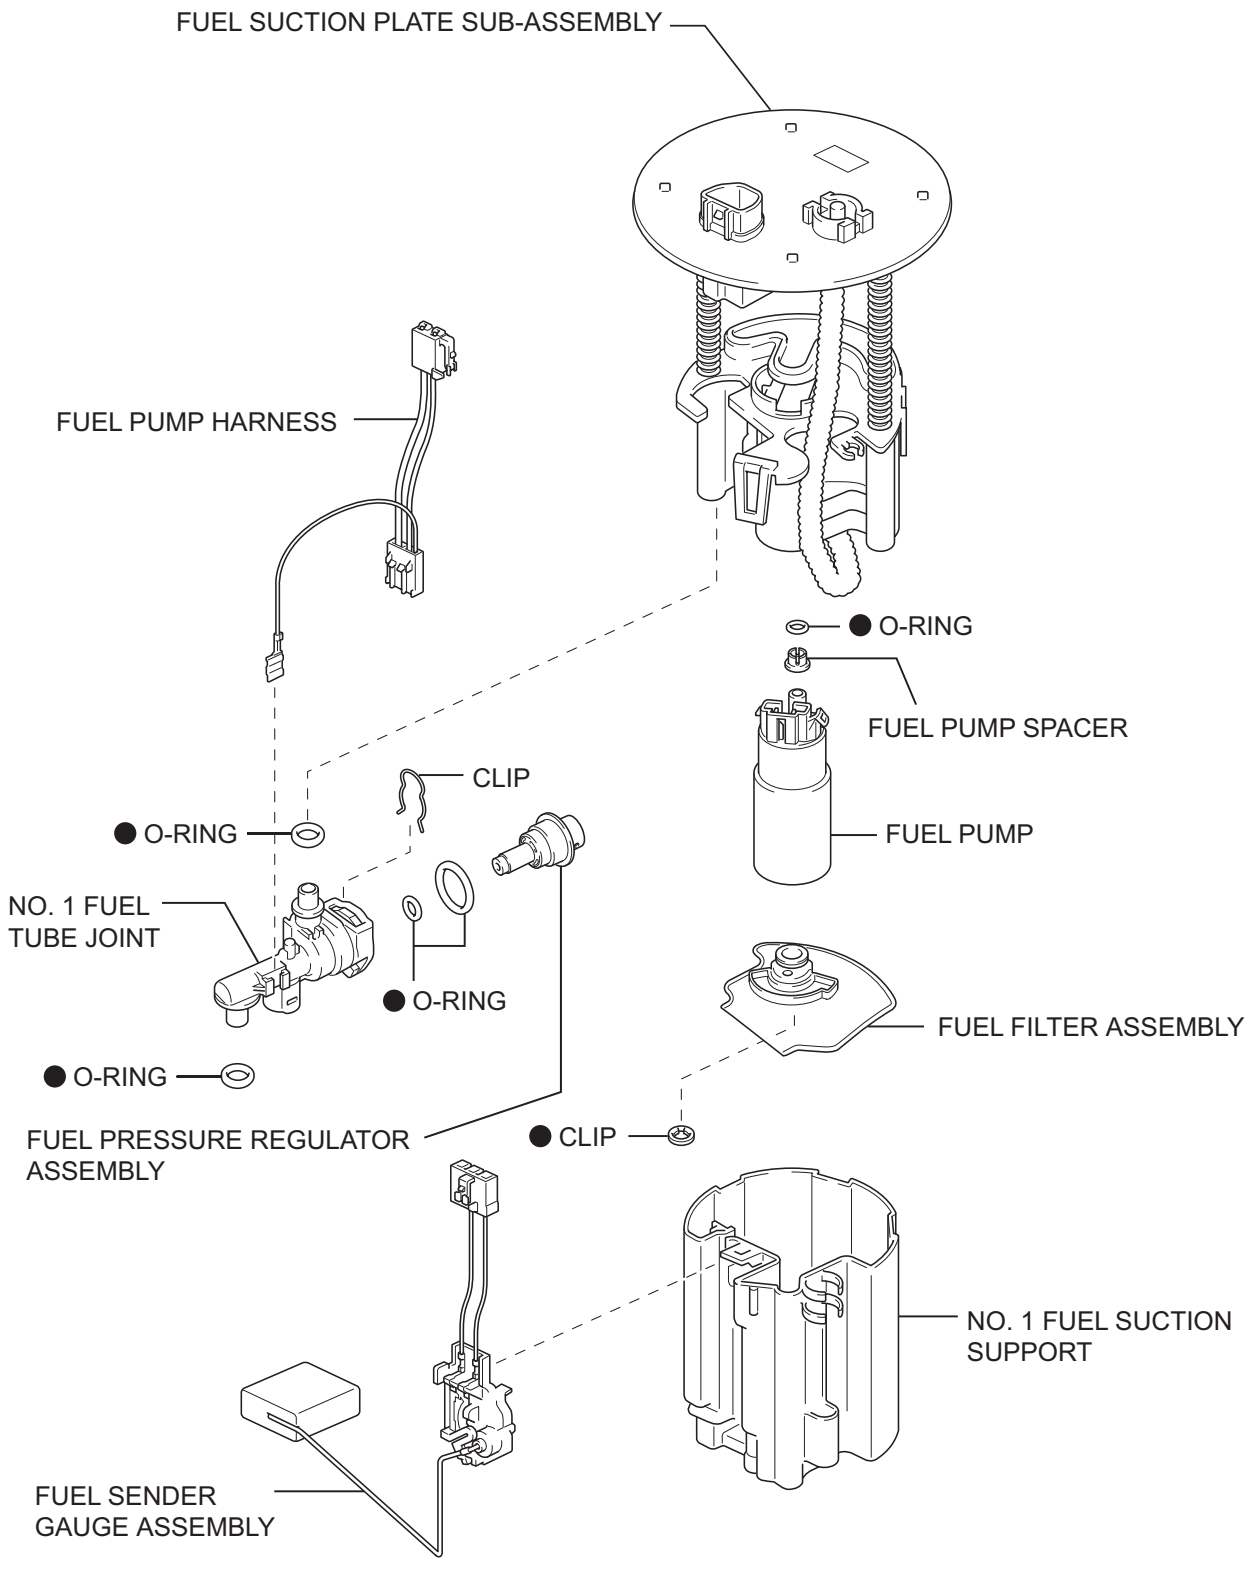


FUEL TANK MAIN TUBE SUB-ASSEMBLY
● FUEL PUMP GAUGE RETAINER
TUBE JOINT CLIP
FUEL SUCTION TUBE ASSEMBLY WITH PUMP AND GAUGE
● FUEL SUCTION TUBE SET GASKET
● TANK SUCTION TUBE SUPPORT
● FUEL TANK TO FILLER PIPE HOSE
● Non-reusable part
Y
A164996E01


FUEL SUCTION PLATE SUB-ASSEMBLY
FUEL PUMP HARNESS
● O-RING
FUEL PUMP SPACER
FUEL PUMP
CLIP
● O-RING
NO. 1 FUEL
TUBE JOINT
● O-RING
● O-RING
FUEL FILTER ASSEMBLY
FUEL PRESSURE REGULATOR
ASSEMBLY
● CLIP
NO. 1 FUEL SUCTION
SUPPORT
FUEL SENDER
GAUGE ASSEMBLY
● Non-reusable part
Y
A164997E01

FU