

FUEL PUMP RESISTOR

COMPONENTS

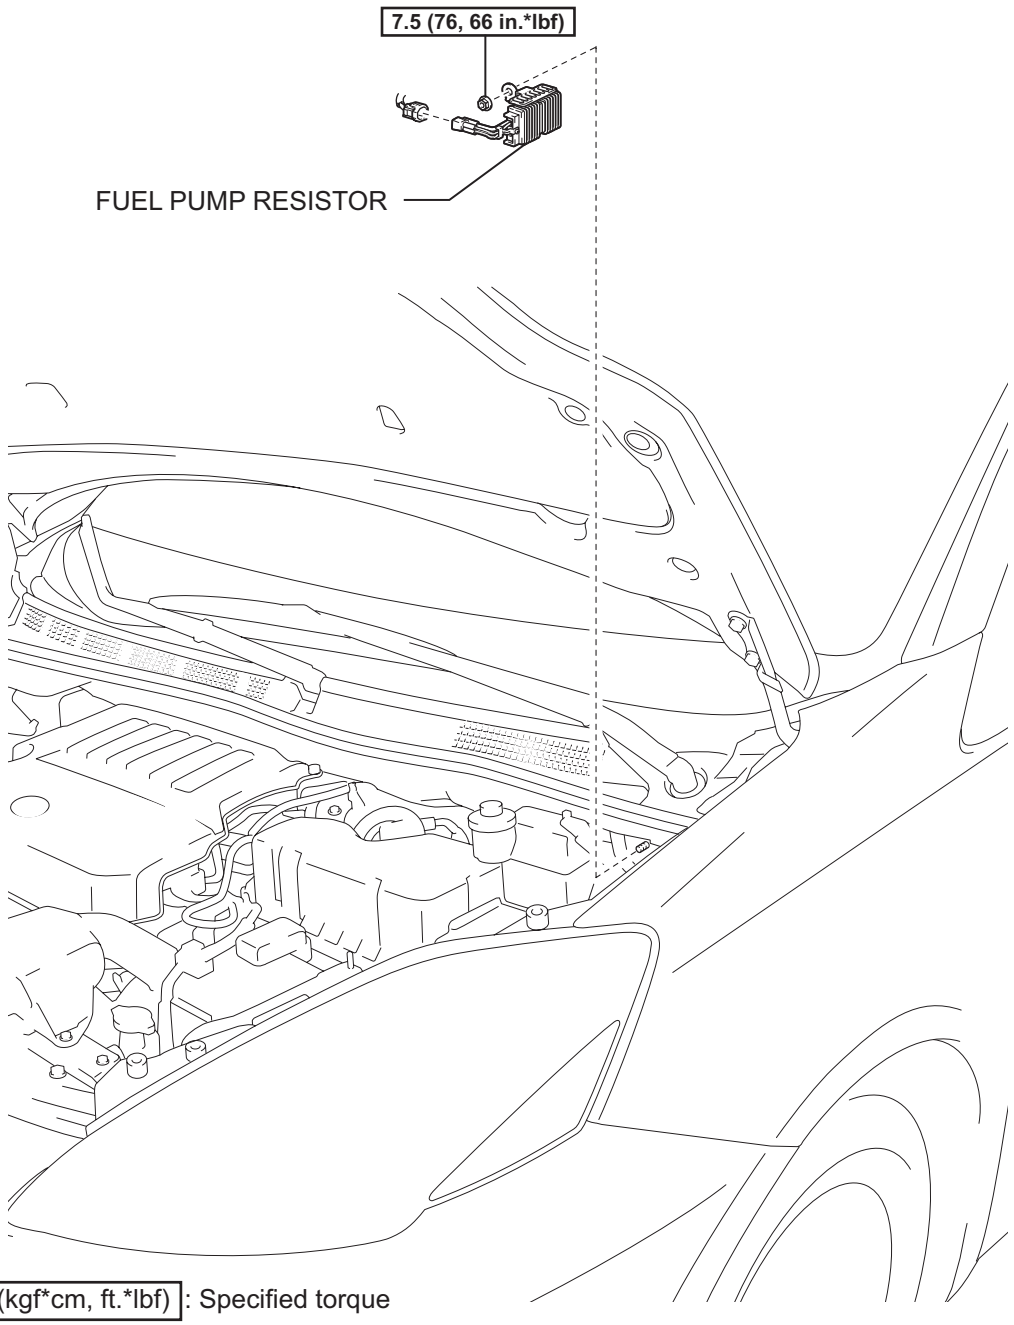

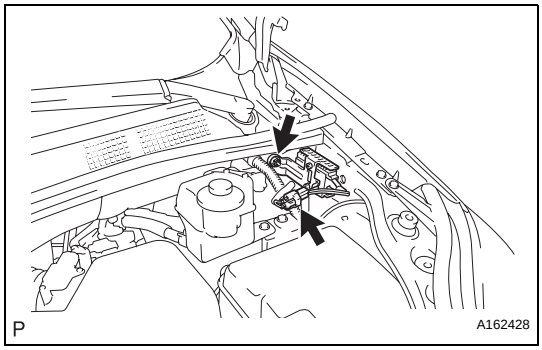


REMOVAL

1. REMOVE FUEL PUMP RESISTOR

(a) Disconnect the connector.

(b) Remove the nut and fuel pump resistor.

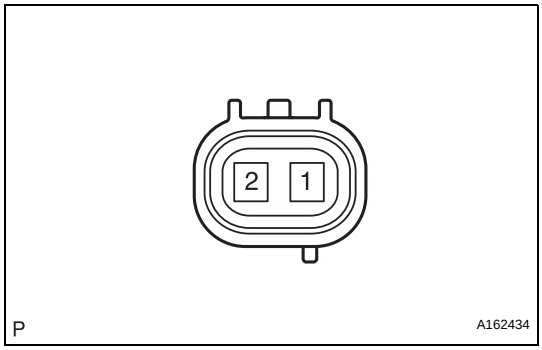

INSPECTION


1. INSPECT FUEL PUMP RESISTOR

(a) Inspect fuel pump resistor.

(1) Using an ohmmeter, measure the resistance between the terminals.

Standard resistance

Tester Connection	Condition	Specified Condition
1 - 2	always	0.30 - 0.34 Ω at 20°C (68°F)

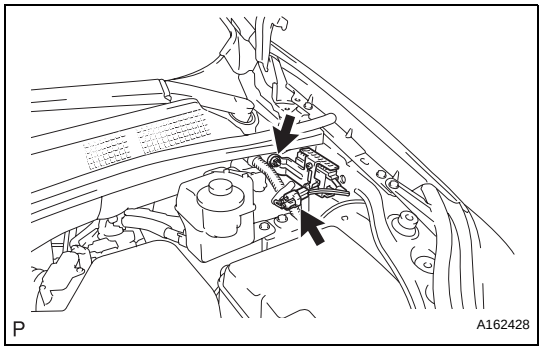

INSTALLATION

1. INSTALL FUEL PUMP RESISTOR

(a) Install the fuel pump resistor with nut.

Torque: 7.5 N*m (76 kgf*cm, 66 in.*lbf)

(b) Connect the connector.

FU