
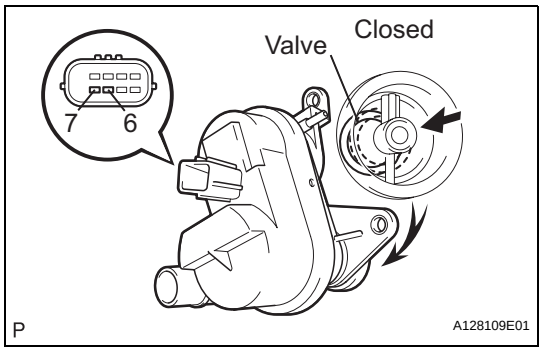


(3) Connect the positive (+) lead to terminal 7 and the negative (-) lead to terminal 6.
(4) Check that the valve is closed.
If the result is not as specified, replace the charcoal canister assembly.
(5) Install the detection pump.

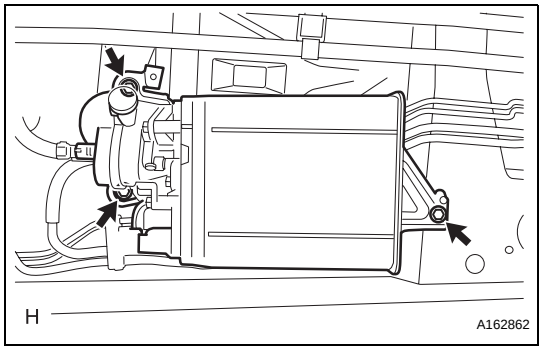

INSTALLATION

1. INSTALL CHARCOAL CANISTER ASSEMBLY

(a) Install the 3 bolts and charcoal canister.
Torque: 29 N*m (296 kgf*cm, 21 ft.*lbf)
(b) Connect the purge line hose to the charcoal canister.
(c) Connect the wire harness clamp.
(d) Connect the vapor pressure sensor connector.
(e) Connect the charcoal canister filter sub-assembly to the charcoal canister.
(f) Connect the fuel tank vent hose to the charcoal canister.

2. INSTALL CHARCOAL CANISTER PROTECTOR

(a) Install the 6 bolts and charcoal canister protector.
Torque: 5.0 N*m (51 kgf*cm, 44 in.*lbf)

EC