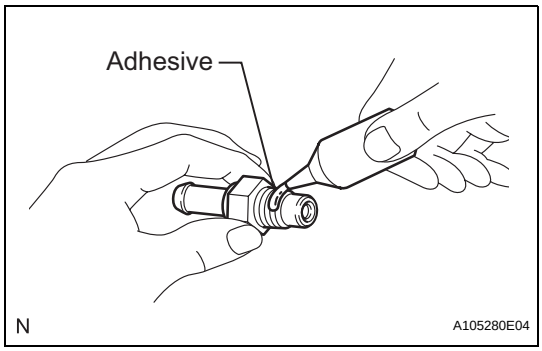



INSTALLATION

1. INSTALL VENTILATION VALVE

(a) Install the ventilation valve.


(1) Apply adhesive to 2 or 3 threads.

Adhesive:
Part No. 08833-00070, Three Bond 1324 or equivalent

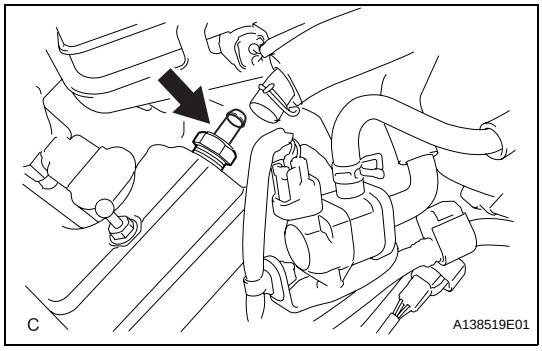

(2) Install the ventilation valve.

Torque: 27 N*m (275 kgf*cm, 20 ft.*lbf)

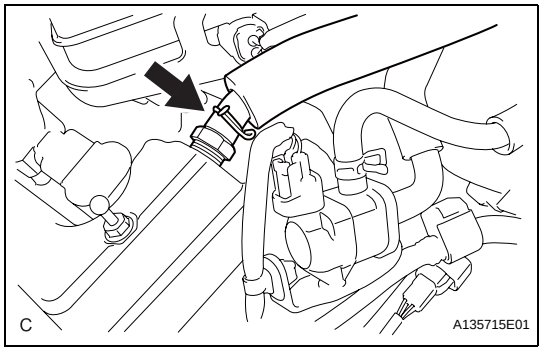

2. CONNECT VENTILATION HOSE

(a) Connect the ventilation hose to the ventilation valve.

3. INSTALL V-BANK COVER SUB-ASSEMBLY (See page EM-63)

EC