
VENTILATION VALVE

COMPONENTS

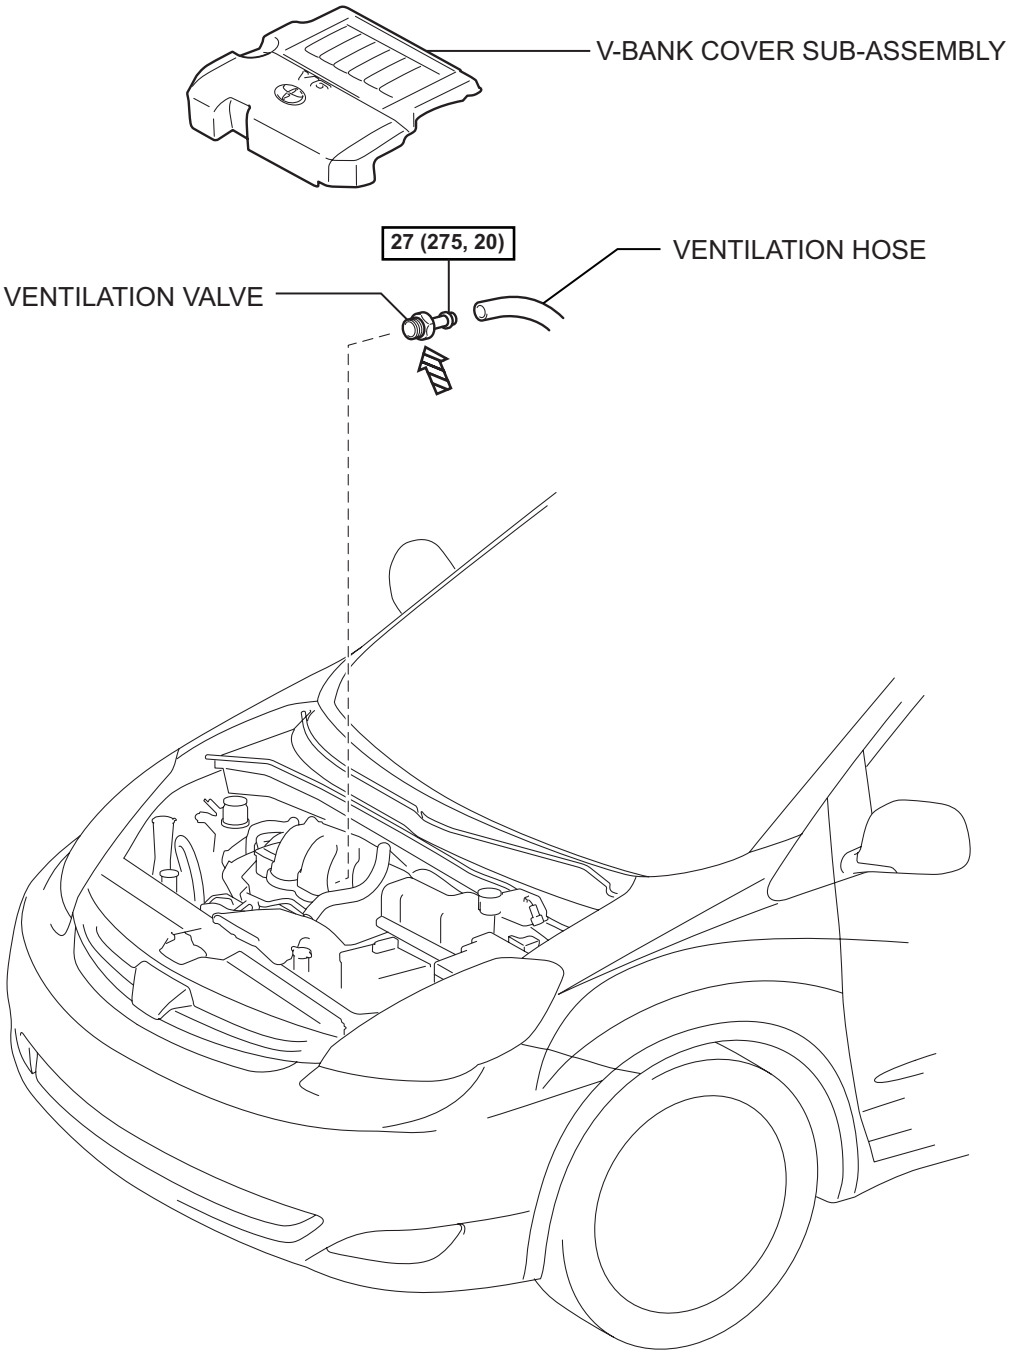

N*m (kgf*cm, ft.*lbf) : Specified torque


Precoated part

A162859E01


REMOVAL

1. **REMOVE V-BANK COVER SUB-ASSEMBLY (See page EM-28)**

2. **DISCONNECT VENTILATION HOSE**
   (a) Disconnect the ventilation hose from the ventilation valve.

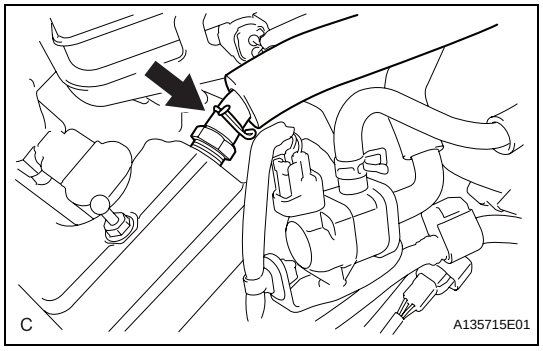


3. **REMOVE VENTILATION VALVE**
   (a) Remove the ventilation valve.

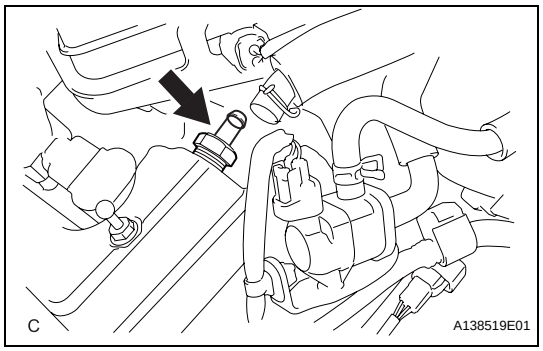


INSPECTION

1. **INSPECT VENTILATION VALVE**
   (a) Install a clean hose to the ventilation valve.
   (b) Check the ventilation valve operation.
      (1) Blow air into the cylinder head side, and check that air passes through easily.
      NOTICE:
      Do not suck air through the valve.
      Petroleum substances inside the valve are hazardous to your health.

      (2) Blow air into the intake manifold side, and check that air passes through with difficulty. If the result is not as specified, replace the ventilation valve.
   (c) Remove the clean hose from the ventilation valve.

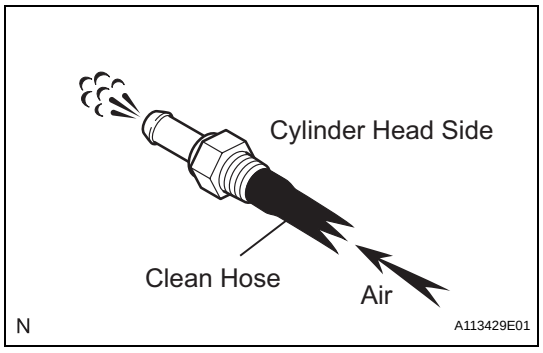

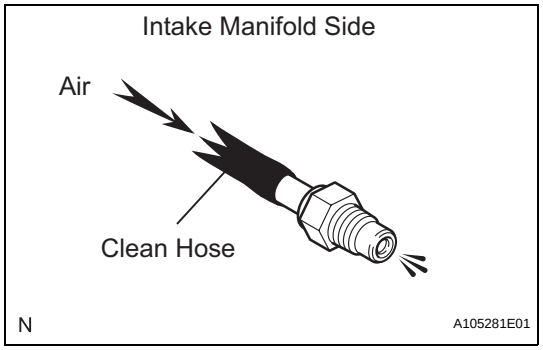

EC