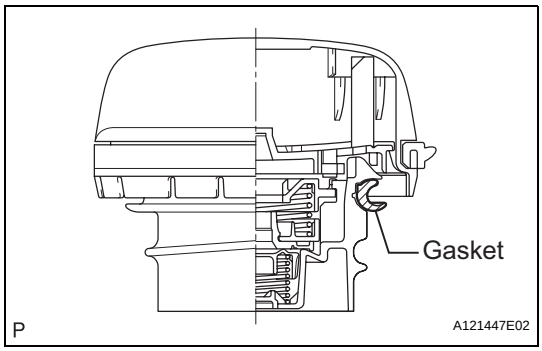


FUEL TANK CAP

INSPECTION

1. INSPECT FUEL TANK CAP ASSEMBLY

(a) Visually check that the cap and gasket are not deformed or damaged.
If the result is not as specified, replace the cap assembly or gasket.