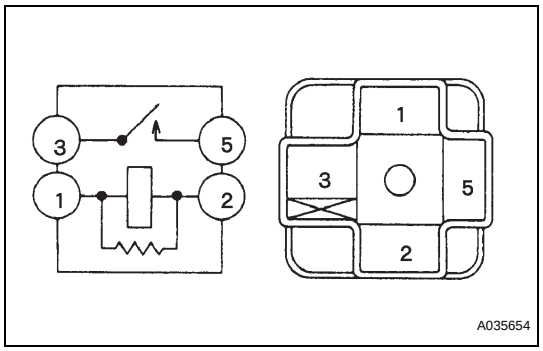


COOLING FAN RELAY

ON-VEHICLE INSPECTION

1. COOLING FAN RELAY

(a) Remove the relay from engine room relay block No. 1.

(b) Measure the resistance of the relay.

Standard resistance

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the cooling fan relay.

(c) Install the relay to engine room relay block No. 1.