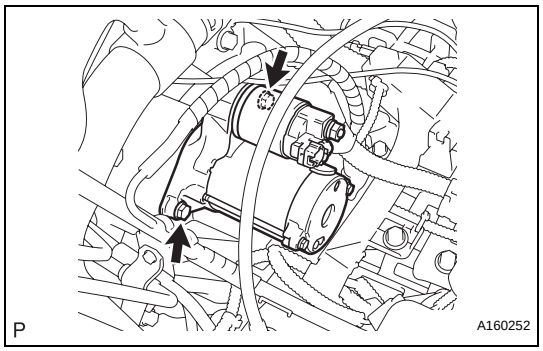

INSTALLATION

1. **INSTALL STARTER ASSEMBLY**
   (a) Install the starter with the 2 bolts.
   Torque: 37 N*m (380 kgf*cm, 26 ft.*lbf) for bolt

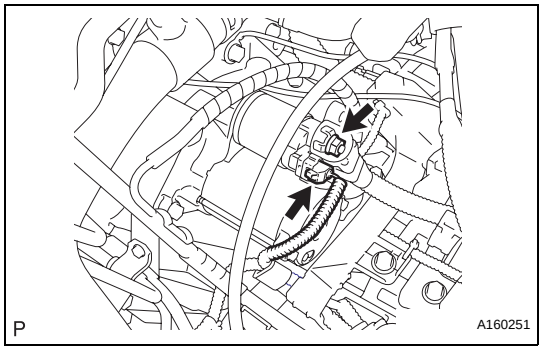

   (b) Connect the starter connector.
   (c) Install the terminal nut and cover the nut with the cap.
   Torque: 9.8 N*m (100 kgf*cm, 7 ft.*lbf) for nut

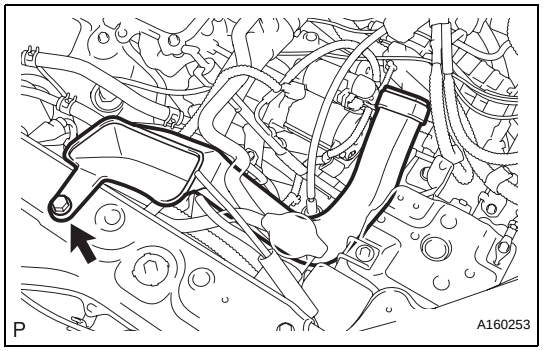

2. **INSTALL NO. 1 AIR CLEANER INLET**
   (a) Install the No. 1 air cleaner inlet with the bolt.
   Torque: 5.0 N*m (51 kgf*cm, 44 in.*lbf)

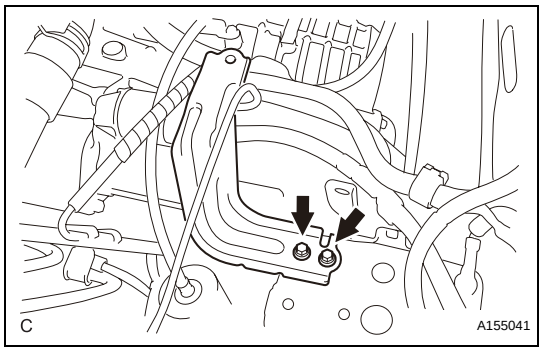

3. **INSTALL AIR CLEANER BRACKET**
   (a) Remove the 2 bolts and air cleaner bracket.
   Torque: 7.8 N*m (80 kgf*cm, 69 in.*lbf)
4. **INSTALL AIR CLEANER CASE SUB-ASSEMBLY (See page EM-59)**
5. **INSTALL AIR CLEANER FILTER ELEMENT (See page EM-59)**
6. **INSTALL AIR CLEANER CAP SUB-ASSEMBLY (See page FU-20)**
7. **INSTALL NO. 2 AIR CLEANER INLET (See page EM-60)**
8. **INSTALL BATTERY (See page EM-59)**