

STARTER

COMPONENTS

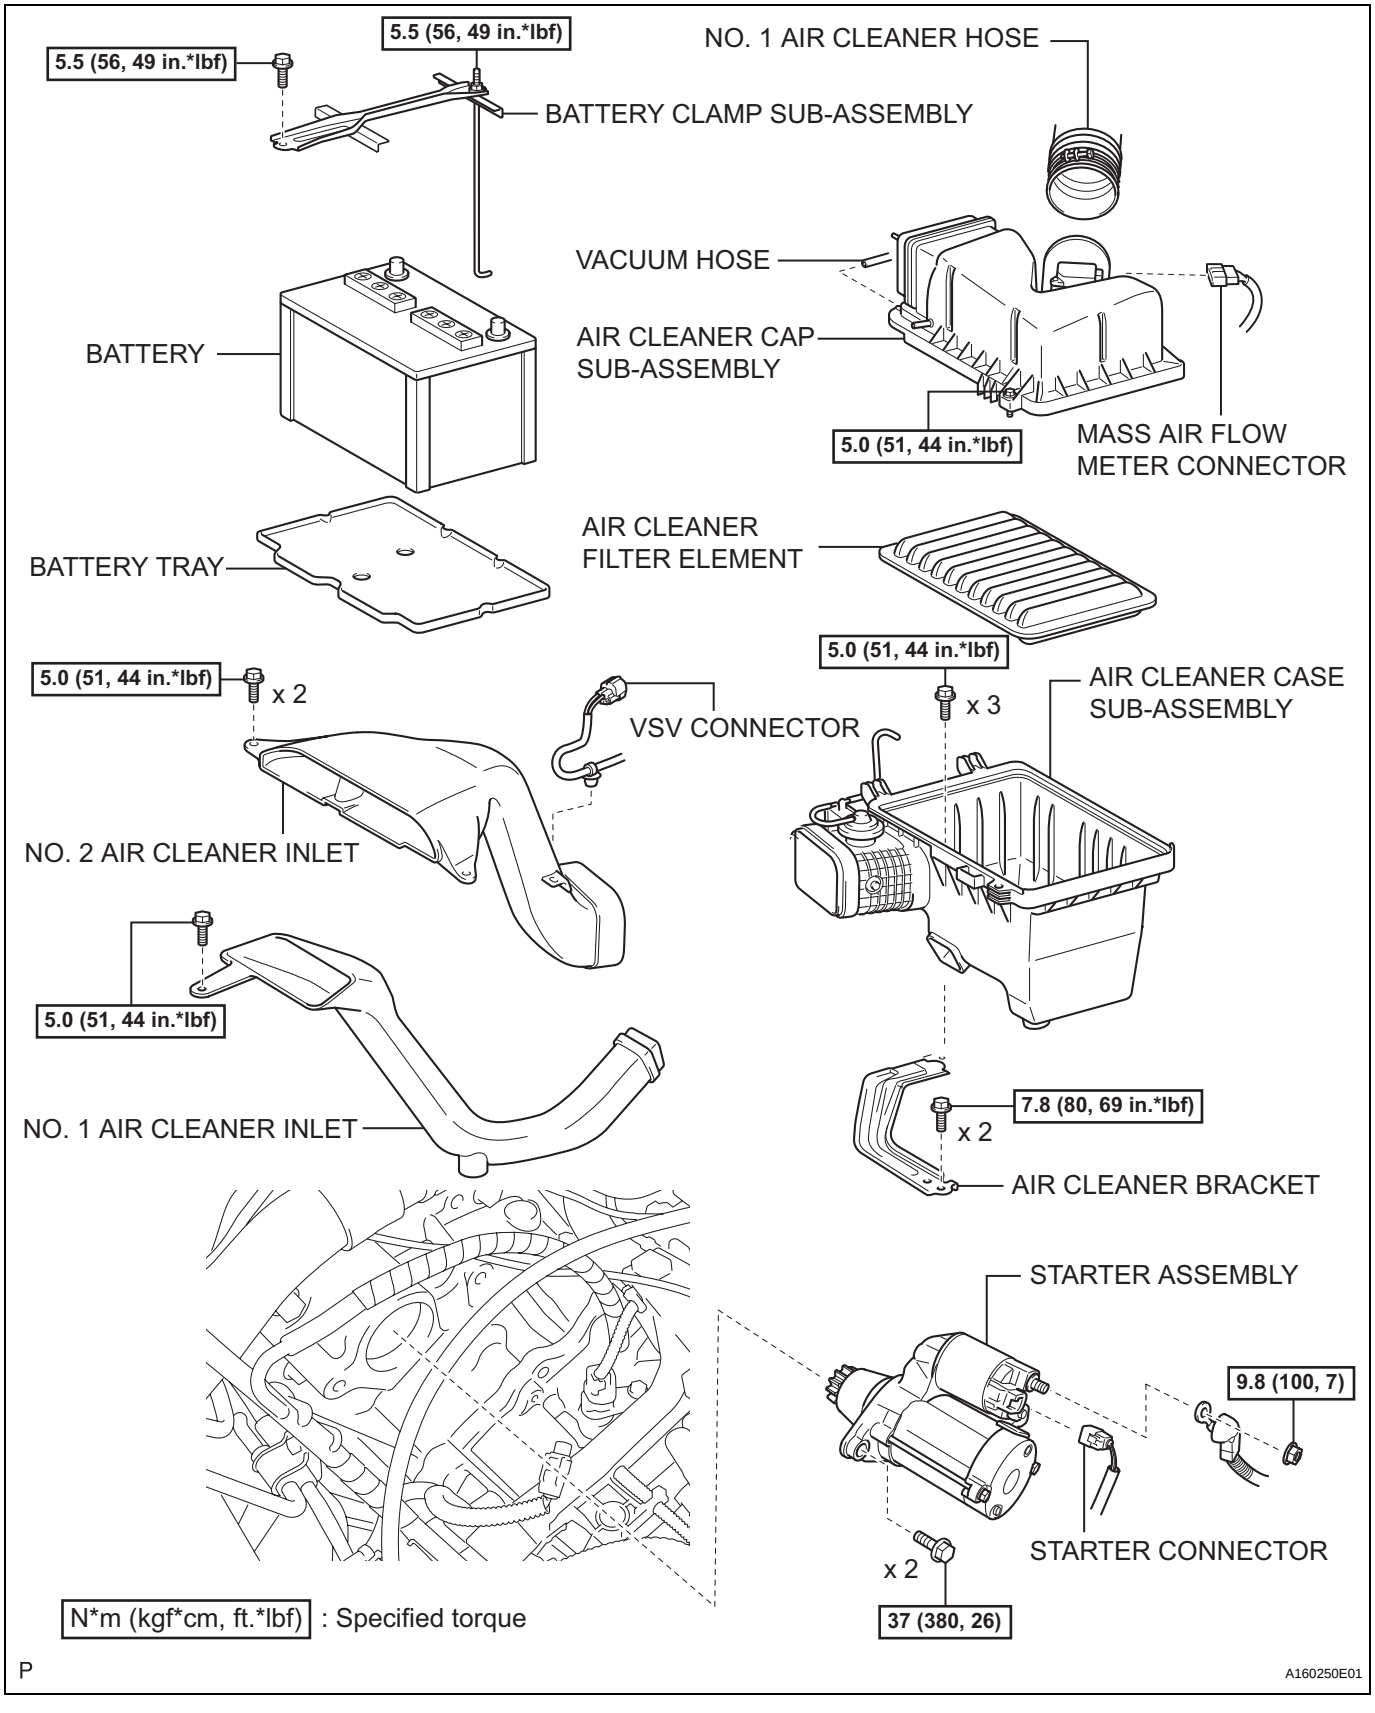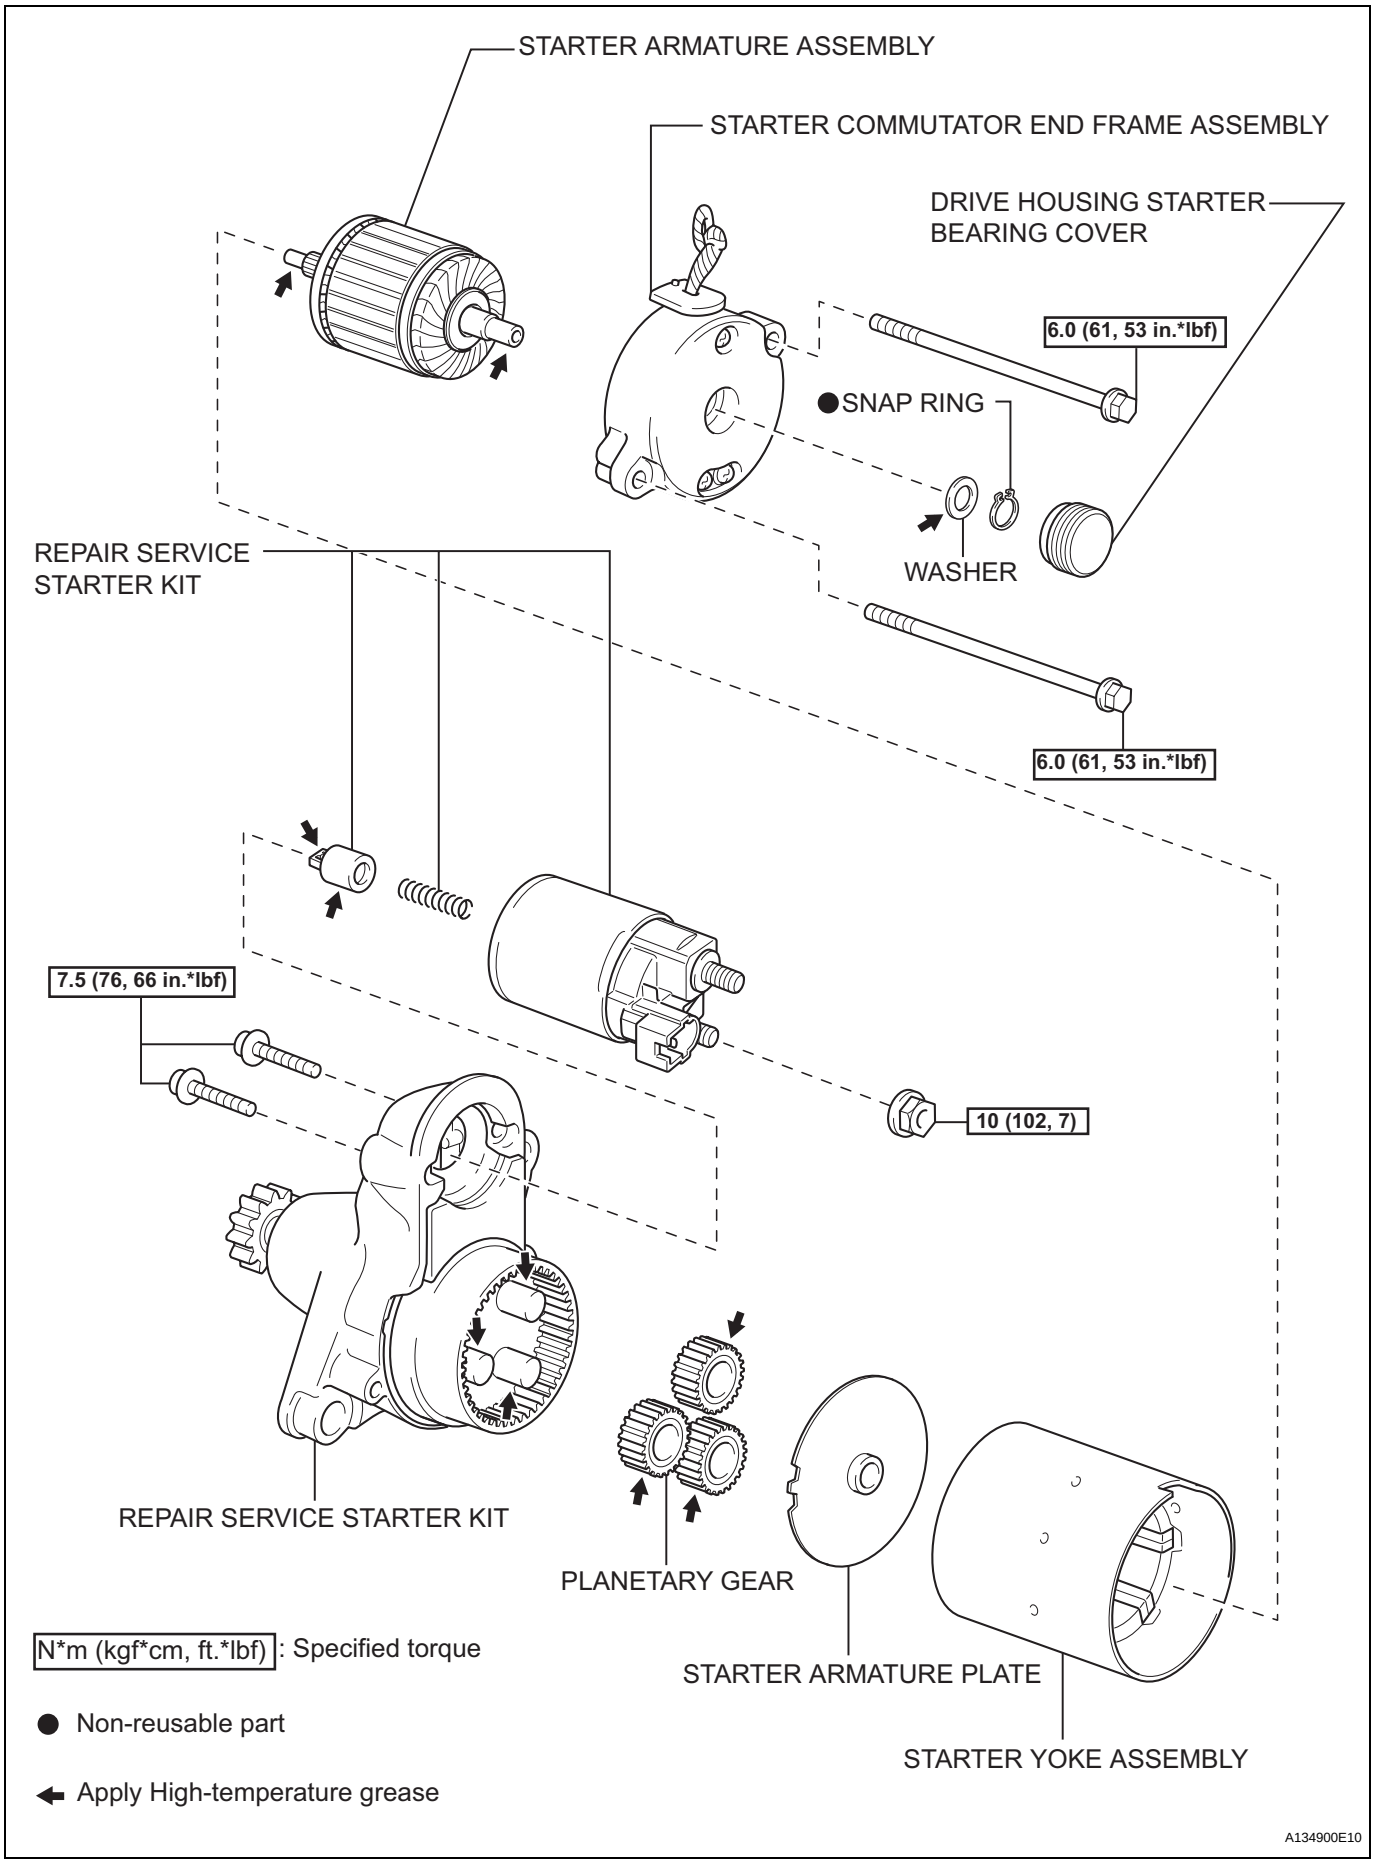

ST


STARTER ARMATURE ASSEMBLY
STARTER COMMUTATOR END FRAME ASSEMBLY
DRIVE HOUSING STARTER BEARING COVER
6.0 (61, 53 in.*lbf)
●SNAP RING
WASHER
REPAIR SERVICE STARTER KIT
6.0 (61, 53 in.*lbf)
7.5 (76, 66 in.*lbf)
10 (102, 7)
REPAIR SERVICE STARTER KIT
PLANETARY GEAR
STARTER ARMATURE PLATE
STARTER YOKE ASSEMBLY
N*m (kgf*cm, ft.*lbf): Specified torque
● Non-reusable part
Apply High-temperature grease
A134900E10

ST