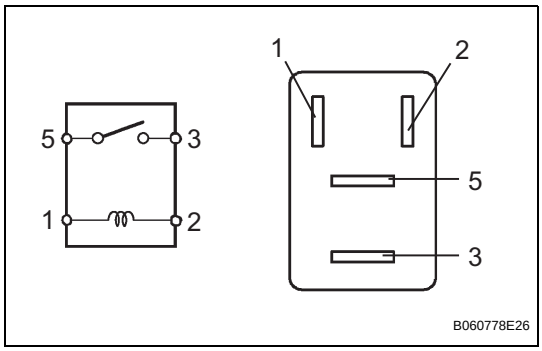


STARTER RELAY

ON-VEHICLE INSPECTION

1. INSPECT STARTER RELAY

(a) Using an ohmmeter, measure the resistance between each terminal.

Standard resistance

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the starter relay assembly.