
IGNITION SWITCH

COMPONENTS

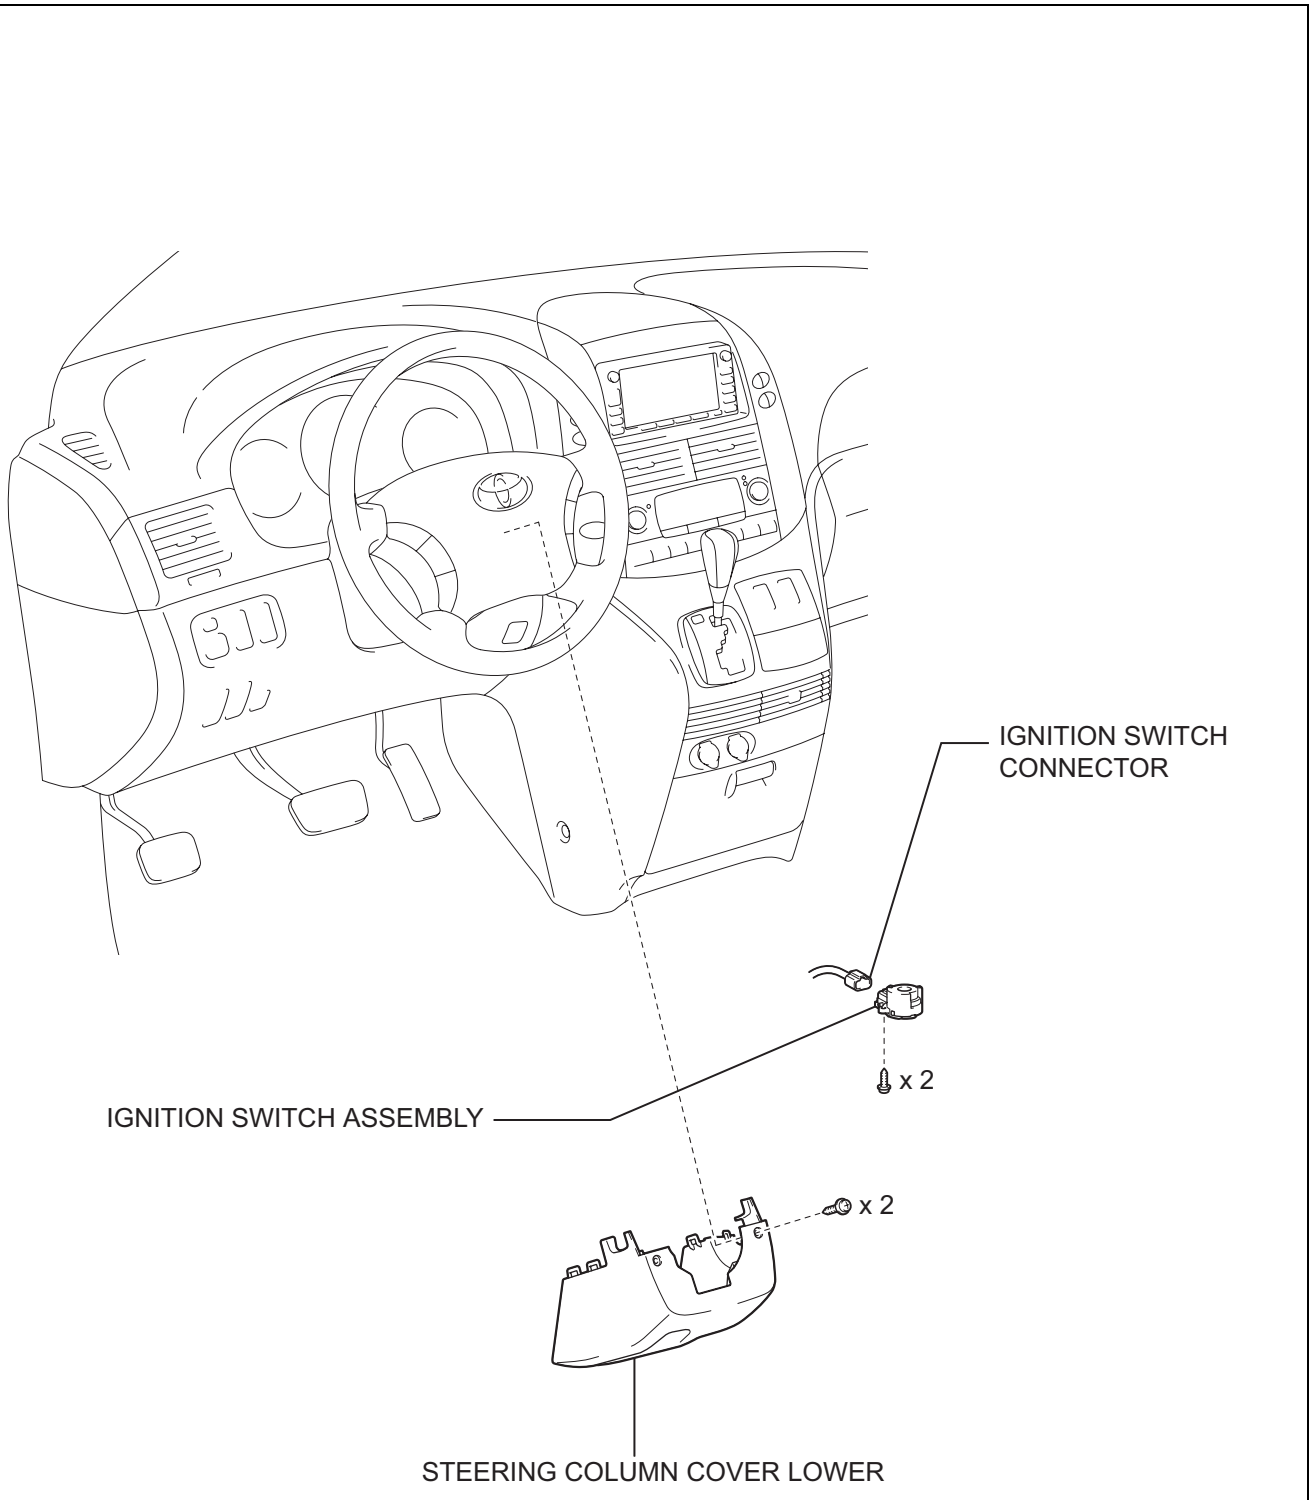


REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

2. REMOVE STEERING COLUMN COVER LOWER


(a) Insert the key into the ignition key cylinder and release the steering lock.

(b) Turn the steering wheel clockwise to gain access to the screw and remove the screw.

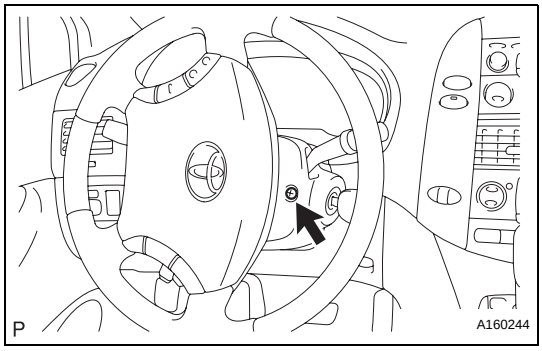

(c) Turn the steering wheel counterclockwise to gain access to the screw and remove the screw.


(d) Detach the 4 claws, and remove the steering column cover lower.

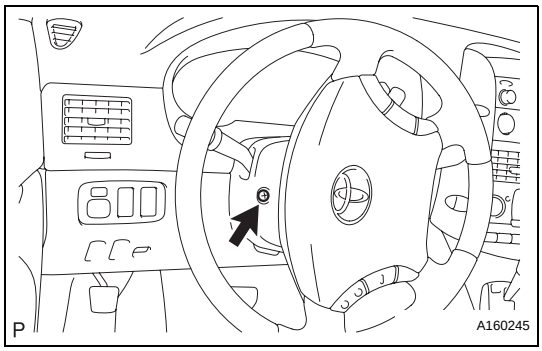

3. REMOVE IGNITION SWITCH ASSEMBLY

(a) Disconnect the ignition switch connector.

(b) Remove the 2 screws and ignition switch.

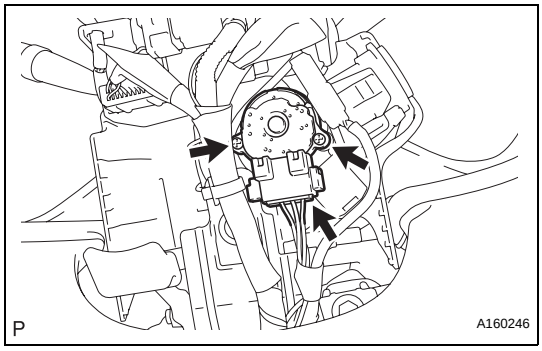


ST

INSPECTION

1. INSPECT IGNITION SWITCH ASSEMBLY


(a) Measure the resistance of the switch.

Standard resistance

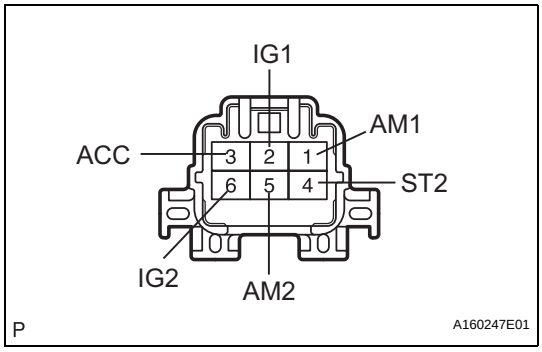

Tester Connection	Switch Condition	Specified Condition
-	LOCK	10 kΩ or higher
1 (AM1) - 3 (ACC)	ACC	Below 1 Ω
1 (AM1) - 3 (ACC) 3 (ACC) - 2 (IG1) 1 (AM1) - 2 (IG1) 5 (AM2) - 6 (IG2)	ON	Below 1 Ω
1 (AM1) - 2 (IG1) 5 (AM2) - 6 (IG2) 6 (IG2) - 4 (ST2) 5 (AM2) - 4 (ST2)	START	Below 1 Ω

If the result is not as specified, replace the switch assembly.

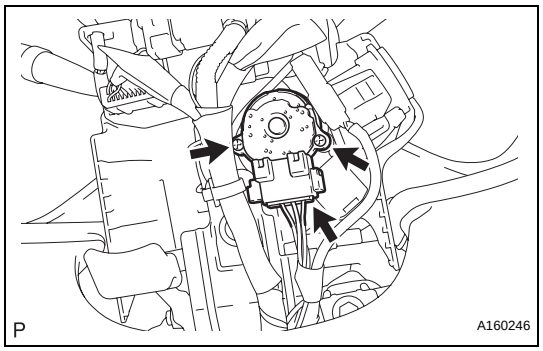

INSTALLATION


1. INSTALL IGNITION SWITCH ASSEMBLY

(a) Install the ignition switch with the 2 screws.

(b) Install the ignition switch connector.


2. INSTALL STEERING COLUMN COVER LOWER

(a) Attach the 4 claws to install the steering column cover lower.

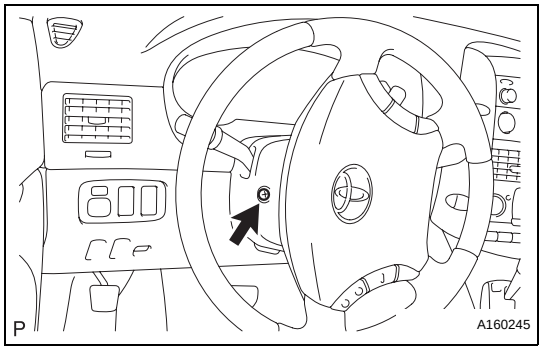

(b) Insert the key into the ignition key cylinder and release the steering lock.

(c) Turn the steering wheel counterclockwise and install the screw.

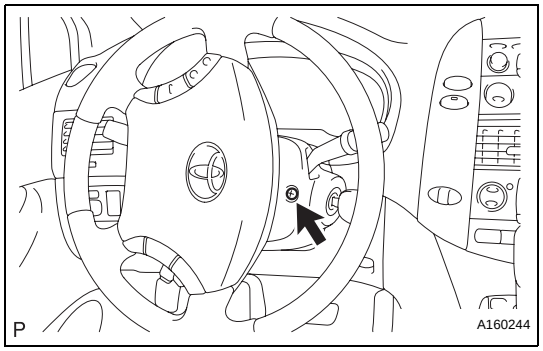

(d) Turn the steering wheel clockwise and install the screw.

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

ST