

# CHARGING SYSTEM

## PRECAUTION

1. **Check that the battery cables are connected to the correct terminals.**
2. **Disconnect the battery cables when the battery is given a quick charge.**
3. **Do not perform tests with a high voltage insulation resistance tester.**
4. **Never disconnect the battery cables while the engine is running.**
5. **Check that the charging cable nut is tightened on terminal B of the generator and the engine room R/B.**

# PARTS LOCATION

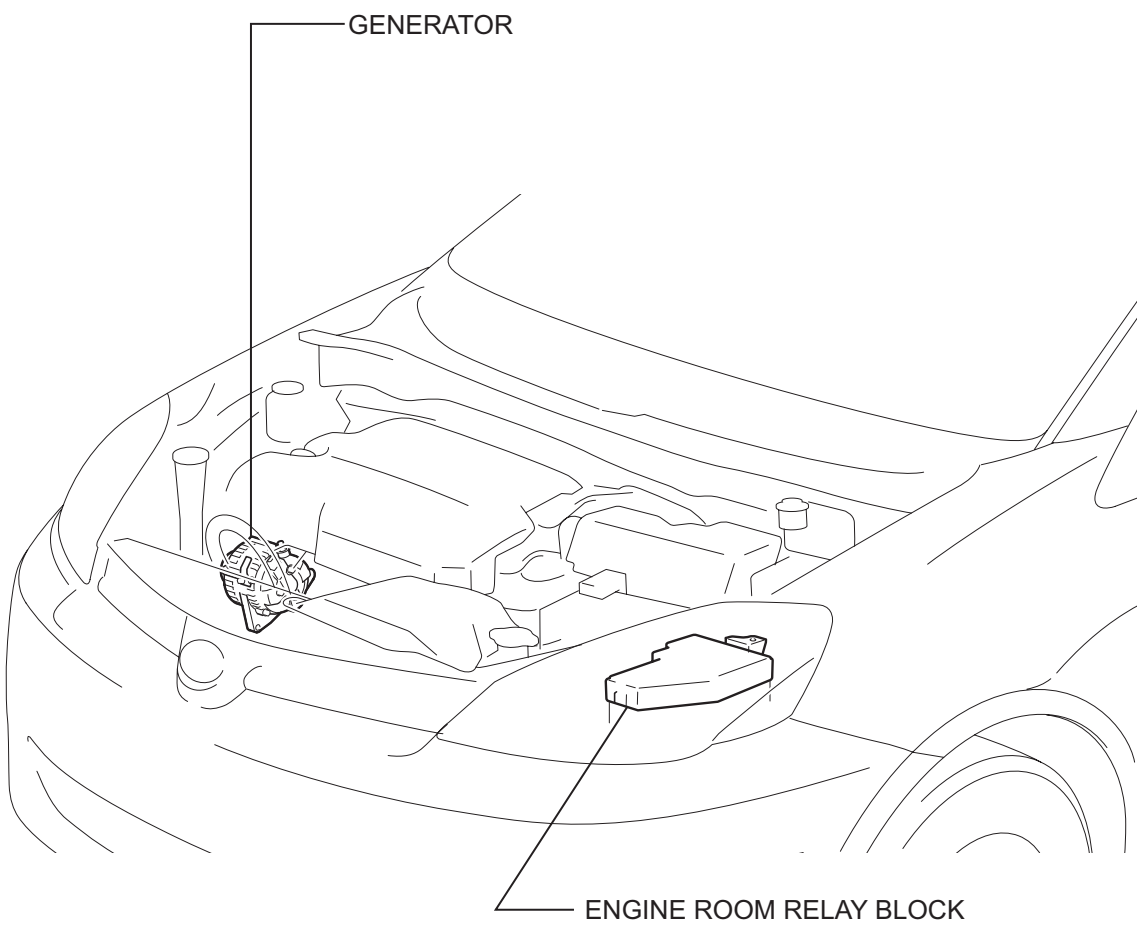

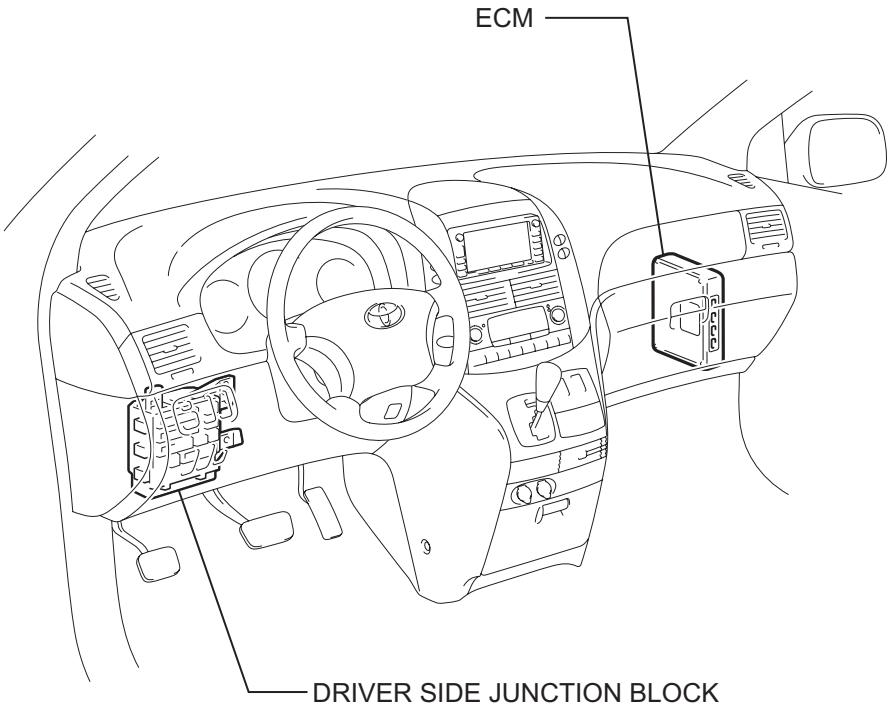


A163178E01