

AUTOMATIC TRANSAXLE ASSEMBLY

COMPONENTS

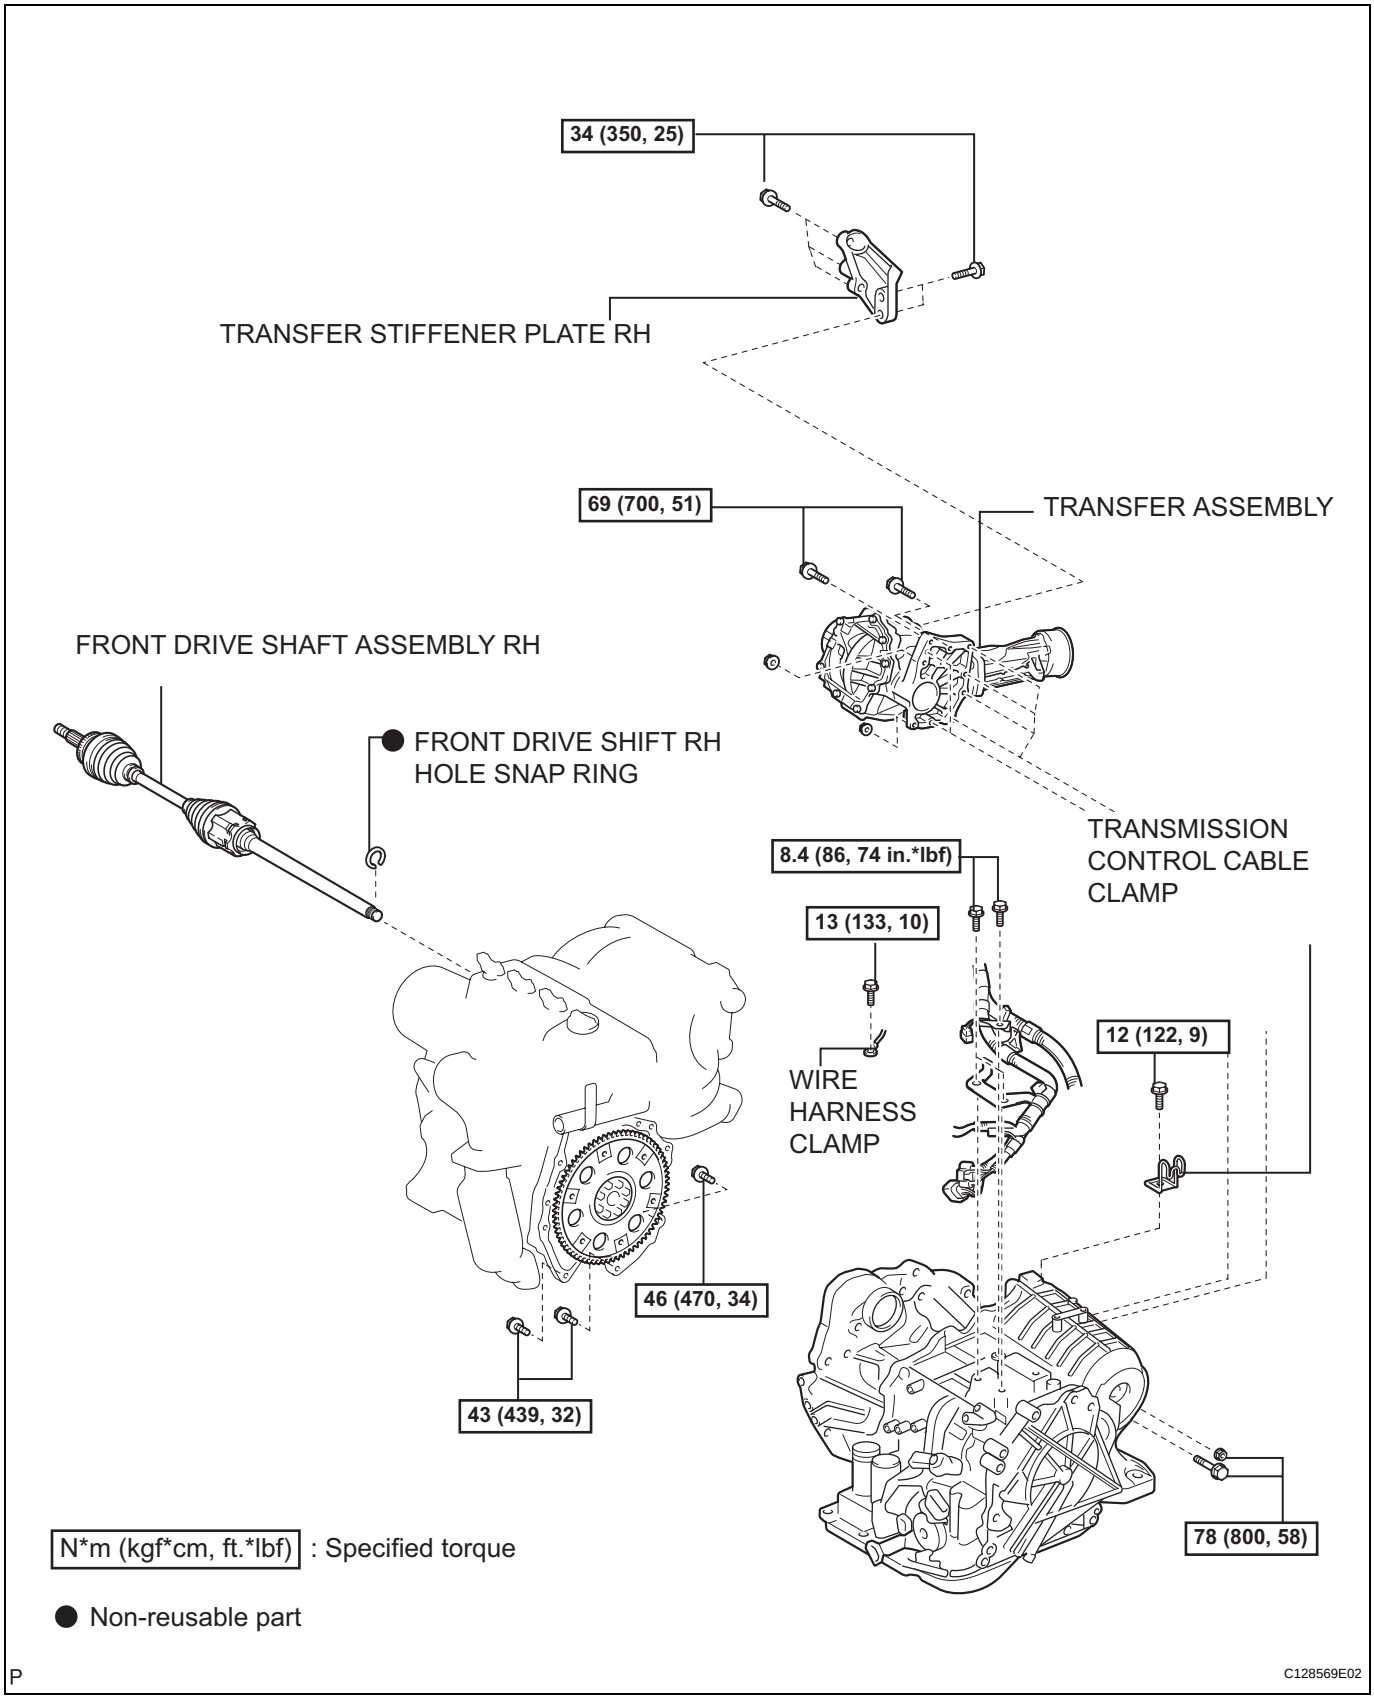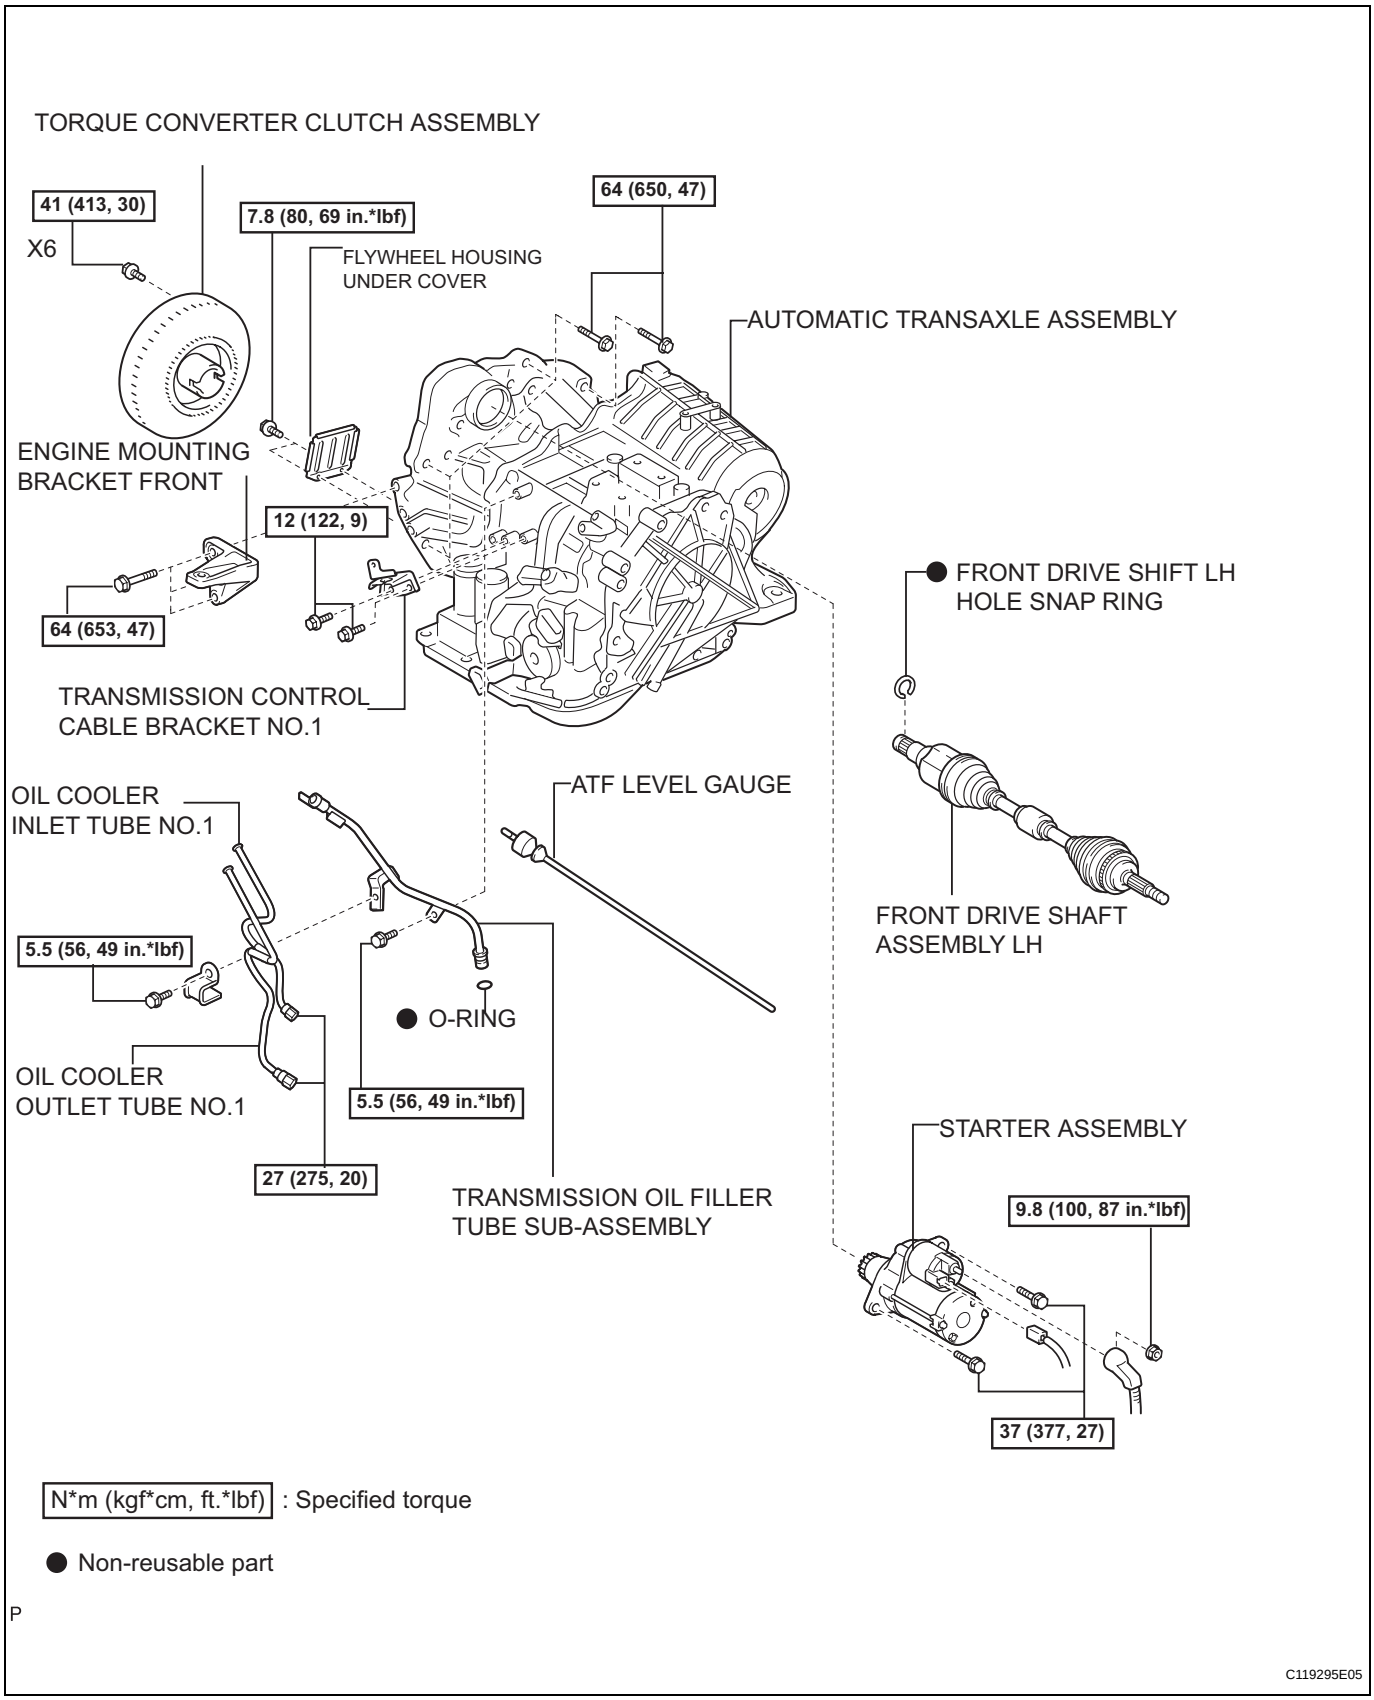

AX


TORQUE CONVERTER CLUTCH ASSEMBLY
41 (413, 30)
X6
7.8 (80, 69 in.*lbf)
FLYWHEEL HOUSING UNDER COVER
64 (650, 47)
AUTOMATIC TRANSAXLE ASSEMBLY
ENGINE MOUNTING BRACKET FRONT
12 (122, 9)
64 (653, 47)
TRANSMISSION CONTROL CABLE BRACKET NO.1
● FRONT DRIVE SHIFT LH HOLE SNAP RING
OIL COOLER INLET TUBE NO.1
ATF LEVEL GAUGE
5.5 (56, 49 in.*lbf)
● O-RING
OIL COOLER OUTLET TUBE NO.1
5.5 (56, 49 in.*lbf)
27 (275, 20)
TRANSMISSION OIL FILLER TUBE SUB-ASSEMBLY
FRONT DRIVE SHAFT ASSEMBLY LH
STARTER ASSEMBLY
9.8 (100, 87 in.*lbf)
37 (377, 27)
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
P
C119295E05

AX