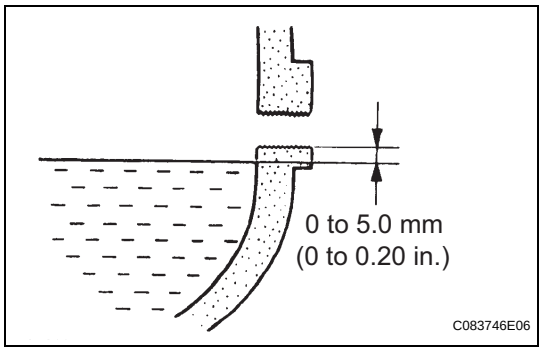


TRANSFER OIL

ON-VEHICLE INSPECTION

1. INSPECT TRANSFER OIL

(a) Remove the No. 1 plug and gasket.

(b) Check the oil level is within 0 - 5 mm (0 - 0.20 in.) below the lowest end of the hole for No. 1 plug.

NOTICE:

- **When changing oil, recheck the oil level after driving.**
- **Excessively large or small quantity of oil may cause some trouble.**

(c) When the oil level is too low, check for oil leakage.

(d) Tighten the No. 1 plug with a new gasket.

Torque: 49 N*m (500 kgf*cm, 36 ft.*lbf)

2. ADD TRANSFER OIL

(a) Remove the No. 1 plug and gasket and supply oil.

NOTICE:

- **When supplying oil, pour it slowly.**
- **Supply oil several times at several minutes interval.**

HINT:

The oil level should be within 0 - 5 mm (0 - 0.20 in.) below the lowest end of the hole for the No. 1 plug.

(b) After leaving it alone for 5 minutes, recheck the oil level.

(c) Tighten the No. 5 plug with a new gasket.

Torque: 49 N*m (500 kgf*cm, 36 ft.*lbf)