
# TRANSFER CASE OIL SEAL


## COMPONENTS

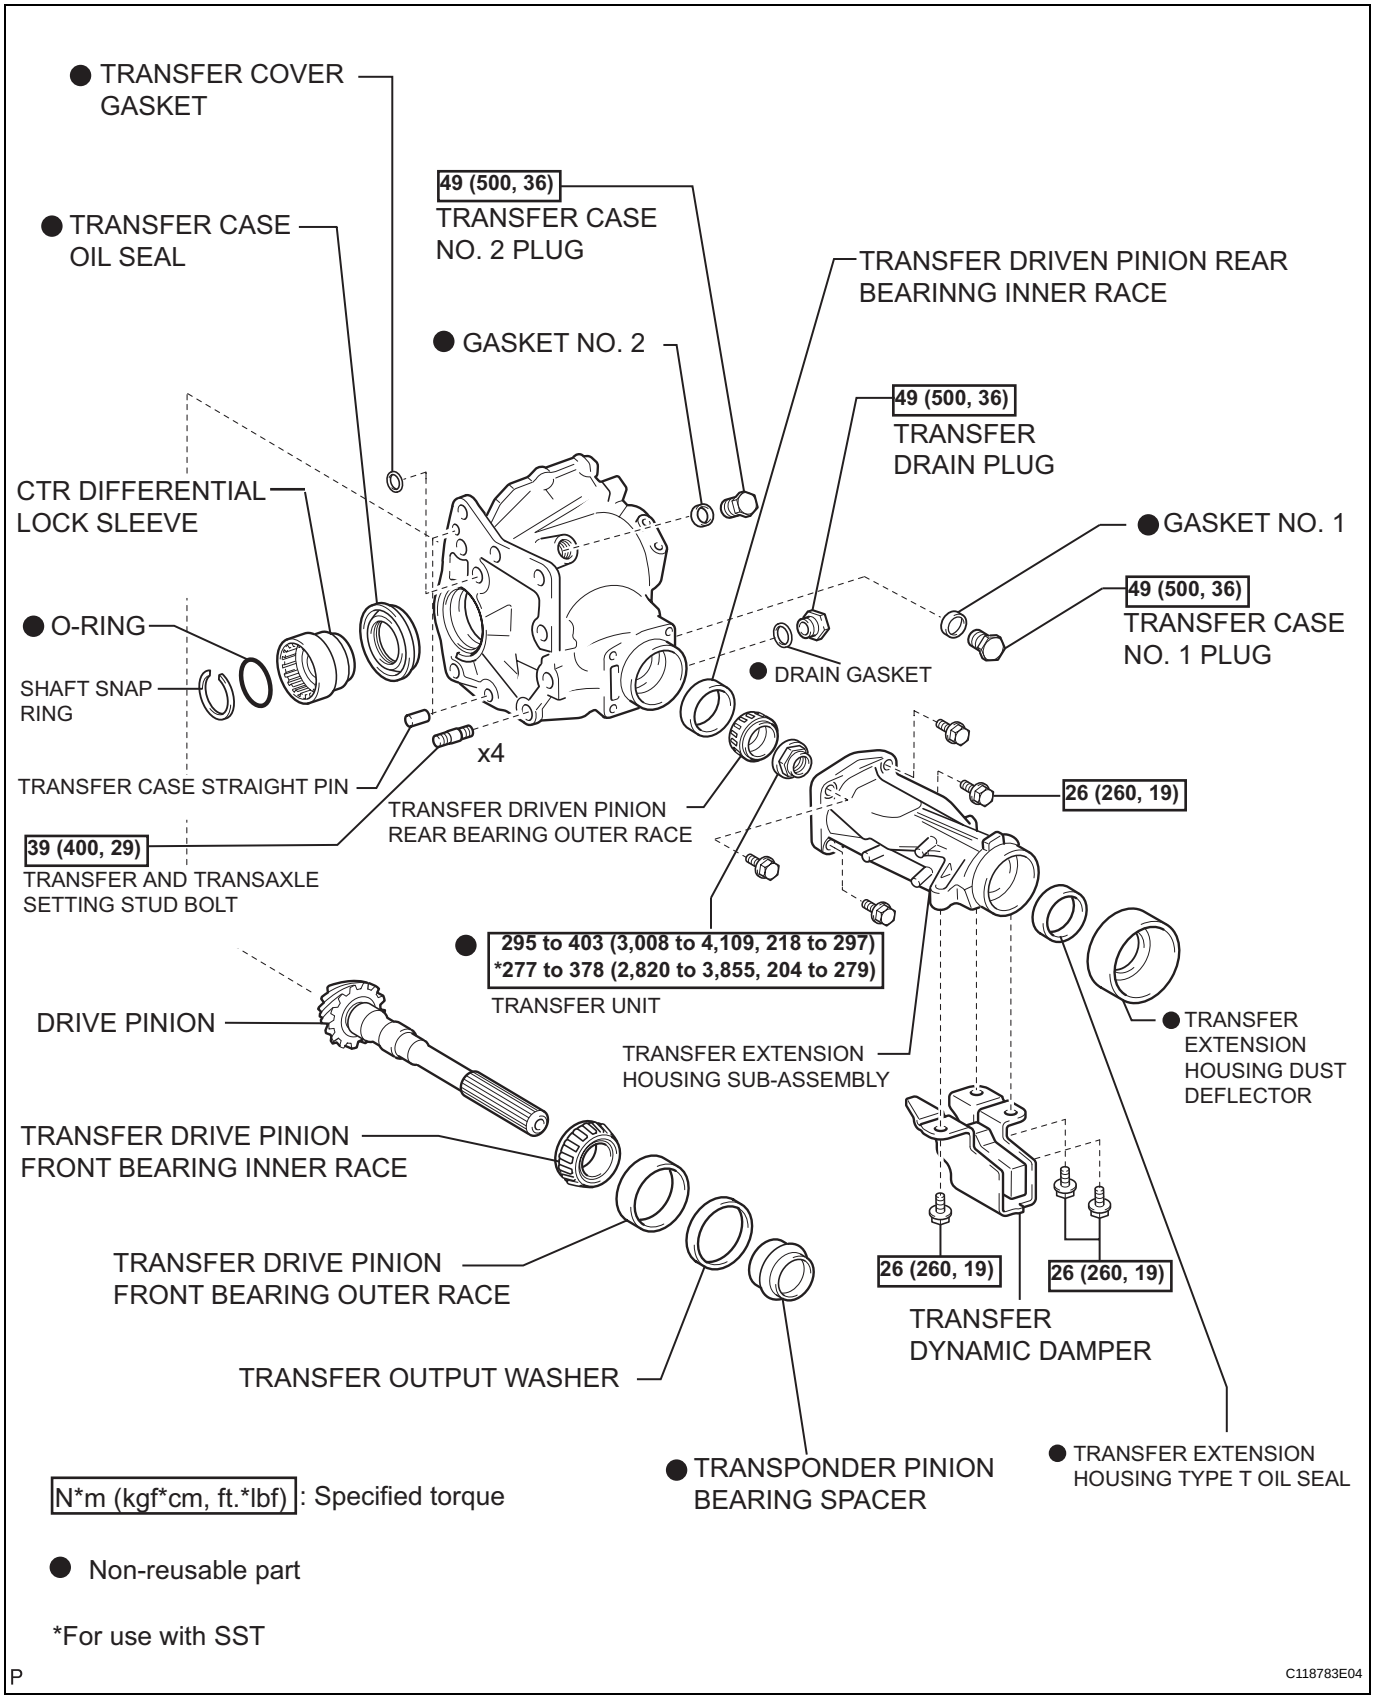



TF

# REMOVAL

1. **REMOVE ENGINE AND TRANSAXLE**
   HINT:
   (See page EM-26)
2. **REMOVE AUTOMATIC TRANSMISSION WITH TRANSFER**
   HINT:
   (See page AX-164)
3. **REMOVE TRANSFER ASSEMBLY**
   HINT:
   (See page TF-8)
4. **REMOVE CTR DIFFERENTIAL LOCK SLEEVE**
   HINT:
   (See page TF-13)
5. **REMOVE TRANSFER CASE OIL SEAL**
   (a) Using SST(s), remove the transfer case oil seal from the transfer case.
   **SST 09308-00010**
   **NOTICE:**
   **Do not damage the oil-seal-fitted surface of the case.**

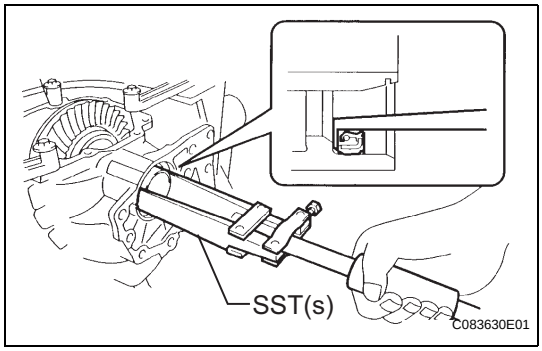

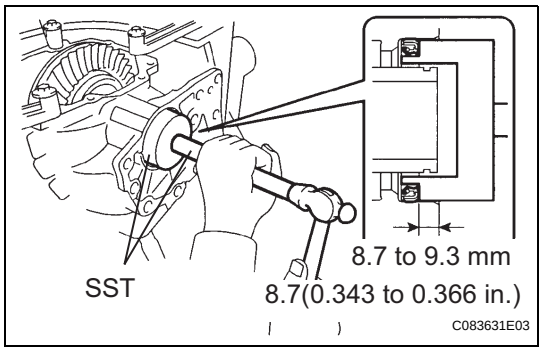
# INSTALLATION

1. **INSTALL TRANSFER CASE OIL SEAL**
   (a) Using SST, install anew transfer case oil seal to the transfer case at the position shown in the illustration.
   **SST 09387-00010, 09950-70010 (09951-07150)**
   **NOTICE:**
   **Do not install it obliquely.**
   (b) Apply small amount of MP grease to the oil seal lip.
2. **INSTALL CTR DIFFERENTIAL LOCK SLEEVE**
   HINT:
   (See page TF-22)
3. **INSTALL TRANSFER ASSEMBLY**
   HINT:
   (See page TF-9)
4. **INSTALL AUTOMATIC TRANSMISSION WITH TRANSFER**
   HINT:
   See page AX-167
5. **INSTALL ENGINE AND TRANSAXLE**
   HINT:
   (See page EM-44)
6. **INSPECT AND ADJUST FRONT WHEEL ALIGNMENT**
   HINT:
   (See page SP-4)

TF

**7. CHECK ABS SPEED SENSOR SIGNAL**

HINT:

(See page BC-3)