

FRONT DRIVE SHAFT


COMPONENTS

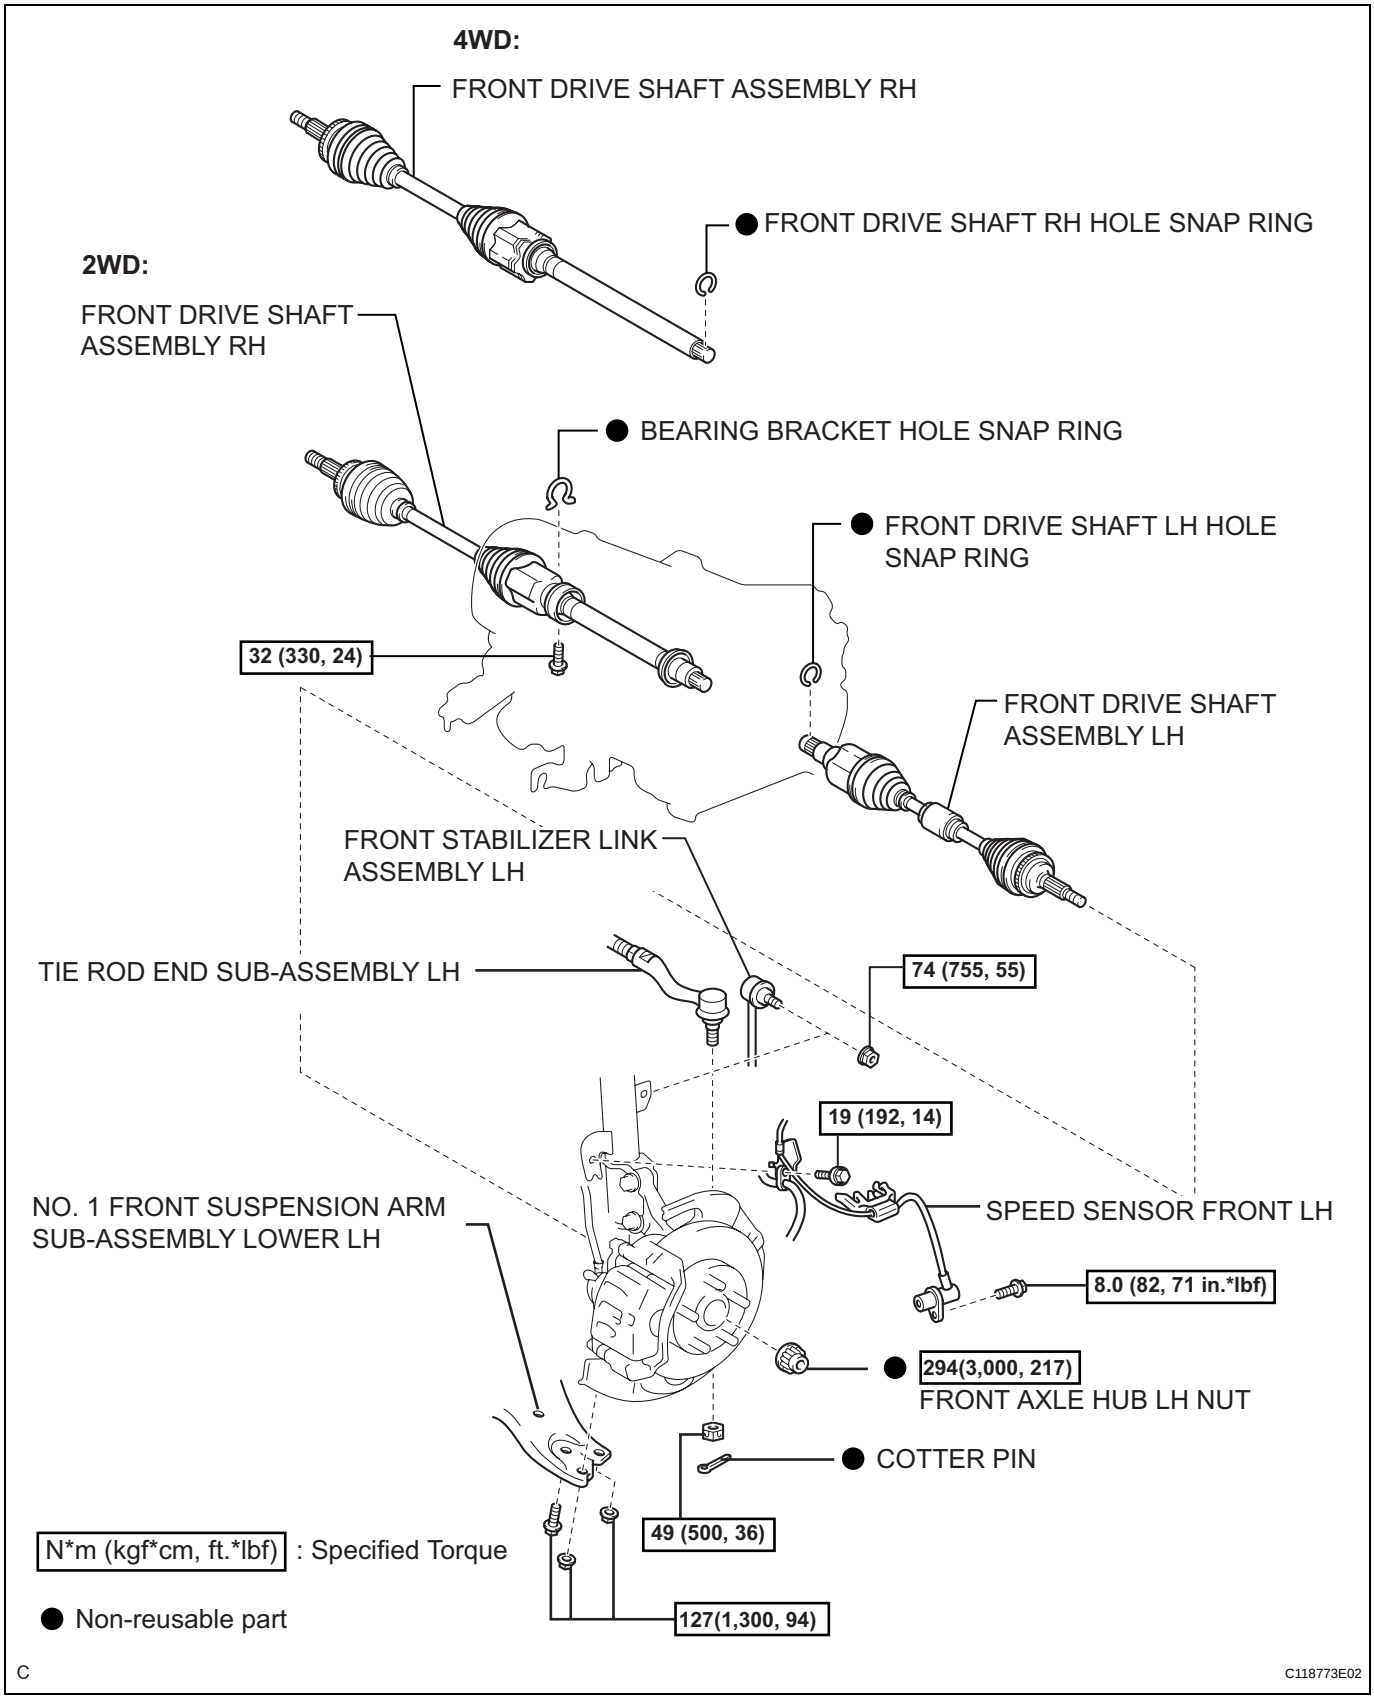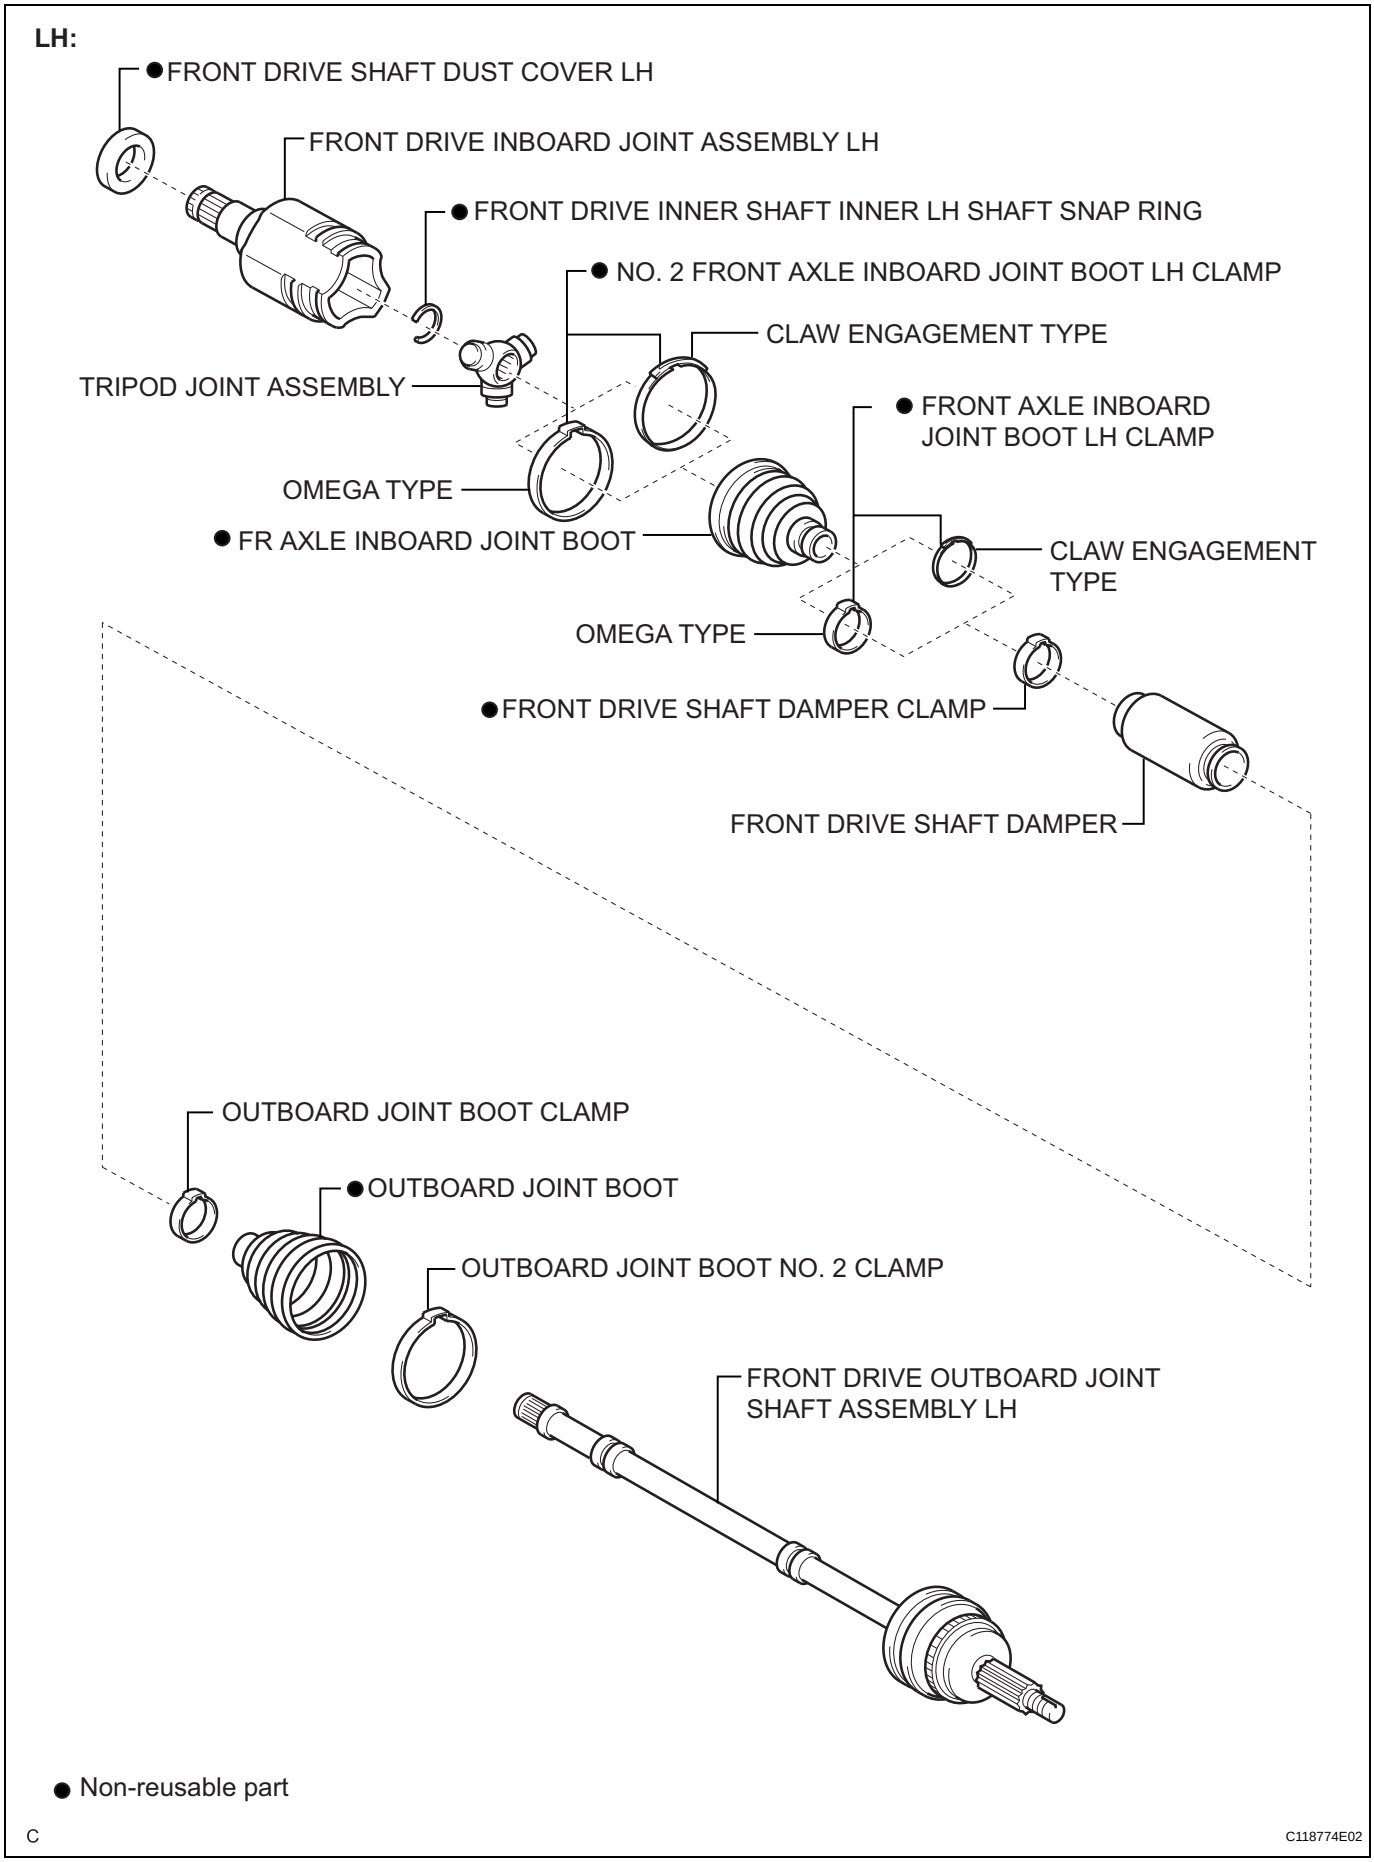

DS


LH:
● FRONT DRIVE SHAFT DUST COVER LH
FRONT DRIVE INBOARD JOINT ASSEMBLY LH
● FRONT DRIVE INNER SHAFT INNER LH SHAFT SNAP RING
● NO. 2 FRONT AXLE INBOARD JOINT BOOT LH CLAMP
CLAW ENGAGEMENT TYPE
TRIPOD JOINT ASSEMBLY
● FRONT AXLE INBOARD JOINT BOOT LH CLAMP
OMEGA TYPE
● FR AXLE INBOARD JOINT BOOT
CLAW ENGAGEMENT TYPE
OMEGA TYPE
● FRONT DRIVE SHAFT DAMPER CLAMP
FRONT DRIVE SHAFT DAMPER
OUTBOARD JOINT BOOT CLAMP
● OUTBOARD JOINT BOOT
OUTBOARD JOINT BOOT NO. 2 CLAMP
FRONT DRIVE OUTBOARD JOINT SHAFT ASSEMBLY LH
● Non-reusable part
C
C118774E02

DS

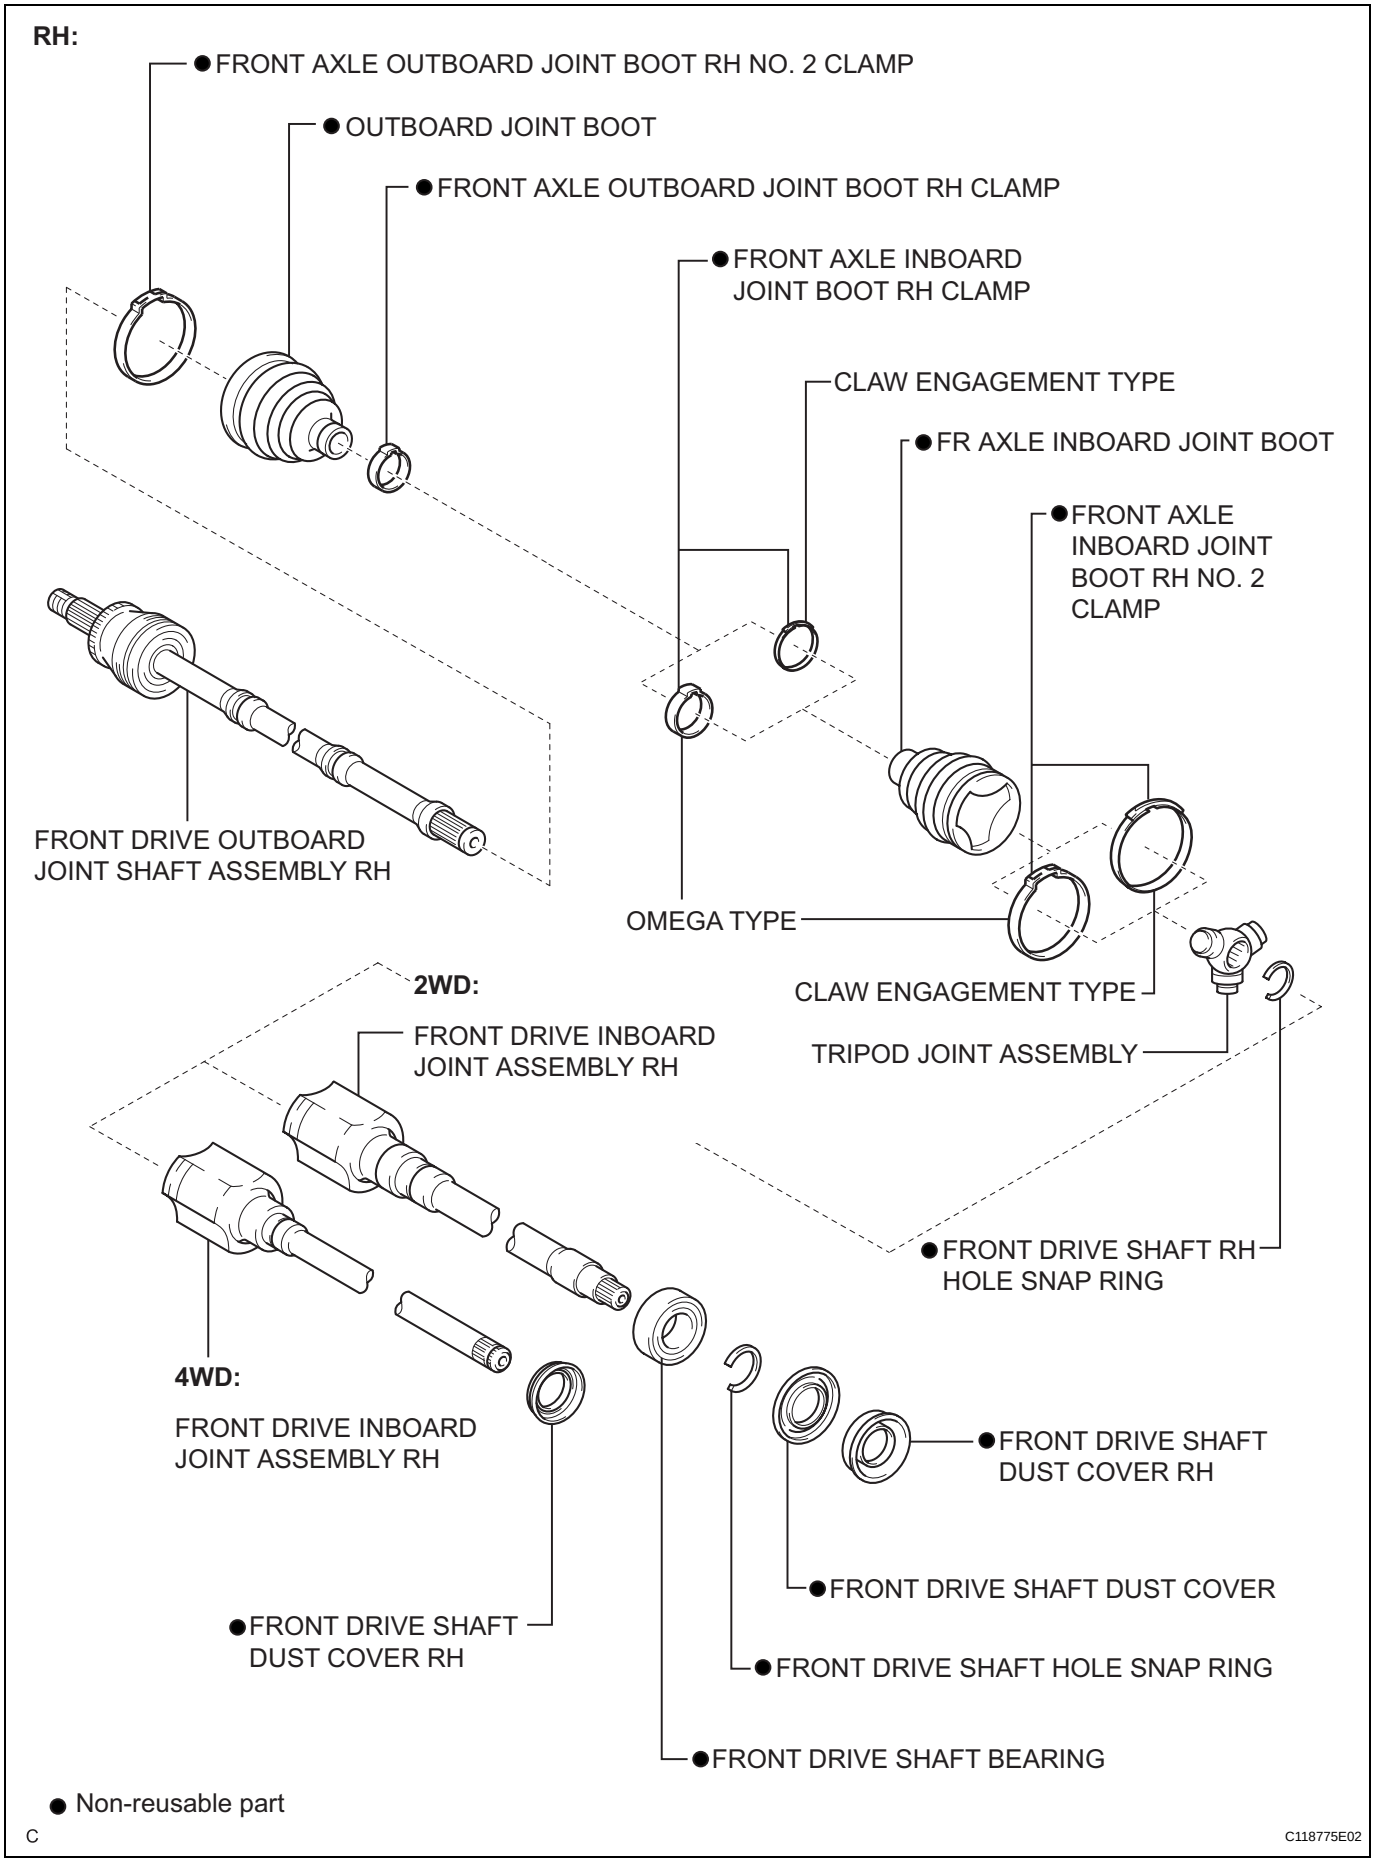
RH:
● FRONT AXLE OUTBOARD JOINT BOOT RH NO. 2 CLAMP
● OUTBOARD JOINT BOOT
● FRONT AXLE OUTBOARD JOINT BOOT RH CLAMP
● FRONT AXLE INBOARD JOINT BOOT RH CLAMP
CLAW ENGAGEMENT TYPE
● FR AXLE INBOARD JOINT BOOT
● FRONT AXLE INBOARD JOINT BOOT RH NO. 2 CLAMP
FRONT DRIVE OUTBOARD JOINT SHAFT ASSEMBLY RH
OMEGA TYPE
CLAW ENGAGEMENT TYPE
TRIPOD JOINT ASSEMBLY
2WD:
FRONT DRIVE INBOARD JOINT ASSEMBLY RH
● FRONT DRIVE SHAFT RH HOLE SNAP RING
4WD:
FRONT DRIVE INBOARD JOINT ASSEMBLY RH
● FRONT DRIVE SHAFT DUST COVER RH
● FRONT DRIVE SHAFT DUST COVER
● FRONT DRIVE SHAFT DUST COVER RH
● FRONT DRIVE SHAFT HOLE SNAP RING
● FRONT DRIVE SHAFT BEARING
● Non-reusable part
C
C118775E02

DS