

REPLACEMENT

HINT:
Replace the RH side using the same procedures as for the LH side.

1. **REMOVE REAR WHEEL**
2. **SEPARATE REAR DISC BRAKE CALIPER ASSEMBLY LH**
   (a) Separate rear disc brake caliper assembly LH for 2WD and disk rear brake type (See page AH-16).
3. **SEPARATE REAR DISC BRAKE CALIPER ASSEMBLY LH**
   (a) Separate rear disc brake caliper assembly LH for 4WD and disk rear brake type (See page AH-19).
4. **REMOVE REAR DISC**
   (a) Remove rear disc for disk rear brake type.
5. **REMOVE REAR BRAKE DRUM SUB-ASSEMBLY**
   (a) Remove rear brake drum sub-assembly for drum rear brake type.
6. **REMOVE REAR AXLE LH HUB BOLT**
   (a) Temporarily install the 2 nuts and washers to the rear axle LH hub bolt as shown in the illustration.
   (b) Using SST(s) and a hammer handle or an equivalent to hold the hub & bearing assembly, remove the rear axle LH hub bolt.
   SST 09628-10011

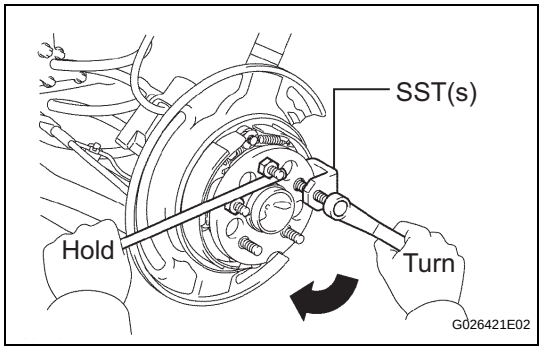

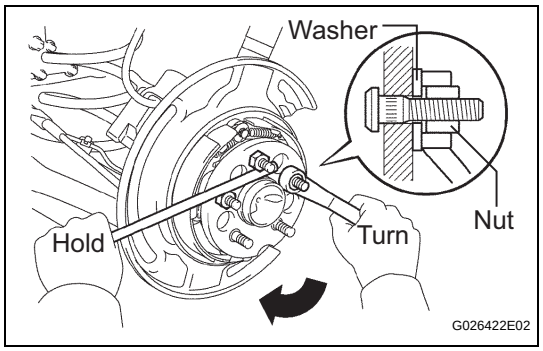

7. **INSTALL REAR AXLE LH HUB BOLT**
   (a) Install a washer and nut to a new bolt, as shown in the illustration.
   (b) Using a hammer handle or an equivalent to hold the hub & bearing assembly, install the rear axle LH hub bolt by tightening the nut.
8. **INSTALL REAR DISC**
   (a) Install rear disc for disk rear brake type.
9. **INSTALL REAR DISC BRAKE CALIPER ASSEMBLY LH**
   (a) Install rear disc brake caliper assembly LH for 2WD and disk rear brake type (See page AH-17).
10. **INSTALL REAR DISC BRAKE CALIPER ASSEMBLY LH**
    (a) Install rear disc brake caliper assembly LH for 4WD and disk rear brake type (See page AH-20).
11. **INSTALL REAR BRAKE DRUM SUB-ASSEMBLY**
    (a) Install rear brake drum sub-assembly for drum rear brake type.

12. INSTALL REAR WHEEL
Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)