

REMOVAL

HINT:
Replace the RH side by the same procedures as the LH side.

1. **REMOVE REAR WHEEL**
2. **REMOVE REAR DISC BRAKE CALIPER ASSEMBLY LH**
   (a) Removing the 2 bolts, separate the rear disc brake caliper assembly LH for disc rear brake type.
   NOTICE:
   Using a string and so on, hang down the disc brake caliper.
3. **REMOVE REAR DISC**
   (a) Remove rear disc for disc rear brake type.
4. **REMOVE REAR BRAKE DRUM SUB-ASSEMBLY**
   (a) Remove rear brake drum sub-assembly for drum rear brake type.
5. **SEPARATE SKID CONTROL SENSOR WIRE**
   (a) Disconnect the connector
6. **REMOVE REAR AXLE HUB & BEARING ASSEMBLY LH**
   (a) Remove the 4 bolts and hub & bearing assembly LH.

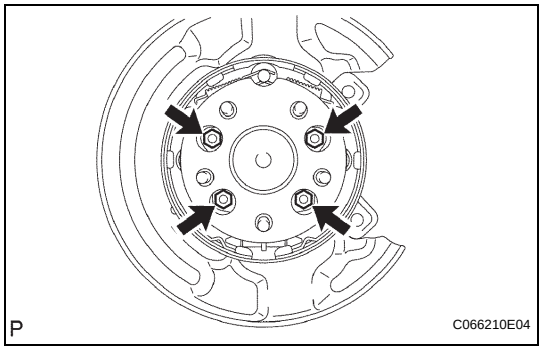

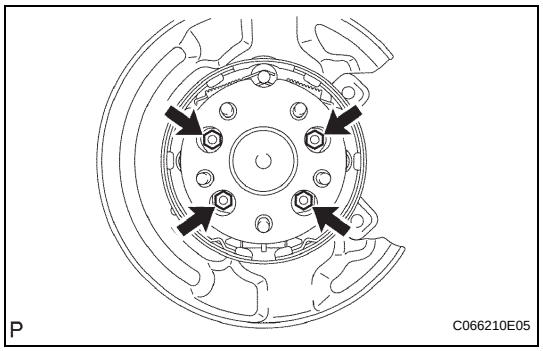

INSTALLATION

1. **INSTALL REAR AXLE HUB & BEARING ASSEMBLY LH**
   (a) Install the hub & Bearing assembly LH with the 4 bolts.
   Torque: 56 N*m (571 kgf*cm, 41 ft.*lbf)
2. **INSPECT BEARING BACKLASH (See page AH-16)**
3. **INSPECT AXLE HUB DEVIATION (See page AH-16)**
4. **CONNECT SKID CONTROL SENSOR WIRE**
   (a) Connect the connector.
   NOTICE:
   Do not twist the sensor wire when connecting it.
5. **INSTALL REAR DISC**
   (a) Install rear disc for disc rear brake type.
6. **INSTALL REAR BRAKE DRUM SUB-ASSEMBLY**
   (a) Install rear brake drum sub-assembly for drum rear brake type.

7. **INSTALL REAR DISC BRAKE CALIPER ASSEMBLY LH**
   (a) Install the rear disc brake caliper assembly LH with the 2 bolts for disc rear brake type.
   Torque: 88 N*m (900 kgf*cm, 65 ft.*lbf)

8. **INSTALL REAR WHEEL**
   Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)

9. **CHECK ABS SPEED SENSOR SIGNAL**
   (a) ABS WITH EBD SYSTEM (See page BC-3).
   (b) ABS WITH EBD & BA & TRAC & VSC SYSTEM (See page BC-72).