
FRONT AXLE HUB BOLT


COMPONENTS

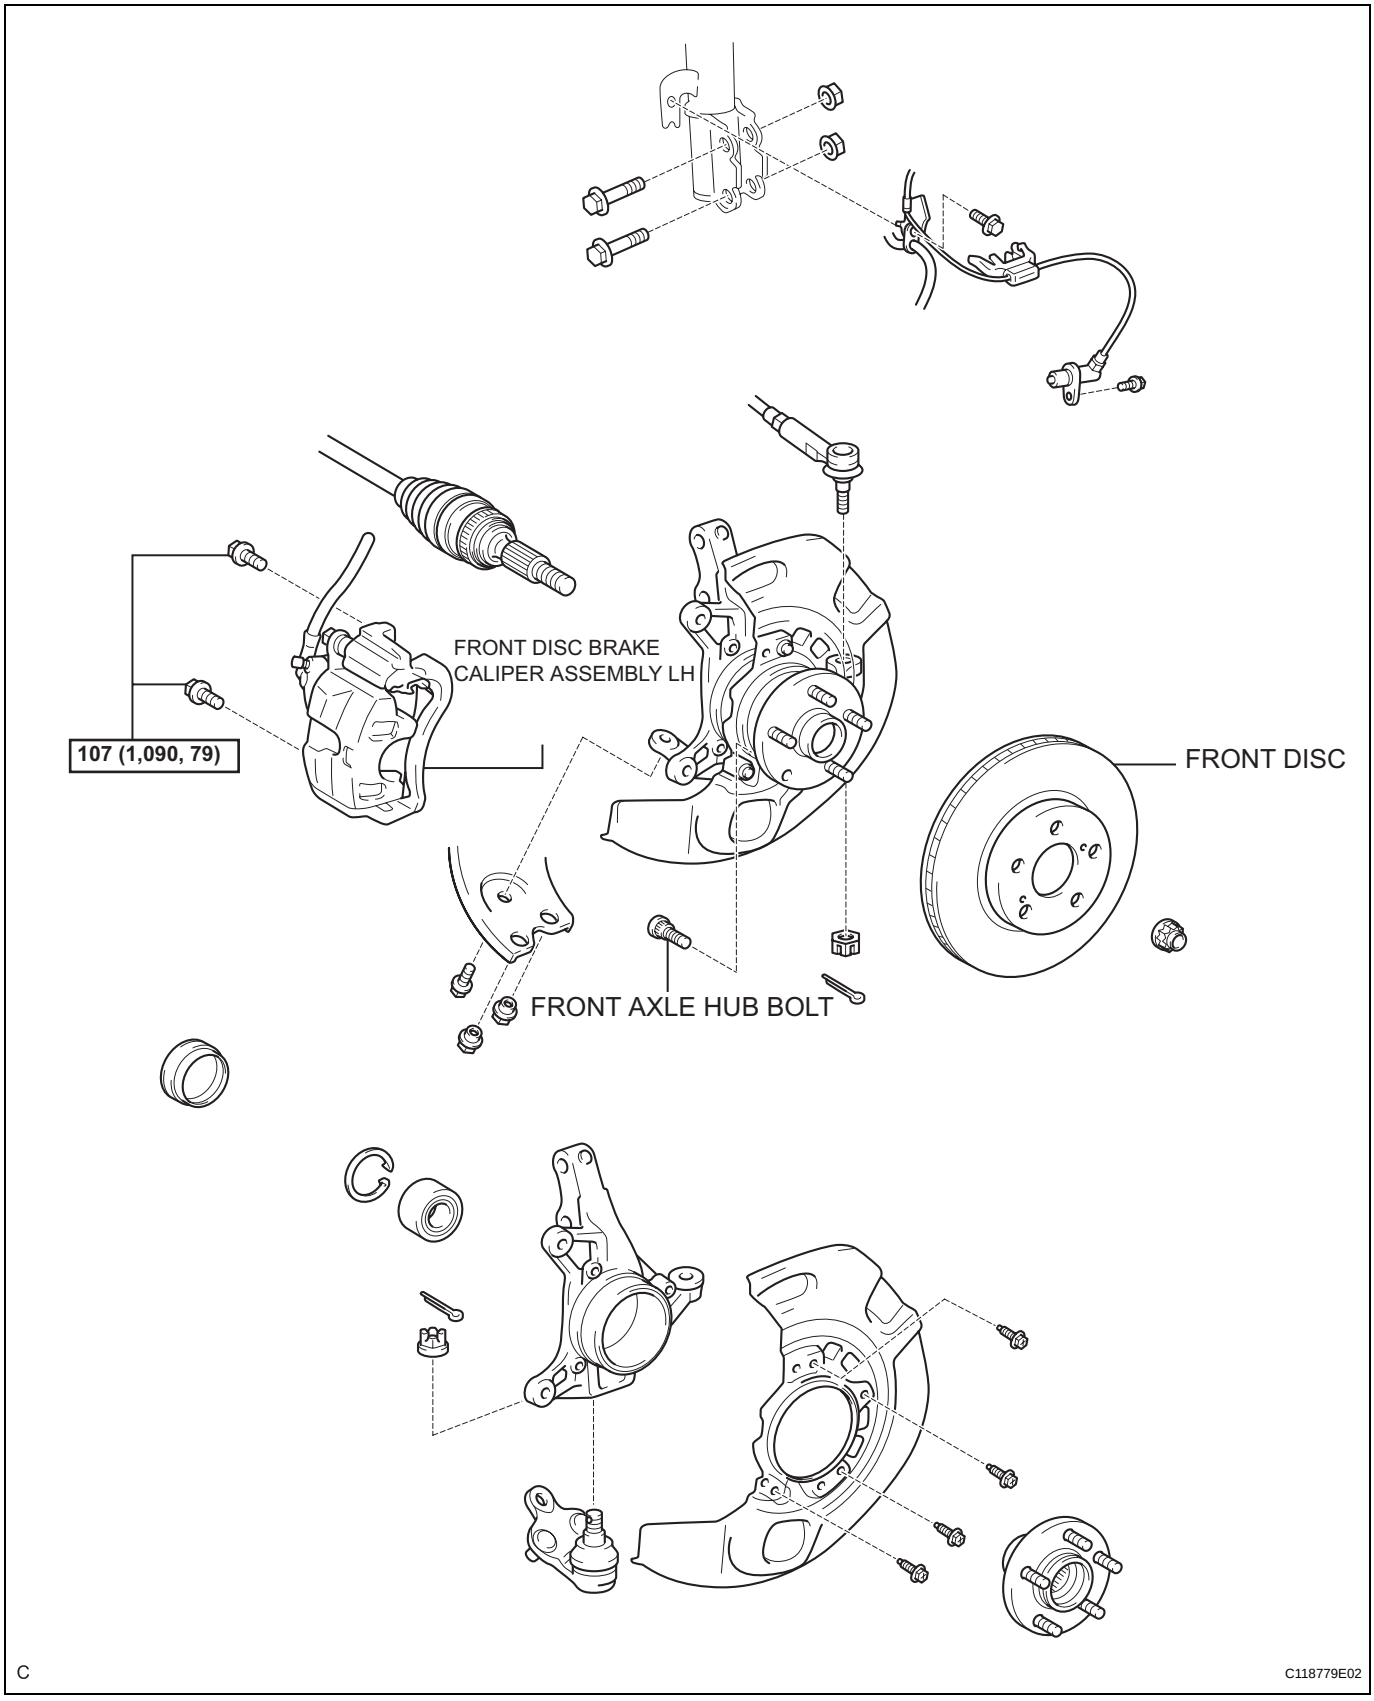

REPLACEMENT

HINT:
Replace the RH side using the same procedures as for the LH side.

1. **REMOVE FRONT WHEEL**
2. **SEPARATE FRONT DISC BRAKE CALIPER ASSEMBLY LH (See page AH-5)**
3. **REMOVE FRONT DISC**
4. **REMOVE FRONT AXLE LH HUB BOLT**
   (a) Temporarily install the 2 nuts and washers to the front axle LH hub bolt as shown in the illustration.
   (b) Using SST(s) and a screwdriver or an equivalent to hold the front axle, remove the front axle LH hub bolt.
   SST 09628-10011

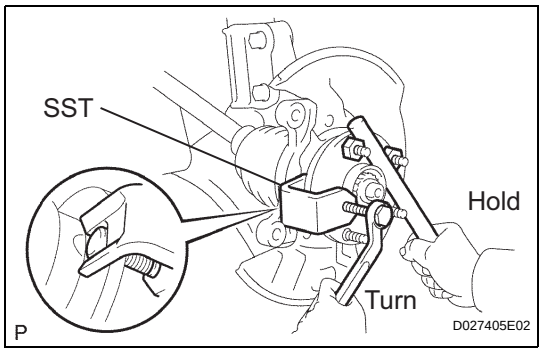

5. **INSTALL FRONT AXLE LH HUB BOLT**
   (a) Install a washer and nut to a new front axle LH hub bolt as shown in the illustration.
   (b) Using a screwdriver to hold the front axle, install the hub bolt by torquing the nut.
6. **INSTALL FRONT DISC**
7. **INSTALL FRONT DISC BRAKE CALIPER ASSEMBLY LH (See page AH-9)**
8. **INSTALL FRONT WHEEL**
   Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)

