# INSTALLATION

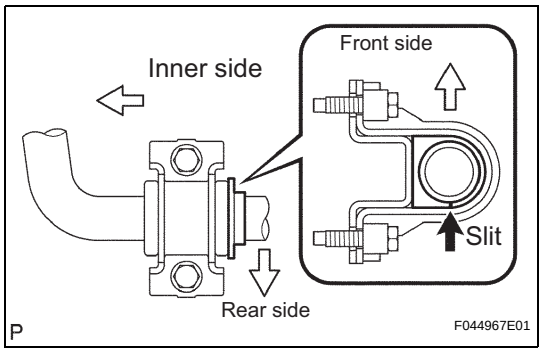


1. **INSTALL FRONT STABILIZER BAR**

2. **INSTALL NO. 1 FRONT STABILIZER BAR BUSHING**
   (a) Install the 2 front stabilizer bar bush No.1 to the stabilizer bar front.
   **NOTICE:**
   **Install the bushings with the slit facing on the rear side of the vehicle.**
   HINT:
   Install the bushing to the outer side of the bushing stopper on the stabilizer bar as shown in the illustration.

3. **INSTALL EXHAUST MANIFOLD SUB-ASSEMBLY RH**
   HINT:
   (See page EM-48)

4. **INSTALL MANIFOLD STAY**
   HINT:
   (See page EM-51)

5. **INSTALL STEERING INTERMEDIATE SHAFT ASSEMBLY**
   HINT:
   (See page PS-21)

6. **INSTALL RACK & PINION POWER STEERING GEAR ASSEMBLY**
   HINT:
   (See page PS-21)

7. **CONNECT PRESSURE FEED TUBE ASSEMBLY**
   HINT:
   (See page PS-21)
   **SST 09023-12701**

8. **INSTALL TIE ROD ASSEMBLY LH**
   HINT:
   (See page AH-4)

9. **INSTALL TIE ROD ASSEMBLY RH**
   HINT:
   Remove the RH side by the same procedures as the LH side.

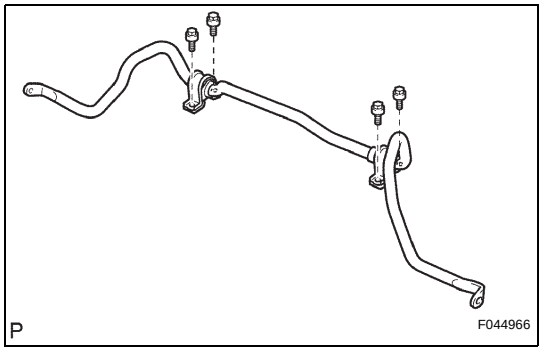


10. **INSTALL NO. 1 FRONT STABILIZER BRACKET LH**
    (a) Install the front stabilizer bracket No.1 LH with the 2 bolts.
    **Torque: 17 N*m (173 kgf*cm, 12 ft.*lbf)**

11. **INSTALL NO. 1 FRONT STABILIZER BRACKET RH**
    HINT:
    Install the RH side by the same procedures as the LH side.

12. **INSTALL CENTER EXHAUST PIPE ASSEMBLY**
    HINT:
    (See page EX-10)

SP

13. **INSTALL FRONT STABILIZER LINK ASSEMBLY LH**
    HINT:
    (See page AH-4)
14. **INSTALL FRONT STABILIZER LINK ASSEMBLY RH**
    HINT:
    Install the RH side by the same procedures as the LH side.
15. **INSTALL FRONT WHEELS**
16. **INSPECT CENTER FRONT WHEEL**
17. **INSPECT STEERING WHEEL CENTER POINT**
18. **ADD POWER STEERING FLUID**
19. **BLEED POWER STEERING FLUID**
    HINT:
    (See page PS-6)
20. **CHECK POWER STEERING FLUID LEAKAGE**
21. **INSPECT AND ADJUST FRONT WHEEL ALIGNMENT**
    HINT:
    (See page SP-4)