
DTC	C2177/77	Initialization not Completed

DESCRIPTION

Initialization is necessary after replacing any of the ECUs, tires with different tire pressure, or tire pressure warning valve and transmitter, after rotating the tires or when a new vehicle is delivered.

DTC No.	DTC Detection Condition	Trouble Area
C2177/77	Initialization is not completed after vehicle speed of 5 mph (8 km/h) or more continues for 20 minutes or more (total).	• Tire pressure warning valve and transmitter • Tire pressure warning ECU • Tire pressure warning antenna and receiver • Wire harness or connector

WIRING DIAGRAM

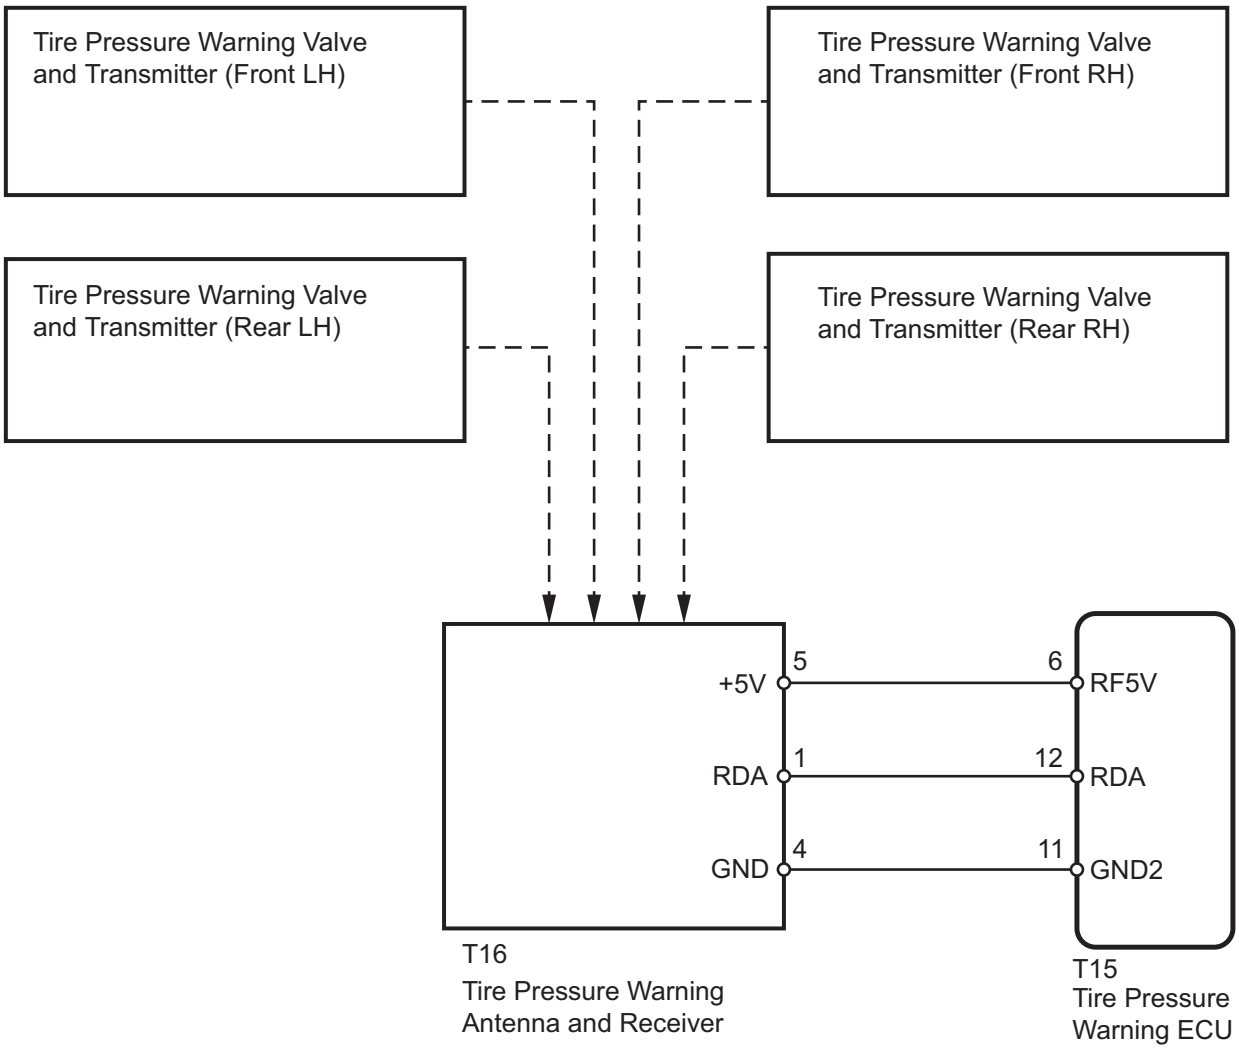

N

B166325E03

TW

INSPECTION PROCEDURE

NOTICE:

- **When replacing the tire pressure warning ECU, read the IDs stored in the old ECU using the intelligent tester and write them down before removal.**
- **It is necessary to perform initialization (See page TW-23) after registration (See page TW-20) of the transmitter IDs into the tire pressure warning ECU after the ECU and/or valve and transmitter have been replaced.**

1	CHECK FREQUENCY RECEIVING CONDITION

(a) Check if the vehicle is not located in areas such as described below:

(1) Facilities or devices that use similar radio frequencies are located in the vicinity of the vehicle.

HINT:

If the vehicle is located in areas described above, the tire pressure warning light may come on after blinking 1 minute only in a particular area.

(2) Devices using similar radio frequencies are used in the vehicle.

OK:

Facilities, or devices that use similar radio frequencies are not located in the vicinity of the vehicle.

HINT:

Radio frequency may be interrupted due to surroundings or devices installed by the user.

NG → **CHECK IF ANY DEVICE IS INSTALLED BY USER**

OK

2	IDENTIFY TRANSMITTER CORRESPONDING TO DTC

(a) Set the tire pressure to the appropriate specified values.

Cold tire inflation pressure

Tire Size	kPa (kgf/cm^2, psi)
P215/65R16	240 (2.4, 35)
P225/60R17	

(b) Make sure that the ignition switch is off.

(c) Connect the intelligent tester to the DLC3.

(d) Turn the ignition switch to the ON position.

(e) Select "TIREPRESS" by following the prompts displayed on the intelligent tester.

TW

TIRE PRESSURE:

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
TIREPRESS1	ID1 tire inflation pressure (Absolute pressure) / min.: 100 kPa (1 kgf/cm^2, 14 psi) max.: 449.35 kPa (4.5 kgf/cm^2, 63 psi)	Actual tire inflation pressure	If 100 kPa (1 kgf/cm^2, 14 psi) for absolute pressure is displayed, the data has not been received.*

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
TIREPRESS2	ID2 tire inflation pressure (Absolute pressure) / min.: 100 kPa (1 kgf/cm^2, 14 psi) max.: 449.35 kPa (4.5 kgf/cm^2, 63 psi)	Actual tire inflation pressure	If 100 kPa (1 kgf/cm^2, 14 psi) for absolute pressure is displayed, the data has not been received.*
TIREPRESS3	ID3 tire inflation pressure (Absolute pressure) / min.: 100 kPa (1 kgf/cm^2, 14 psi) max.: 449.35 kPa (4.5 kgf/cm^2, 63 psi)	Actual tire inflation pressure	If 100 kPa (1 kgf/cm^2, 14 psi) for absolute pressure is displayed, the data has not been received.*
TIREPRESS4	ID4 tire inflation pressure (Absolute pressure) / min.: 100 kPa (1 kgf/cm^2, 14 psi) max.: 449.35 kPa (4.5 kgf/cm^2, 63 psi)	Actual tire inflation pressure	If 100 kPa (1 kgf/cm^2, 14 psi) for absolute pressure is displayed, the data has not been received.*

HINT:

*: It may take about 5 to 6 minutes until the values are displayed. If the values are not displayed after a few minutes, perform troubleshooting according to the inspection procedure for DTCs C2121/21 to C2124/24 (See page TW-42).

(f) Rapidly reduce the tire pressure for each wheel at least 40 kPa (0.4 kg/cm^2, 5.8 psi) within 30 seconds.

(g) Check the DATA LIST.

NOTICE:

- **It takes about 5 to 6 minutes to display the updated tire pressure data.**
- **When no "TIREPRESS" data has changed, reset the tire pressure to the appropriate specified value and rotate the tire 90 to 270 degrees. Then rapidly release the tire pressure and recheck it.**
- **Record the transmitter ID of which "TIREPRESS" data corresponds to each tire.**

(h) After confirming that one of "TIREPRESS" data for one tire (ID1 to ID4) has changed, repeat this procedure one by one. Identify the transmitter that corresponds to a DTC.

Result


Result	Proceed to
One or more of transmitters abnormal	A
All normal	B
All abnormal	C

A	Go to step 4
B	END


TW C

3 CHECK HARNESS AND CONNECTOR (ECU - RECEIVER)

Front view of wire harness connector:
(to Tire Pressure Warning ECU)

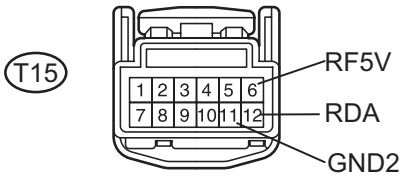

Front view of wire harness connector:
(to Tire Pressure Warning Antenna and Receiver)

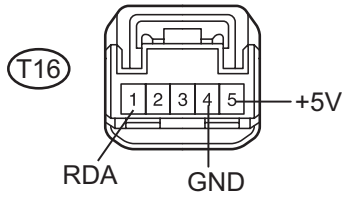

P C148708E15

(a) Disconnect the T15 ECU connector.
(b) Disconnect the T16 receiver connector.
(c) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Condition	Specified Condition
T15-12 (RDA) - T16-1 (RDA)	Always	Below 1 Ω
T15-11 (GND2) - T16-4 (GND)		
T15-6 (RF5V) - T16-5 (+5V)		
T15-12 (RDA) - Body ground		10 kΩ or higher
T15-11 (GND2) - Body ground		
T15-6 (RF5V) - Body ground		

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK


4 INSPECT TIRE PRESSURE WARNING VALVE AND TRANSMITTER

(a) Make sure that the ignition switch is off.
(b) Connect the intelligent tester to the DLC3.
(c) Turn the ignition switch to the ON position.
(d) Select REGIT ID CODE by following the prompts displayed on the intelligent tester.

TIRE PRESSURE:

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
REGIT ID1 CODE	Registered ID1 code/ min.: 0, max.: FFFFFF*	The ID No. registered in the transmitter ID1 is displayed	*: Displayed only when the ID No. is not registered.
REGIT ID2 CODE	Registered ID2 code/ min.: 0, max.: FFFFFF*	The ID No. registered in the transmitter ID2 is displayed	*: Displayed only when the ID No. is not registered.
REGIT ID3 CODE	Registered ID3 code/ min.: 0, max.: FFFFFF*	The ID No. registered in the transmitter ID3 is displayed	*: Displayed only when the ID No. is not registered.
REGIT ID4 CODE	Registered ID4 code/ min.: 0, max.: FFFFFF*	The ID No. registered in the transmitter ID4 is displayed	*: Displayed only when the ID No. is not registered.

(e) Check the ID number on the identified transmitter by removing it from the tire and wheel.

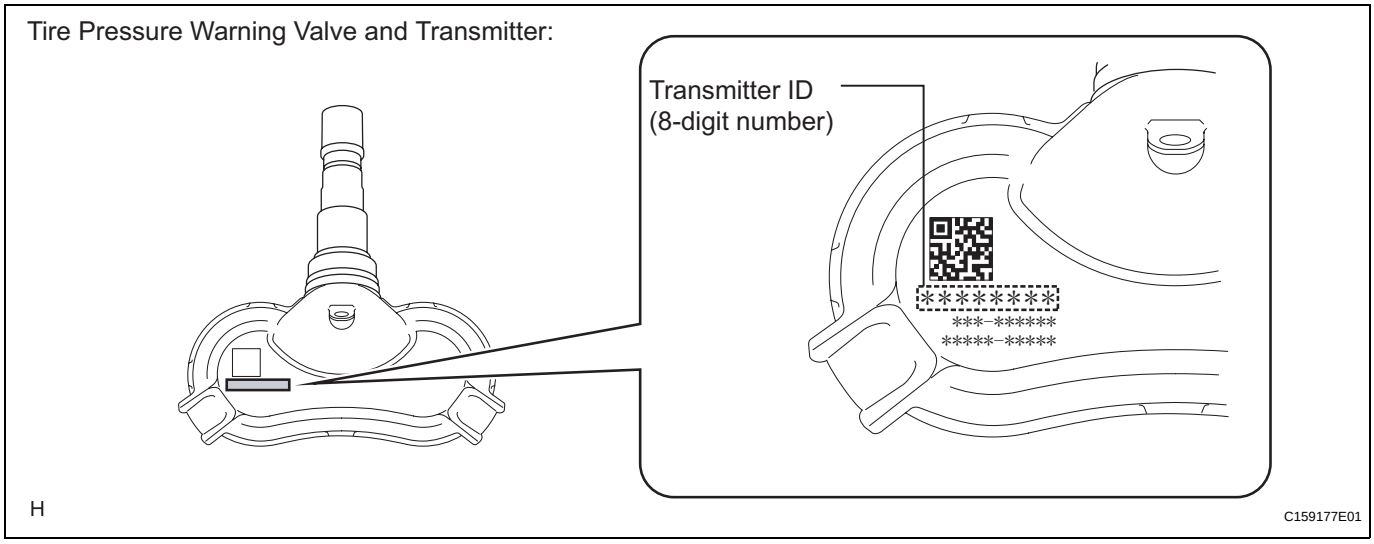

(f) Confirm that the ID number on the transmitter and recorded transmitter ID match.

Result

Result	Proceed to
Match	A
Do not match	B

B → **Go to step 6**

A

5 REPLACE TIRE PRESSURE WARNING VALVE AND TRANSMITTER

(a) Replace the tire pressure warning valve and transmitter (See page TW-84).

NEXT

6 REGISTRATION OF TRANSMITTER ID

(a) Perform registration (See page TW-20).

NEXT

7 PERFORM INITIALIZATION

(a) Perform initialization (See page TW-23).

NEXT

8 READ VALUE ON DATA LIST

(a) Make sure that the ignition switch is off.
(b) Connect the intelligent tester to the DLC3.
(c) Turn the ignition switch to the ON position.

(d) Select "TIREPRESS" by following the prompts displayed on the intelligent tester.

TIRE PRESSURE:

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
TIREPRESS1	ID1 tire inflation pressure (Absolute pressure) / min.: 100 kPa (1 kgf/cm^2, 14 psi) max.: 449.35 kPa (4.5 kgf/cm^2, 63 psi)	Actual tire inflation pressure	If 100 kPa (1 kgf/cm^2, 14 psi) for absolute pressure is displayed, the data has not been received.*
TIREPRESS2	ID2 tire inflation pressure (Absolute pressure) / min.: 100 kPa (1 kgf/cm^2, 14 psi) max.: 449.35 kPa (4.5 kgf/cm^2, 63 psi)	Actual tire inflation pressure	If 100 kPa (1 kgf/cm^2, 14 psi) for absolute pressure is displayed, the data has not been received.*
TIREPRESS3	ID3 tire inflation pressure (Absolute pressure) / min.: 100 kPa (1 kgf/cm^2, 14 psi) max.: 449.35 kPa (4.5 kgf/cm^2, 63 psi)	Actual tire inflation pressure	If 100 kPa (1 kgf/cm^2, 14 psi) for absolute pressure is displayed, the data has not been received.*
TIREPRESS4	ID4 tire inflation pressure (Absolute pressure) / min.: 100 kPa (1 kgf/cm^2, 14 psi) max.: 449.35 kPa (4.5 kgf/cm^2, 63 psi)	Actual tire inflation pressure	If 100 kPa (1 kgf/cm^2, 14 psi) for absolute pressure is displayed, the data has not been received.*

HINT:
*: It may take about 5 to 6 minutes until the values are displayed. If the values are not displayed after a few minutes, perform troubleshooting according to the inspection procedure for DTCs C2121/21 to C2124/24 (See page TW-42).

Result

Result	Proceed to
All tire pressure readings are equal to specified values.	**A**
Tire pressure values are not displayed.	**B**

A → **END**

B

9 REPLACE TIRE PRESSURE WARNING ANTENNA AND RECEIVER

(a) Replace the tire pressure warning antenna and receiver (See page TW-81).

NEXT

10 READ VALUE ON DATA LIST

(a) Make sure that the ignition switch is off.
(b) Connect the intelligent tester to the DLC3.
(c) Turn the ignition switch to the ON position.

(d) Select "TIREPRESS" by following the prompts displayed on the intelligent tester.

TIRE PRESSURE:

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
TIREPRESS1	ID1 tire inflation pressure (Absolute pressure) / min.: 100 kPa (1 kgf/cm^2, 14 psi) max.: 449.35 kPa (4.5 kgf/cm^2, 63 psi)	Actual tire inflation pressure	If 100 kPa (1 kgf/cm^2, 14 psi) for absolute pressure is displayed, the data has not been received.*
TIREPRESS2	ID2 tire inflation pressure (Absolute pressure) / min.: 100 kPa (1 kgf/cm^2, 14 psi) max.: 449.35 kPa (4.5 kgf/cm^2, 63 psi)	Actual tire inflation pressure	If 100 kPa (1 kgf/cm^2, 14 psi) for absolute pressure is displayed, the data has not been received.*
TIREPRESS3	ID3 tire inflation pressure (Absolute pressure) / min.: 100 kPa (1 kgf/cm^2, 14 psi) max.: 449.35 kPa (4.5 kgf/cm^2, 63 psi)	Actual tire inflation pressure	If 100 kPa (1 kgf/cm^2, 14 psi) for absolute pressure is displayed, the data has not been received.*
TIREPRESS4	ID4 tire inflation pressure (Absolute pressure) / min.: 100 kPa (1 kgf/cm^2, 14 psi) max.: 449.35 kPa (4.5 kgf/cm^2, 63 psi)	Actual tire inflation pressure	If 100 kPa (1 kgf/cm^2, 14 psi) for absolute pressure is displayed, the data has not been received.*

HINT:
*: It may take about 5 to 6 minutes until the values are displayed. If the values are not displayed after a few minutes, perform troubleshooting according to the inspection procedure for DTCs C2121/21 to C2124/24 (See page TW-42).

Result

Result	Proceed to
All tire pressure readings are equal to specified values.	**A**
Tire pressure values are not displayed.	**B**

B → **REPLACE TIRE PRESSURE WARNING ECU (See page TW-87)**

A

END