

FRONT SPEED SENSOR

COMPONENTS

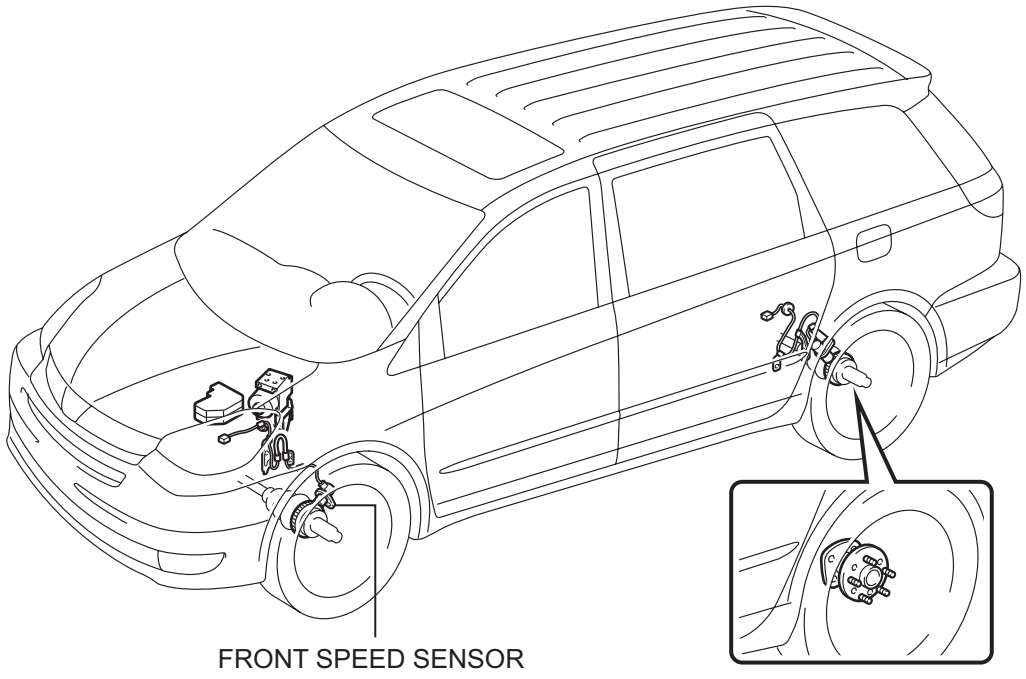

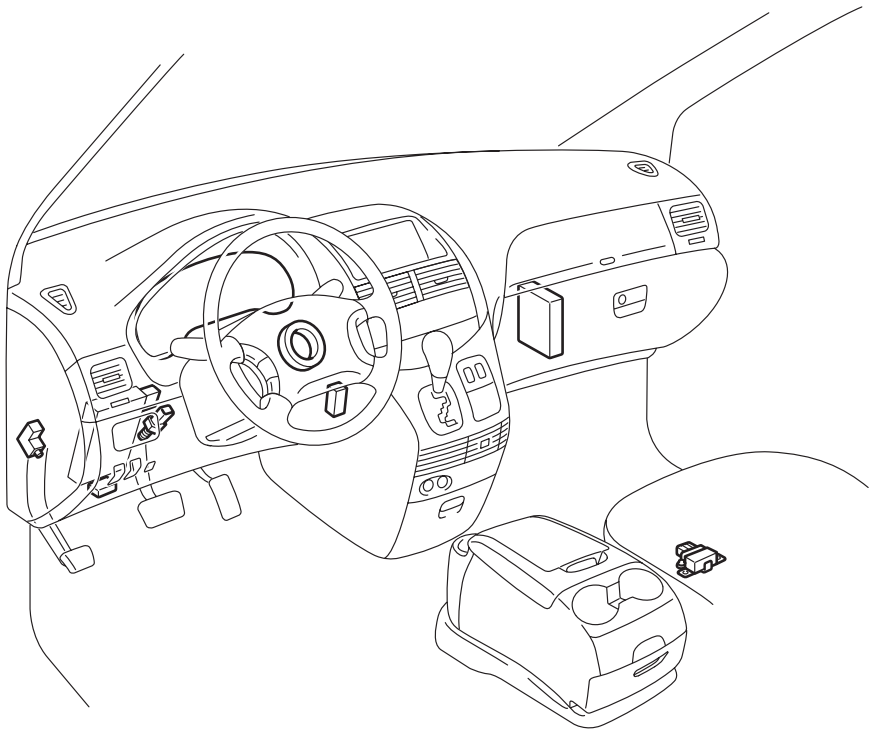


N


C119321E10

REMOVAL


HINT:
Remove the RH side by same procedures with LH side.

1. **REMOVE FRONT WHEEL**
2. **REMOVE FRONT FENDER LINER LH**
3. **REMOVE FRONT SPEED SENSOR LH**
   (a) Disconnect the speed sensor connector.
   (b) Remove the sensor harness and clamp from the body.

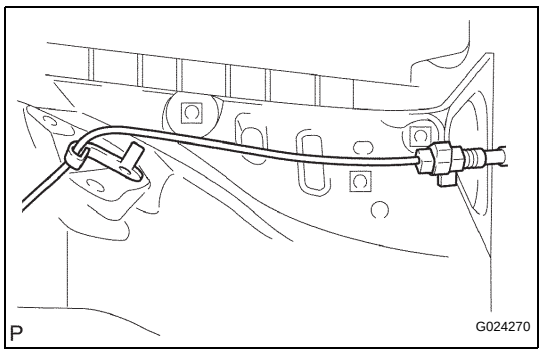

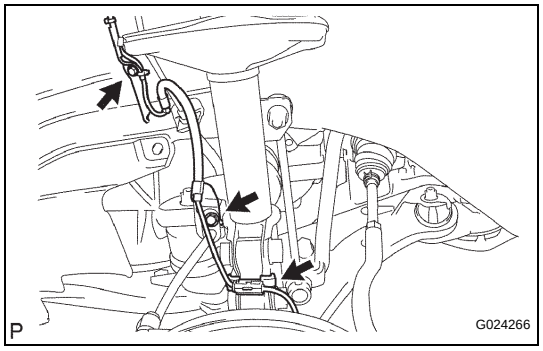

   (c) Remove the 2 clamp bolts holding the sensor harness and clamp from the body and shock absorber.

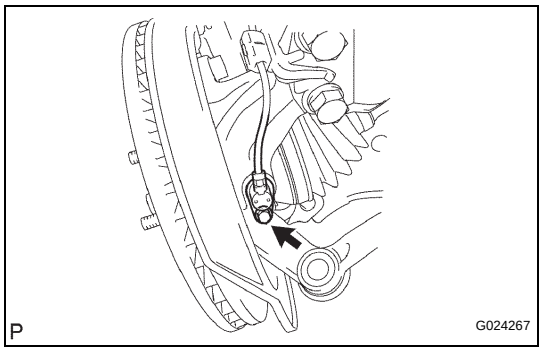

   (d) Remove the bolt and speed sensor front LH.
   NOTICE:
   Keep the tip of the speed sensor front LH.