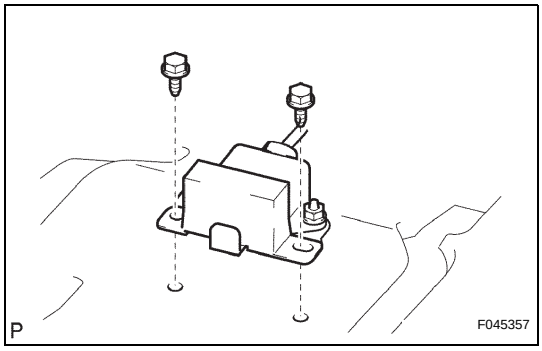

INSTALLATION

1. **INSTALL YAW RATE AND DECELERATION SENSOR**
   (a) Connect the yawrate sensor connector.
   (b) Install the yawrate sensor with the 2 bolts.
   Torque: 13 N*m (136 kgf*cm, 10 ft.*lbf)
2. **INSTALL COWL SIDE TRIM BOARD RH**
   (a) Install the nut with the cowl side trim board plate RH.
3. **INSTALL FRONT DOOR SCUFF PLATE RH**
4. **INSTALL FRONT SEAT ASSEMBLY RH**
   HINT:
   See page SE-45.
5. **PERFORM YAW RATE AND DECELERATION SENSOR ZERO POINT CALIBRATION**
   HINT:
   See page BC-70.
6. **CHECK ABS SPEED SENSOR SIGNAL**
   HINT:
   See page BC-82.