

REAR SPEED SENSOR (for 2WD)

COMPONENTS

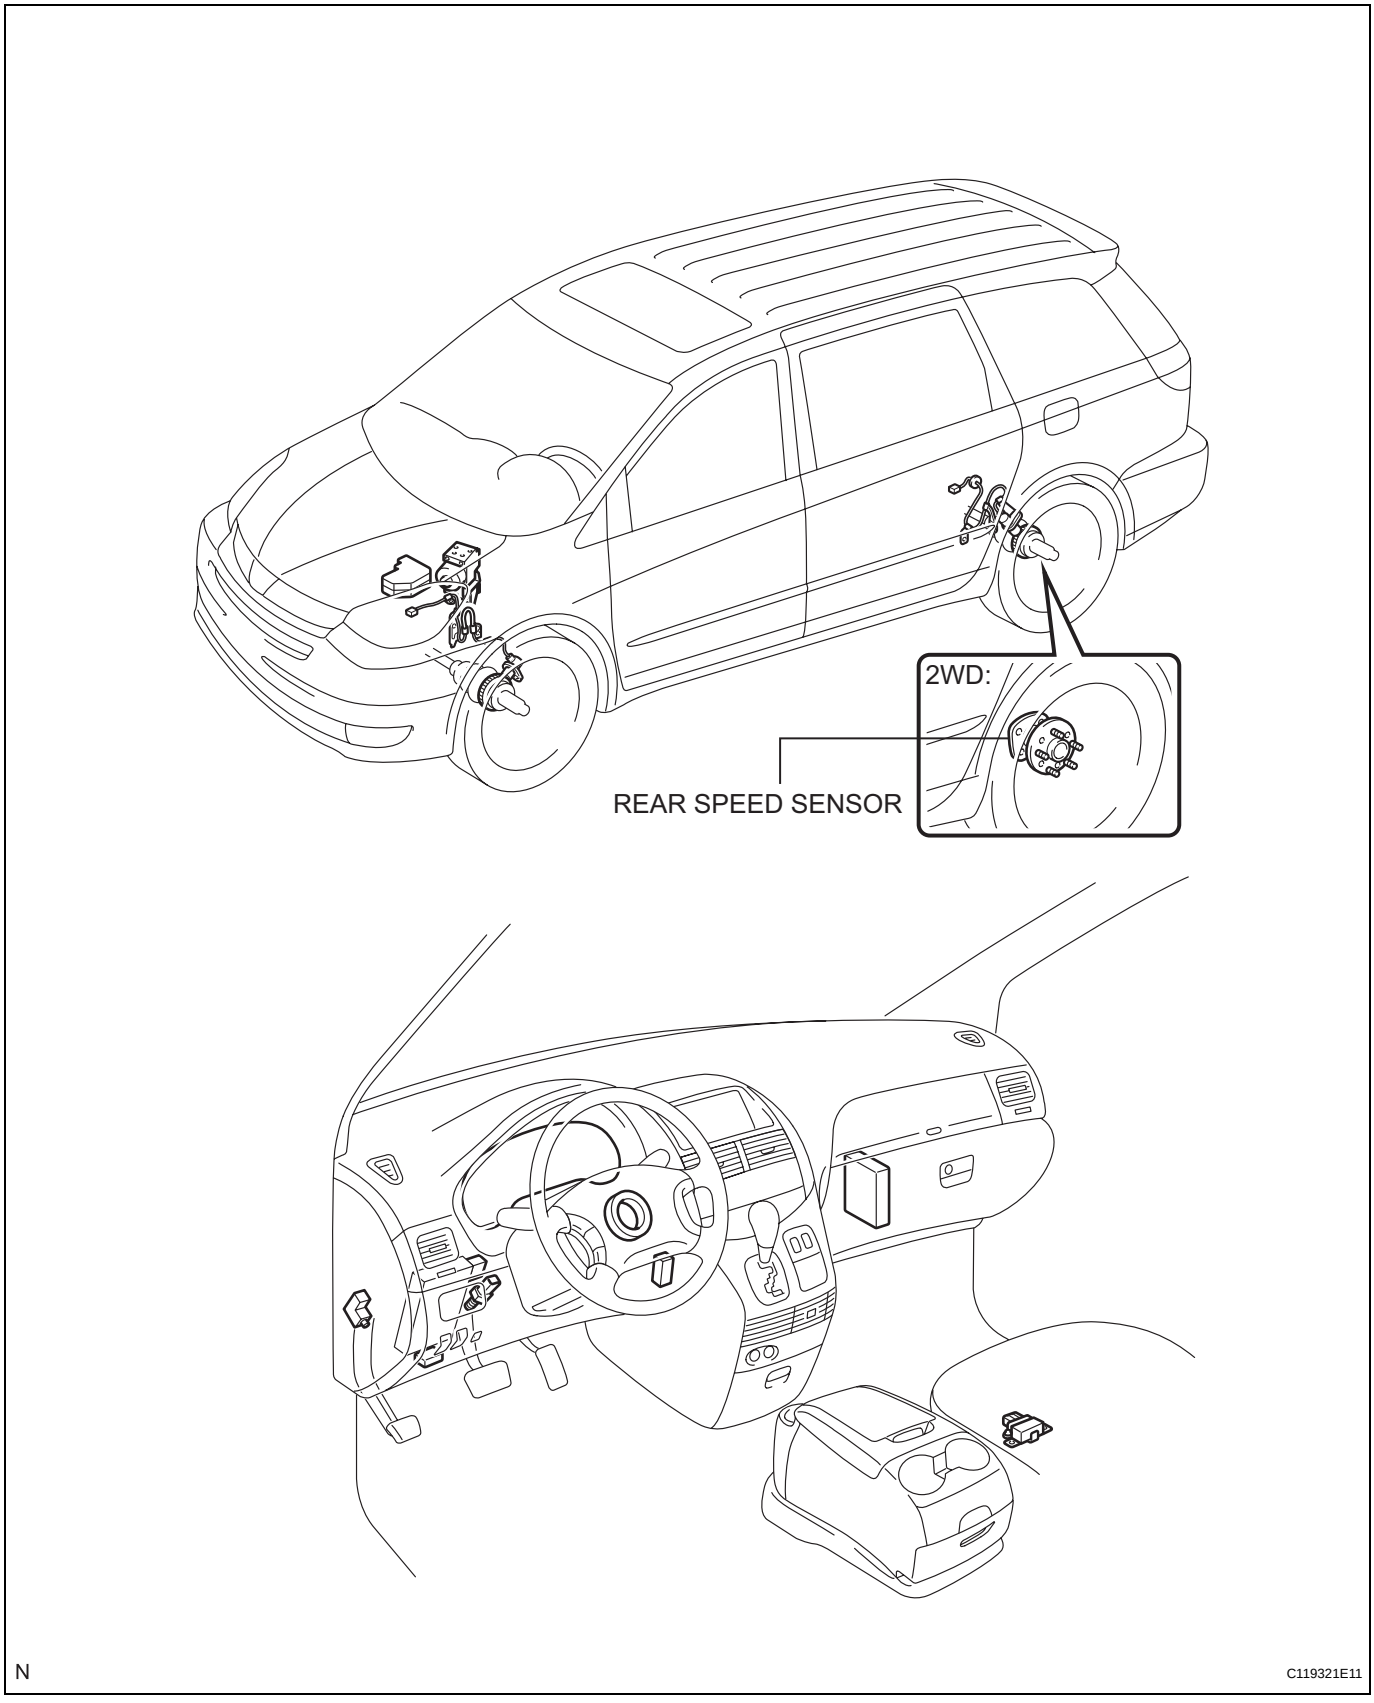


REMOVAL

HINT:
Remove the RH by the same procedure as the LH side.

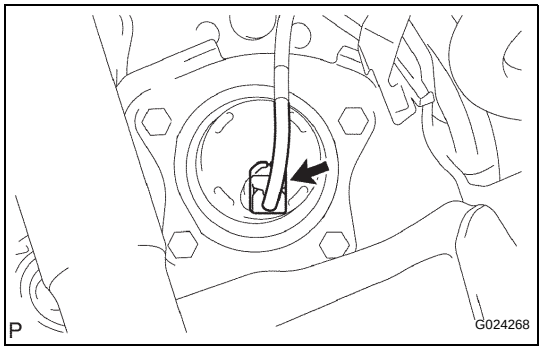

1. **REMOVE REAR WHEEL**
2. **SEPARATE SKID CONTROL SENSOR WIRE**
   (a) Disconnect the connector from the skid control sensor.
3. **REMOVE REAR BRAKE DRUM SUB-ASSEMBLY (for Drum Type)**
   (a) Place matchmarks on the rear brake drum sub-assembly and the axle hub.
   (b) Remove the rear brake drum sub-assembly.
4. **REMOVE REAR DISC BRAKE CALIPER ASSEMBLY LH (for Disc Type)**
   (a) Remove the 2 bolts and rear brake caliper assembly LH.
5. **REMOVE REAR DISC (for Disc Type)**
   (a) Place matchmarks on the rear disc and the axle hub.
   (b) Remove the rear disc.
6. **REMOVE REAR AXLE HUB & BEARING ASSEMBLY LH (See page AH-16)**
7. **REMOVE REAR SPEED SENSOR**
   (a) Mount the rear axle hub in a soft jaw vise.
   NOTICE:
   Replace the axle hub assembly if it is dropped or a strong shock is given to it.
   (b) Using a pin punch and hammer, drive out the 2 pins and remove the 2 attachments from SST.

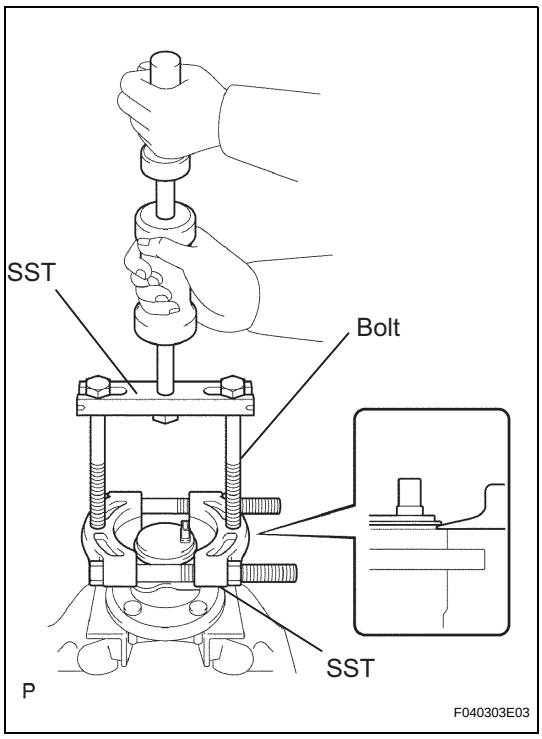

   (c) Using SST and 2 bolts (Diameter: 12 mm, pitch: 1.5 mm), remove the skid control sensor from the rear axle hub.
   SST 09520-00031 (09520-00040), 09521-00020, 09950-00020
   NOTICE:
   - **If a damage is inflicted to the sensor rotor is damaged, replace the axle hub assembly.**
   - **Do not scratch the contacting surface of the axle hub and speed sensor.**