YAW RATE AND DECELERATION SENSOR

COMPONENTS

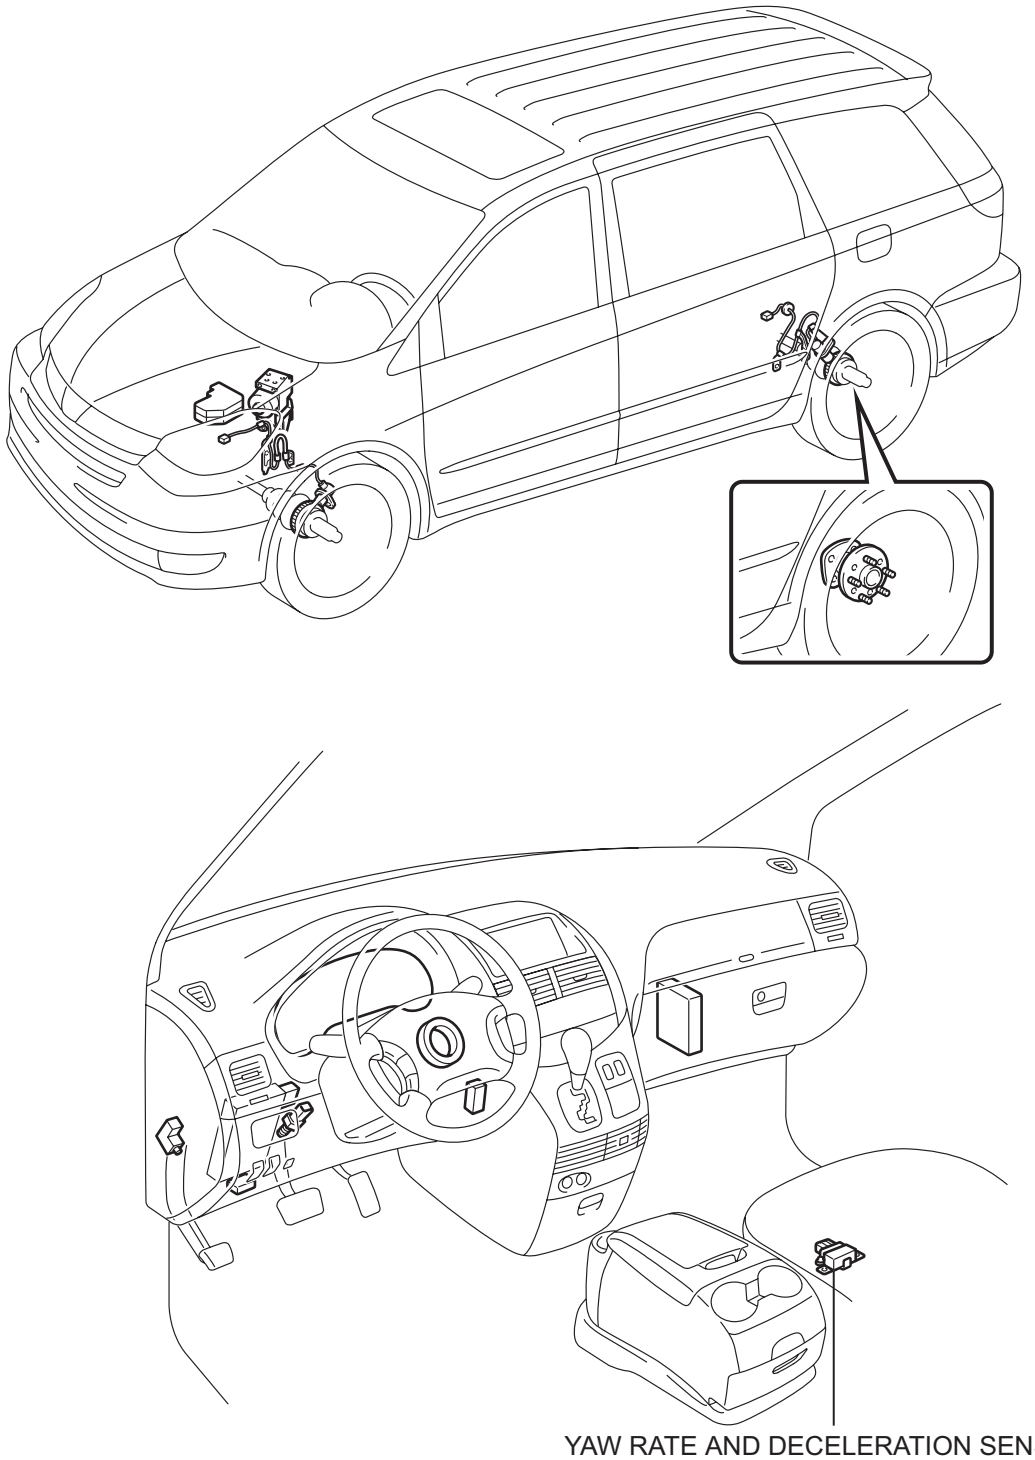

N

C119321E13

REMOVAL

HINT:

- Don't use the dropped or damaged yawrate sensor.
- Free from the foreign matters between yaerate sensor bracket and body.
- Make sure the sensor direction.

1. REMOVE FRONT SEAT ASSEMBLY RH

HINT:

See page SE-40.

2. REMOVE FRONT DOOR SCUFF PLATE RH

3. REMOVE COWL SIDE TRIM BOARD RH

(a) Remove the nut and cowl side trim board plate RH.

4. REMOVE YAW RATE AND DECELERATION SENSOR

(a) Disconnect the yawrate sensor connector.

(b) Remove the 2 bolts and yawrate sensor.

