


REMOVAL

1. **SEPARATE BATTERY NEGATIVE TERMINAL**
2. **REMOVE FRONT DOOR SCUFF PLATE LH**
3. **REMOVE COWL SIDE TRIM BOARD LH**
4. **REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER LH**
   (a) Remove the 2 bolts and instrument panel finish panel sub-assembly lower LH.
5. **REMOVE INSTRUMENT PANEL SAFETY PAD INSERT SUB-ASSEMBLY NO. 1**
   (a) Remove the 4 bolts and instrument panel safety pad insert sub-assembly No. 1.
6. **LOOSEN BRAKE PEDAL SHAFT**
   (a) Loosen the 2 brake pedal shafts.

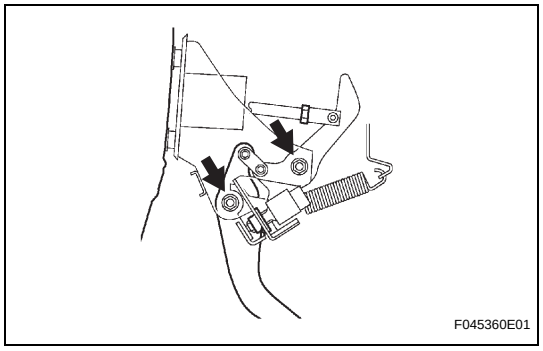

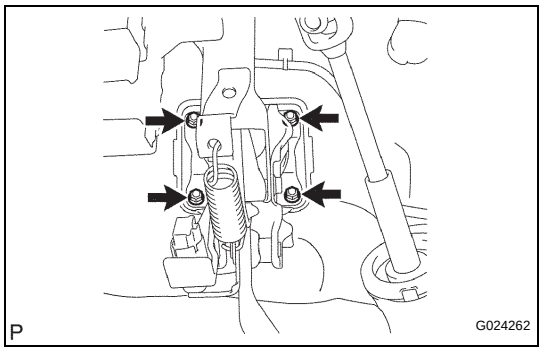

7. **REMOVE BRAKE PEDAL SUPPORT ASSEMBLY**
   (a) Remove the 4 nuts and brake pedal support sub-assembly.
   (b) Using needle-nose pliers, remove the tension spring.
   (c) Remove the clip and clevis pin from the brake pedal lever.

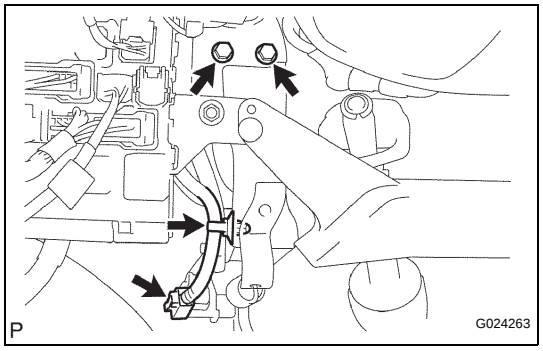

   (d) Remove the 2 bolts from the brake pedal bracket No. 3.
   (e) Remove the stop light switch harness clamp from the brake pedal support sub-assembly.
   (f) Disconnect the stop light switch connector.

DISASSEMBLY

1. REMOVE STOP LIGHT SWITCH ASSEMBLY

(a) Turn the stop light switch assembly counterclockwise and remove the stop light switch assembly.

(b) Remove the stop light switch mounting adjuster from the brake pedal support sub-assembly.

2. REMOVE STOP LIGHT SWITCH CUSHION

(a) Remove the stop light switch cushion from the brake pedal sub-assembly.

3. REMOVE BRAKE PEDAL


(a) Remove the 2 brake pedal shafts, 2 nuts and brake pedal from the brake pedal support sub-assembly.

4. REMOVE BRAKE PEDAL BUSH

(a) Remove the 4 brake pedal bushes from the brake pedal.

5. REMOVE BRAKE PEDAL SHAFT COLLAR

(a) Remove the 2 brake pedal shaft collars from the brake pedal.

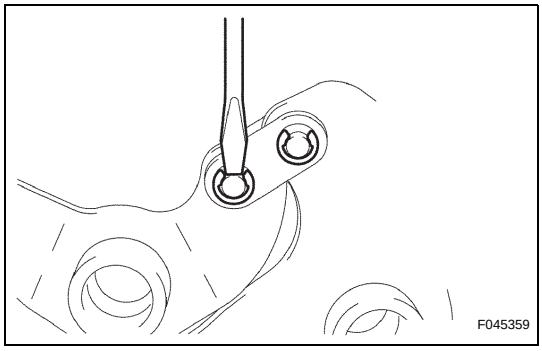

6. REMOVE PUSH ROD PIN

(a) Using a screwdriver, remove the 2 E-rings, 2 push rod pins and 2 plates from the brake pedal.

(b) Remove the 2 push rod bushes.

7. REMOVE BRAKE PEDAL PAD

(a) Remove the brake pedal pad to the brake pedal sub-assembly.