
REMOVAL

NOTICE:
- **Do not adjust the brake booster push rod.**
- **Do not change the combination of the diameter converting unit and brake.**

1. **REMOVE FRONT WHEEL**
2. **DRAIN BRAKE FLUID**
   NOTICE:
   Wash the brake fluid off immediately if it attaches to any painted surfaces.
3. **SEPARATE BATTERY NEGATIVE TERMINAL**
4. **REMOVE FRONT DOOR SCUFF PLATE LH**
5. **REMOVE COWL SIDE TRIM BOARD LH**
   (a) Remove the nut and cowl trim board plate LH.
6. **REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER LH**
   (a) Remove the 2 bolts and instrument panel finish panel sub-assembly lower LH.
7. **REMOVE INSTRUMENT PANEL SAFETY PAD INSERT SUB-ASSEMBLY NO. 1**
   (a) Remove the 4 bolts and instrument panel safety pad insert sub-assembly No. 1.
8. **REMOVE COWL TOP PANEL SUB-ASSEMBLY OUTER FRONT (See page SP-13)**
9. **REMOVE AIR CLEANER ASSEMBLY WITH HOSE**
10. **REMOVE BRAKE ACTUATOR ASSEMBLY (w/o VSC)**
    SST 09023-00101
    HINT:
    See page BC-184.
11. **REMOVE ABS & TRACTION ACTUATOR ASSEMBLY (w/ VSC)**
    SST 09023-00101
    HINT:
    See page BC-179.
12. **REMOVE BRAKE LINE**
    (a) Remove the front brake tube No. 1, front brake tube No. 2, front brake tube No. 3 and front brake tube No. 4.
    (b) Remove the rear brake tube No. 1 and rear brake tube No. 2.
13. **REMOVE PUSH ROD PIN**
    (a) Remove the push rod pin from the brake booster push rod.
14. **REMOVE BRAKE MASTER CYLINDER ASSEMBLY**
    (a) Slide the clip and disconnect the brake master cylinder reservoir hose from the brake master cylinder union.

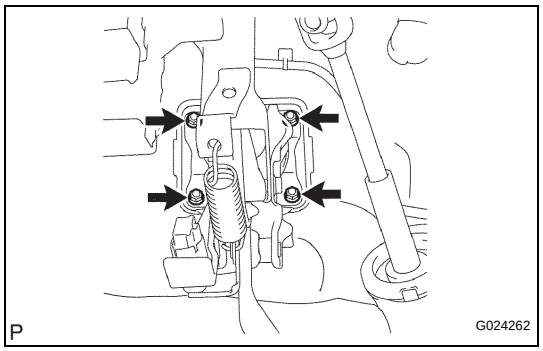

(b) Slide the clip and disconnect the vacuum hose from the brake vacuum check valve assembly.

(c) Remove the 4 nuts and clevis.

(d) Pull out the brake booster with master cylinder.

15. REMOVE BRAKE BOOSTER GASKET

(a) Remove the brake booster gasket from the brake booster with master cylinder.

16. REMOVE BRAKE VACUUM CHECK VALVE ASSEMBLY

(a) Remove the brake vacuum check valve assembly and check valve grommet from the brake booster assembly.