BRAKE MASTER CYLINDER

COMPONENTS

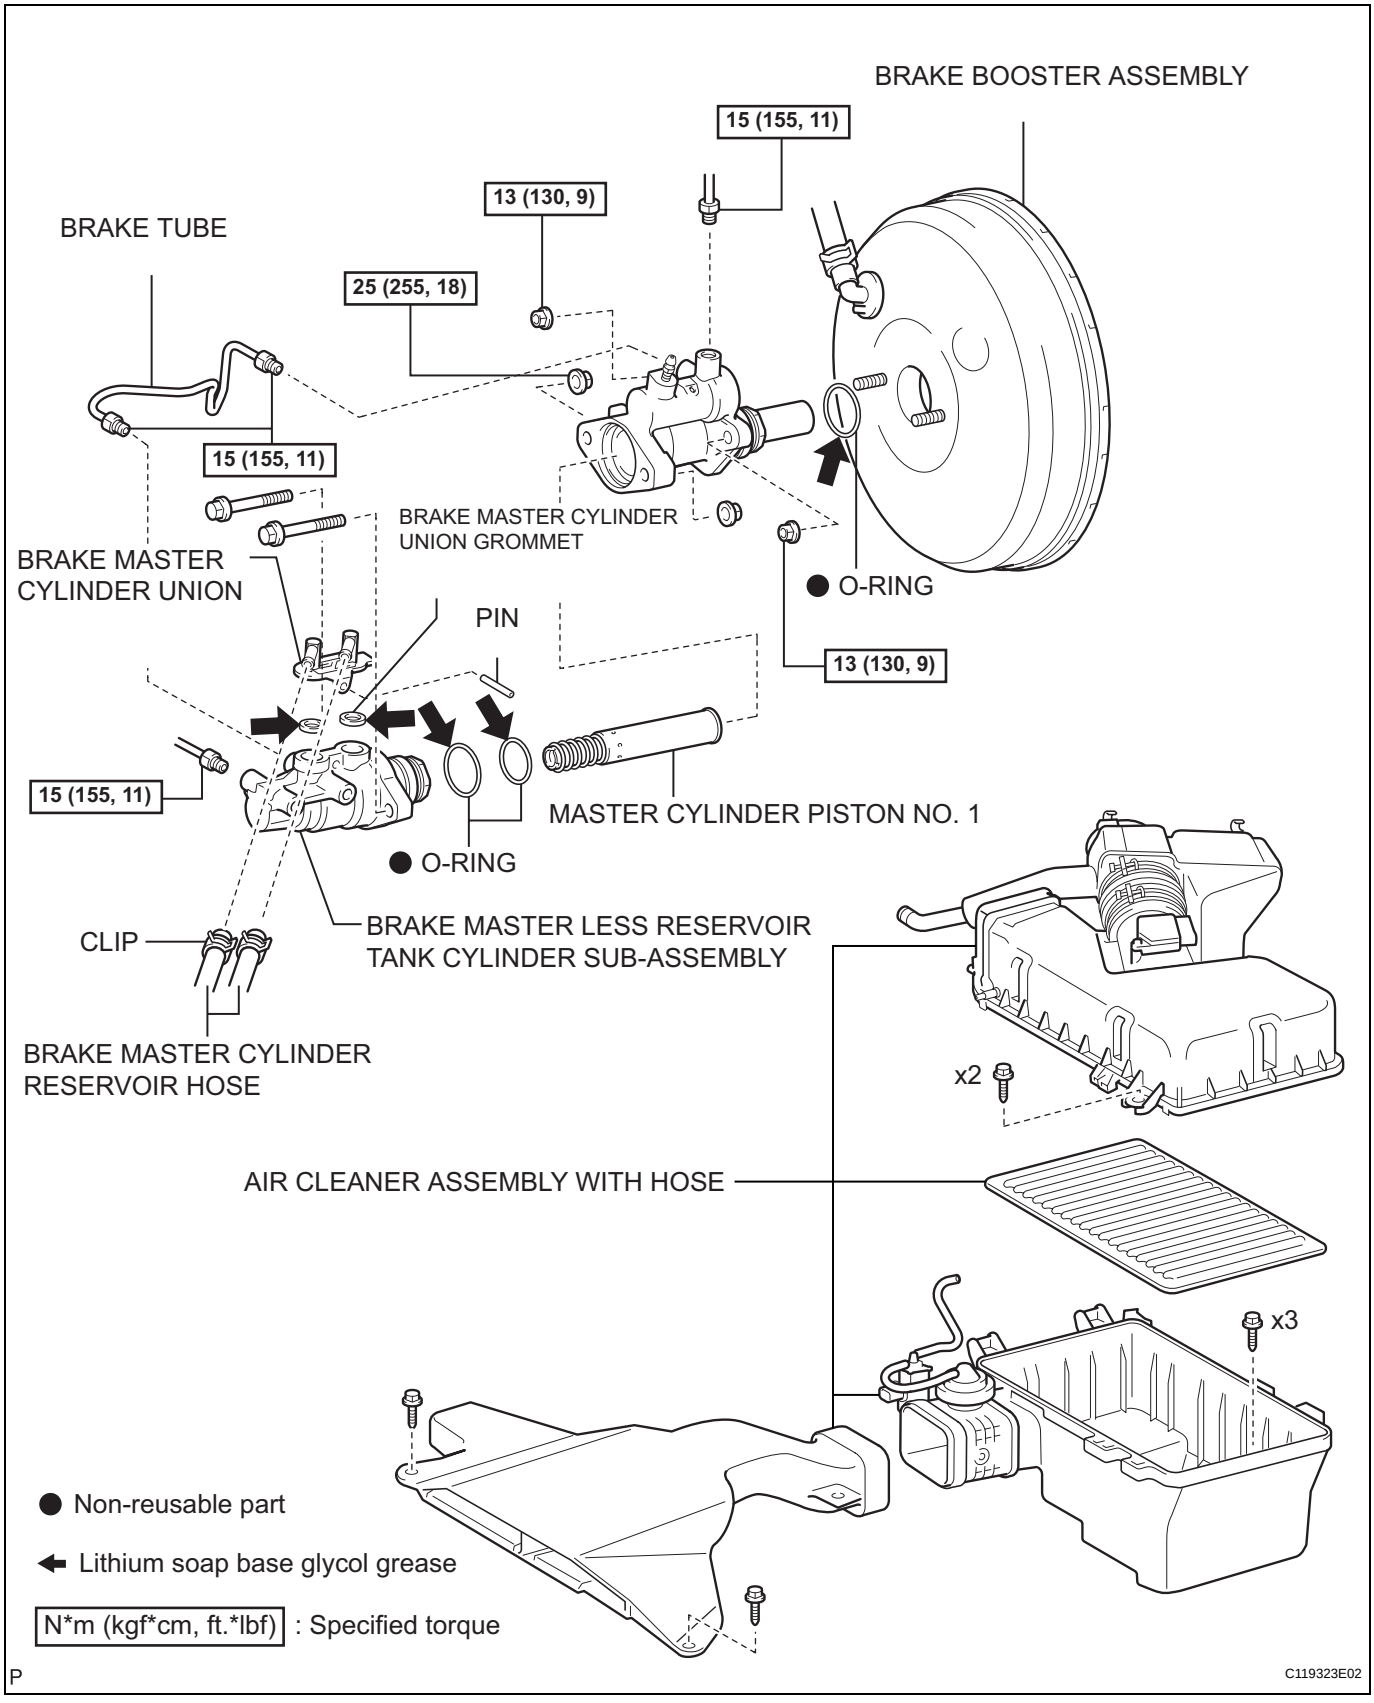

REMOVAL

NOTICE:

- **Do not adjust the brake booster push rod.**
- **Do not change the combination of the diameter converting unit and brake.**

1. **DRAIN BRAKE FLUID**
   NOTICE:
   Wash the brake fluid off immediately if it attaches to any painted surfaces.
2. **SEPARATE BATTERY NEGATIVE TERMINAL**
3. **REMOVE AIR CLEANER ASSEMBLY WITH HOSE**
4. **REMOVE COWL TOP PANEL SUB-ASSEMBLY OUTER FRONT (See page SP-13)**
5. **REMOVE BRAKE MASTER CYLINDER**
   (a) Using SST, disconnect the 2 brake tubes from the brake master cylinder assembly.
   SST 09023-00101
   (b) Slide the clip and disconnect the brake master cylinder reservoir hose.

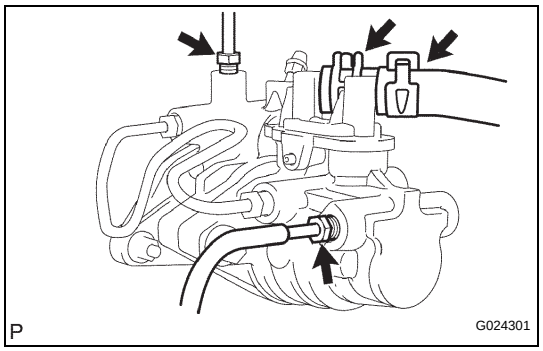

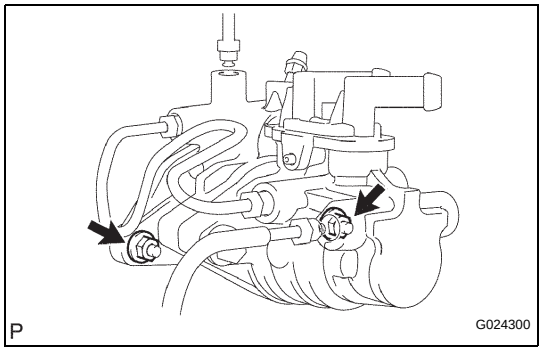

   (c) Remove the 2 nuts and brake master cylinder.