
FRONT BRAKE

COMPONENTS

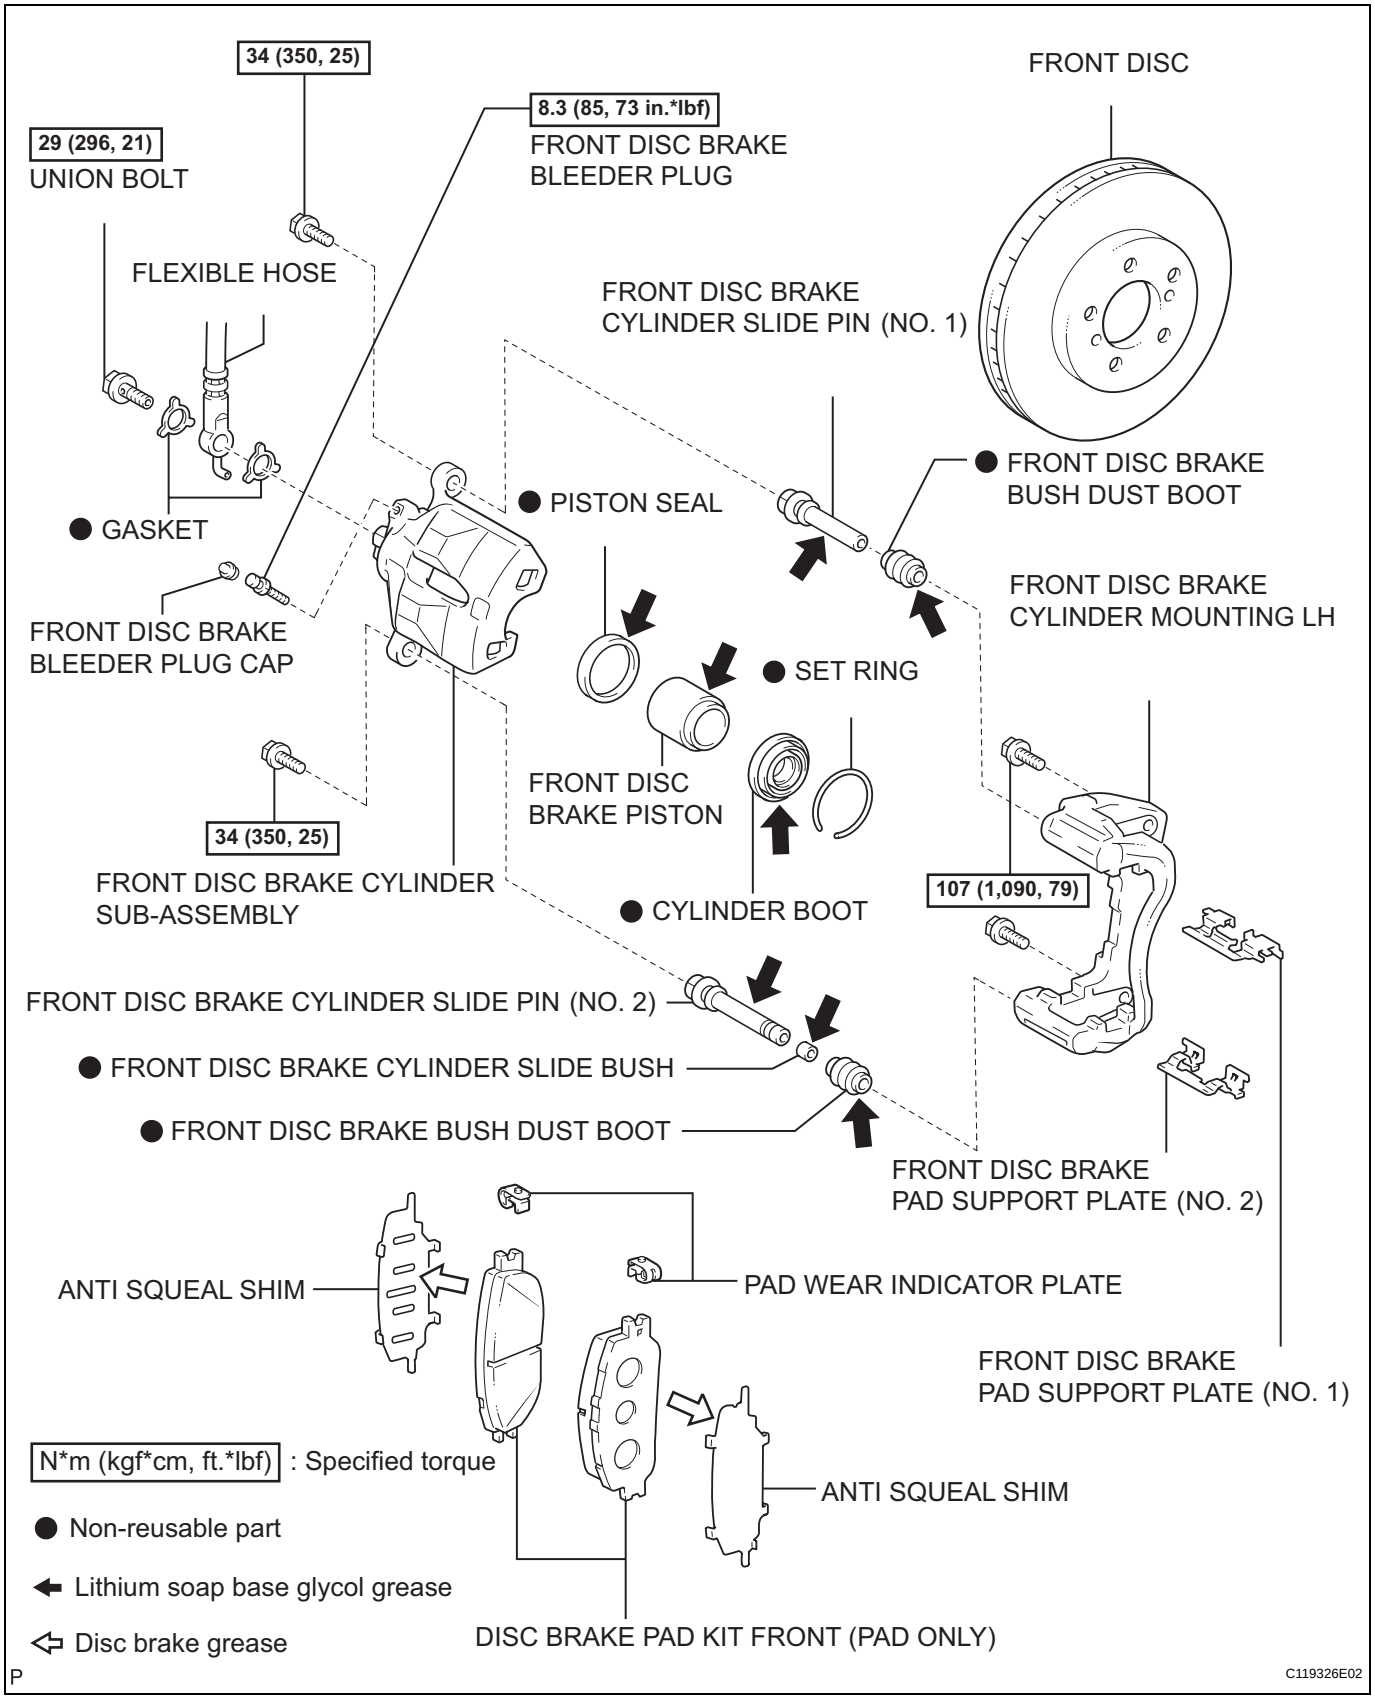

BR


REMOVAL

HINT:
Remove the RH side by the same procedure as the LH side.

1. **REMOVE FRONT WHEEL**

2. **DRAIN BRAKE FLUID**
   NOTICE:
   Wash the brake fluid off immediately if it attaches to any painted surface.


3. **REMOVE FRONT DISC BRAKE CYLINDER SUB-ASSEMBLY**
   (a) Remove the union bolt and 2 gaskets from the front disc brake cylinder sub-assembly, then disconnect the flexible hose.
   (b) Hold the front disc brake cylinder slide pin and remove the 2 bolts.

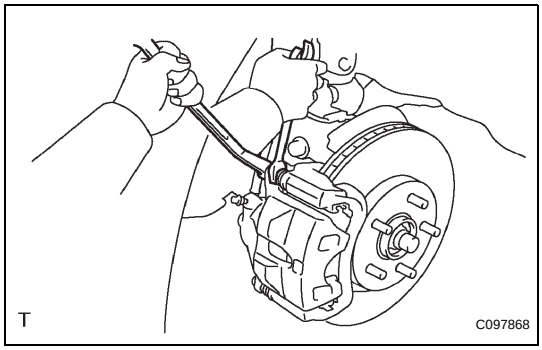


4. **REMOVE DISC BRAKE PAD KIT FRONT (PAD ONLY)**
   (a) Remove the disc brake pad kit front from the front disc brake cylinder mounting LH.

5. **REMOVE ANTI SQUEAL SHIM KIT FRONT**
   (a) Remove the anti squeal shim and pad wear indicator plate from the each pad.


6. **REMOVE FRONT DISC BRAKE PAD SUPPORT PLATE**
   (a) Remove the front disc brake pad support plate (No. 1) and front disc brake pad support plate (No. 2) from the front disc brake cylinder mounting LH.

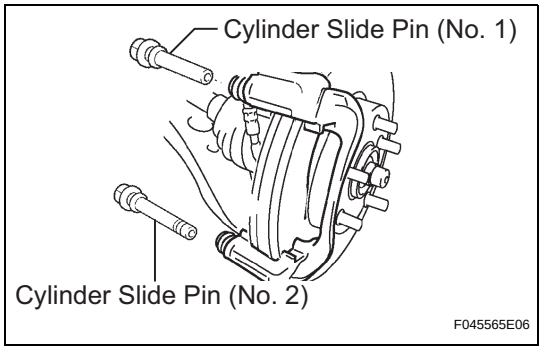

7. **REMOVE FRONT DISC BRAKE CYLINDER SLIDE PIN**
   (a) Remove the front disc brake cylinder slide pin (No. 1) and front disc brake cylinder slide pin (No. 2) from the front disc brake cylinder mounting LH.

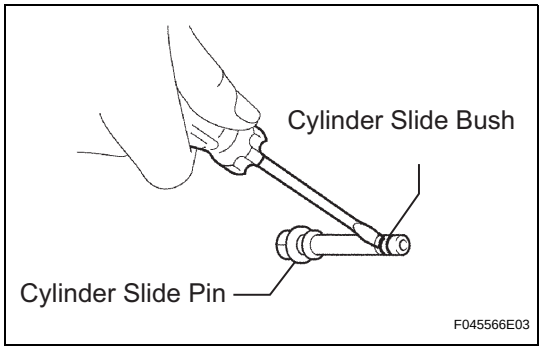

8. **REMOVE FRONT DISC BRAKE CYLINDER SLIDE BUSH**
   (a) Using a screwdriver, remove the front disc brake cylinder slide bush from the front disc brake cylinder slide pin (No. 2).
   NOTICE:
   Do not damage the front disc brake cylinder slide pin (No. 2).

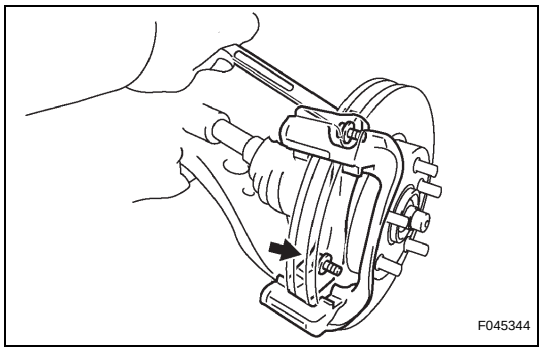

9. REMOVE FRONT DISC BRAKE CYLINDER MOUNTING LH

(a) Remove the 2 bolts and front disc brake cylinder mounting LH.