INSTALLATION

HINT:
Install the RH side by the same procedure as the LH side.


1. **INSTALL REAR DISC BRAKE CYLINDER MOUNTING LH**
   (a) Install the rear disc brake cylinder mounting LH with the 2 bolts.
   Torque: 88 N*m (900 kgf*cm, 65 ft.*lbf)

2. **INSTALL REAR DISC BRAKE PAD SUPPORT PLATE**
   (a) Install the rear disc brake pad support plate (No. 1) and rear disc brake pad support plate (No. 2) to the rear disc brake cylinder mounting LH.

3. **INSTALL REAR DISC BRAKE ANTI SQUEAL SHIM KIT**
   NOTICE:
   If necessary, replace the anti squeal shim kit when replacing the brake pad.
   (a) Apply disc brake grease to each anti squeal shim No. 1.
   (b) Install anti squeal shims No. 1 and anti squeal shim No. 2 on each pad.


4. **INSTALL DISC BRAKE PAD KIT REAR (PAD ONLY)**
   (a) Install the brake pad kit rear to the rear disc brake cylinder mounting LH.
   NOTICE:
   There should be no oil or grease on the friction surfaces of the pads and the disc.

5. **INSTALL DISC BRAKE CYLINDER ASSEMBLY REAR LH**
   (a) Install the disc brake cylinder assembly rear LH with the 2 bolts.
   Torque: 34 N*m (350 kgf*cm, 25 ft.*lbf)

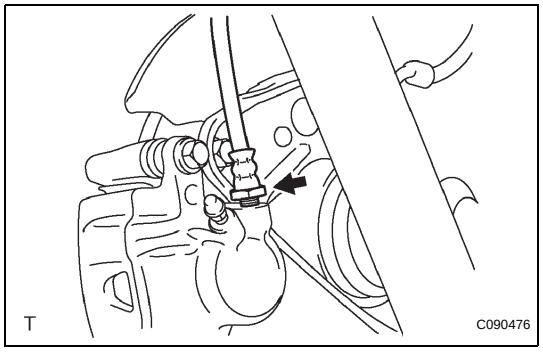

6. **CONNECT REAR LH FLEXIBLE HOSE**
   (a) Using SST, Install the rear brake flexible hose.
   SST 09023-12701
   Torque: 23 N*m (235 kgf*cm, 17 ft.*lbf)

7. **CONNECT REAR BRAKE TUBE NO.4**
   (a) Install the clip and connect the rear brake flexible hose.

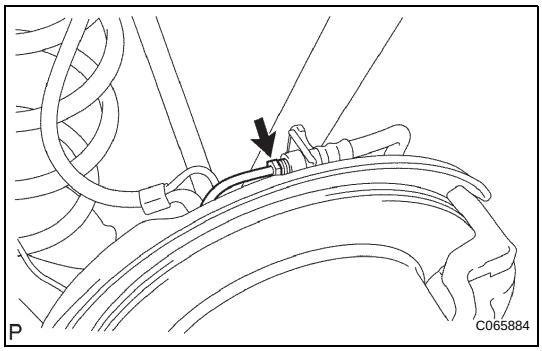

(b) Using SST and a spanner, connect the rear brake tube No. 4.
SST 09023-00101
Torque: 15 N*m (155 kgf*cm, 11 ft.*lbf)

8. **FILL RESERVOIR WITH BRAKE FLUID (See page BR-3)**
9. **BLEED BRAKE MASTER CYLINDER (See page BR-3)**
10. **BLEED BRAKE LINE (See page BR-4)**
11. **BLEED BRAKE ACTUATOR (w/ VSC) (See page BR-4)**
12. **CHECK FLUID LEVEL IN RESERVOIR (See page BR-7)**
13. **CHECK BRAKE FLUID LEAKAGE**
14. **INSTALL REAR WHEEL**
Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)