

REMOVAL


1. **DISCONNECT BATTERY NEGATIVE TERMINAL**
2. **REMOVE FRONT DOOR SCUFF PLATE LH**
3. **REMOVE COWL SIDE TRIM BOARD LH**
4. **REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER LH (See page IP-6)**
5. **REMOVE REAR DOOR SCUFF PLATE RH**
6. **REMOVE REAR DOOR SCUFF PLATE LH**
7. **REMOVE FRONT SEAT ASSEMBLY LH**
   HINT:
   - Manual Seat Type (See page SE-48)
   - Power Seat Type (See page SE-58)
   - Fold Flat Type (See page SE-40)
8. **REMOVE REAR SEAT NO.1 ASSEMBLY**
   HINT:
   - Captain Seat Type (See page SE-68)
   - Center Seat Type (See page SE-77)
9. **REMOVE REAR FLOOR SEAT LOCK COVER**
10. **REMOVE REAR FLOOR SEAT LOCK COVER**
11. **REMOVE PARKING BRAKE CONTROL PEDAL ASSEMBLY**
    (a) Remove the 4 nuts and separate the instrument panel junction block assembly w/ wiring harness connector from the body.
    (b) Disconnect the parking brake switch connector.
    (c) Remove the bolt, 2 nuts and parking brake control pedal assembly.

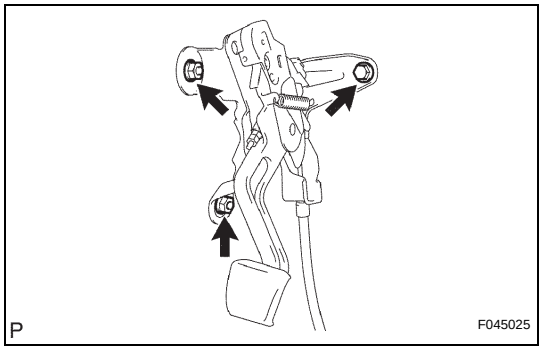

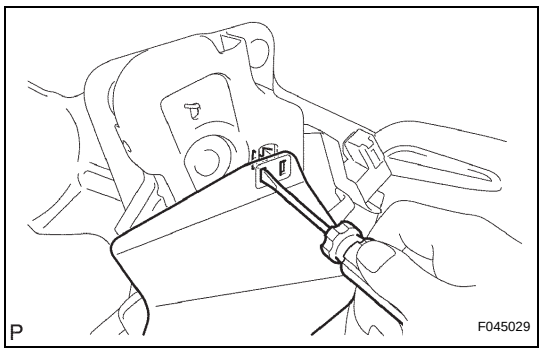


DISASSEMBLY

1. **REMOVE PARKING BRAKE PEDAL BRACKET PROTECTOR**
   (a) Using a flat-head screwdriver, disengage the 2 claws on the parking brake pedal bracket protector.

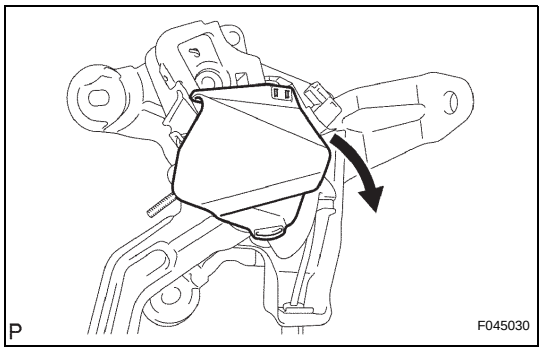


(b) Turning the parking brake pedal bracket protector clockwise, remove the parking brake pedal bracket protector from the parking brake control pedal.

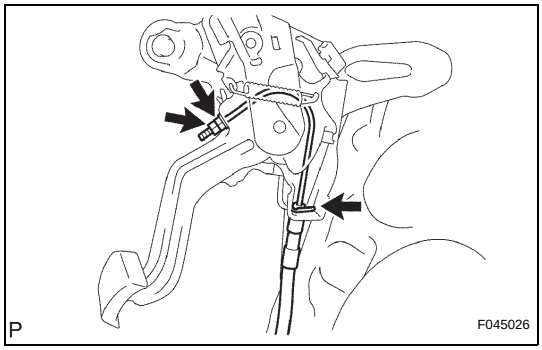

2. REMOVE PARKING BRAKE CABLE ASSEMBLY NO.1

(a) Remove the lock nut, adjusting nut, clip and disconnect the parking brake cable assembly No. 1 from the parking brake control pedal assembly.
(b) Take up the floor carpet.
(c) Remove the 6 bolts and disconnect the parking brake cable assembly No. 1 from the floor. (Except 7 Passenger Type)
(d) Remove the 7 bolts and disconnect the parking brake cable assembly No. 1 from the floor. (7 Passenger Type)
(e) Disconnect the parking brake cable No. 1 from the parking brake equalizer, and remove the parking brake cable No. 1.

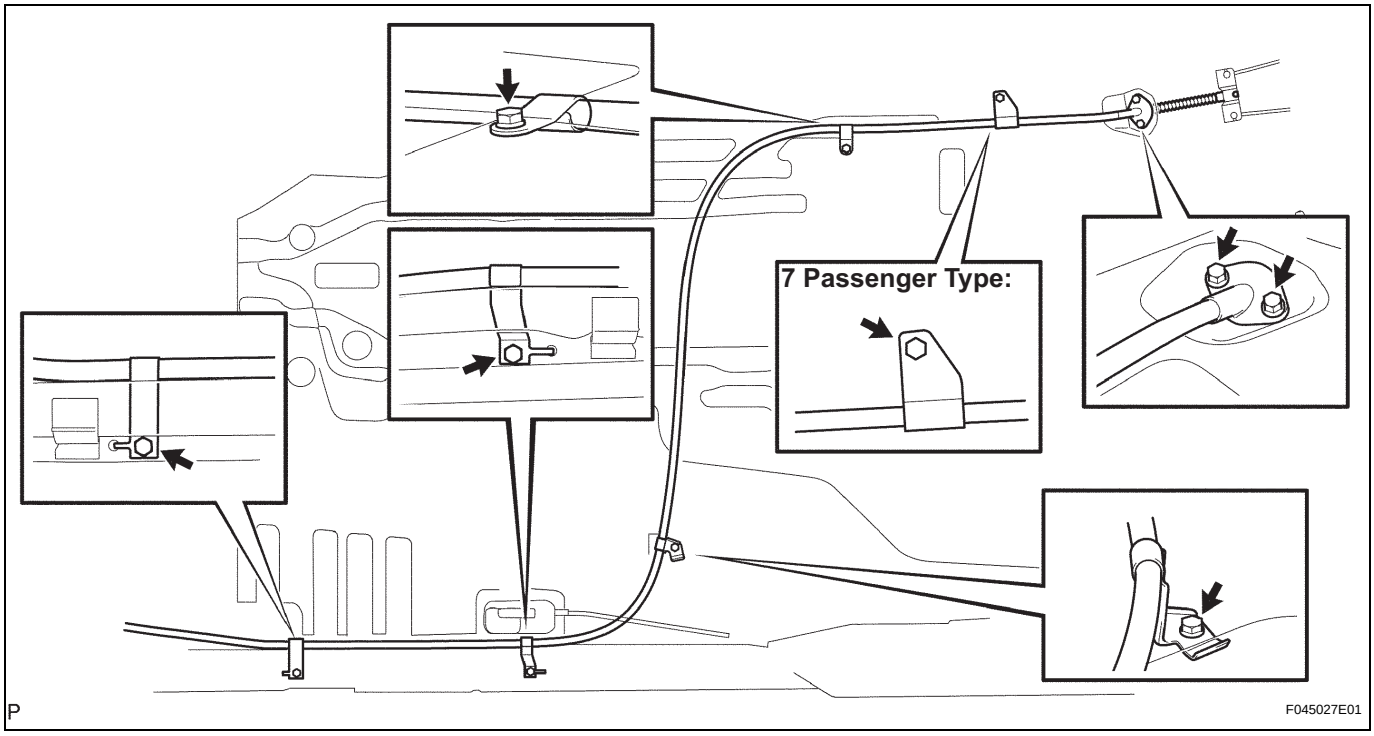

3. REMOVE PARKING BRAKE SWITCH ASSEMBLY

(a) Remove the screw and parking brake switch.