# PARKING BRAKE ASSEMBLY

## COMPONENTS

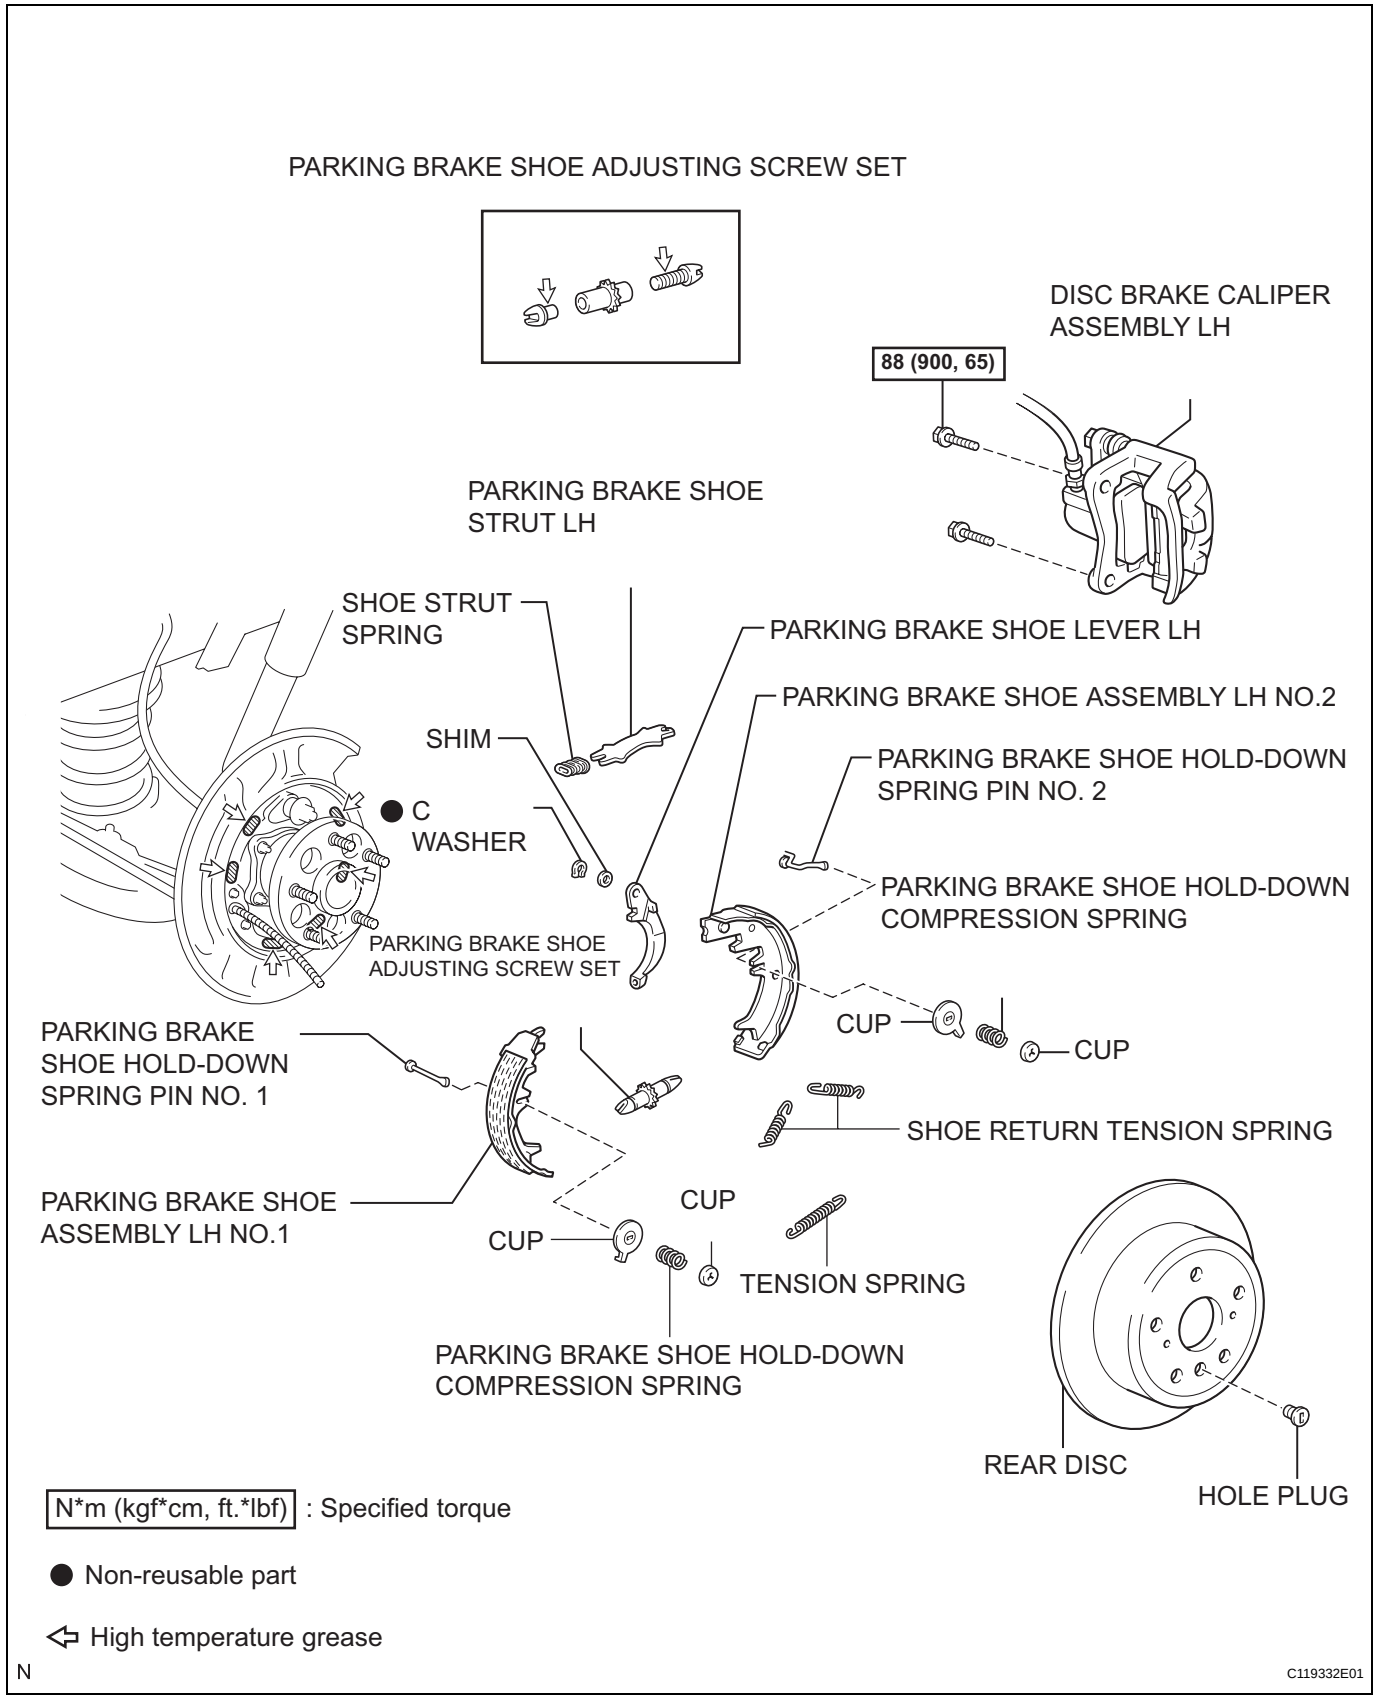


PB

# DISASSEMBLY

HINT:
Overhaul the RH side by the same procedures as these of the LH side.

**1. REMOVE REAR WHEEL**

**2. SEPARATE REAR DISC BRAKE CALIPER ASSEMBLY LH**

HINT:
Do not disconnect the flexible hose from the brake caliper.

**3. REMOVE REAR DISC**

(a) Release the parking brake, and remove the rear disc.

HINT:
- Align matchmarks on the disc and the axle hub.
- If the disc cannot be removed easily, turn the shoe adjuster until the wheel turns freely.

**4. REMOVE PARKING BRAKE SHOE ASSEMBLY LH NO.1**

(a) Using needle-nose pliers, remove the 2 shoe return tension springs.

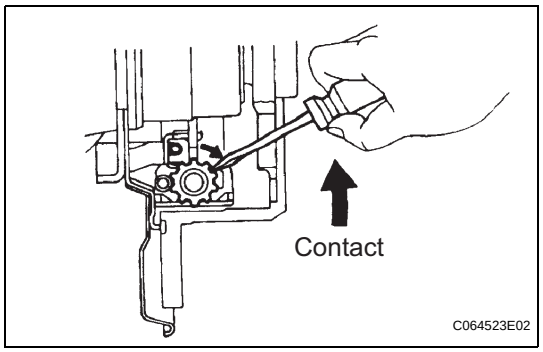


(b) Disconnect the tension spring from the parking brake shoe assembly LH No. 1.

(c) Slide out the parking brake shoe assembly LH No. 1 and remove the parking brake shoe assembly LH No. 1.

(d) Remove the shoe hold-down compression spring, 2 cups and shoe hold-down compression spring pin No. 1.

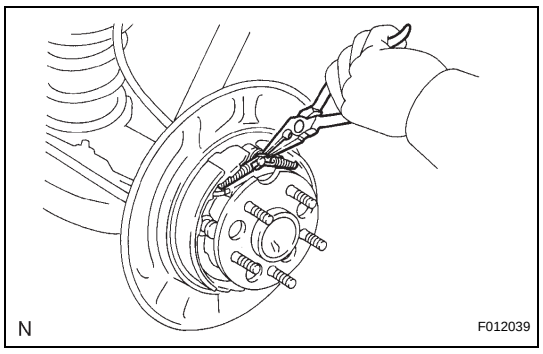


**5. REMOVE PARKING BRAKE SHOE ADJUSTING SCREW SET**

**6. REMOVE PARKING BRAKE SHOE STRUT LH**

**7. REMOVE PARKING BRAKE SHOE ASSEMBLY LH NO.2**

(a) Disconnect the return spring from the parking brake shoe assembly LH No. 2 and remove the tension spring.

(b) Slide out the parking brake shoe assembly LH No. 2.

(c) Remove the shoe hold-down compression spring, 2 cups and shoe hold-down compression spring pin No. 2.

