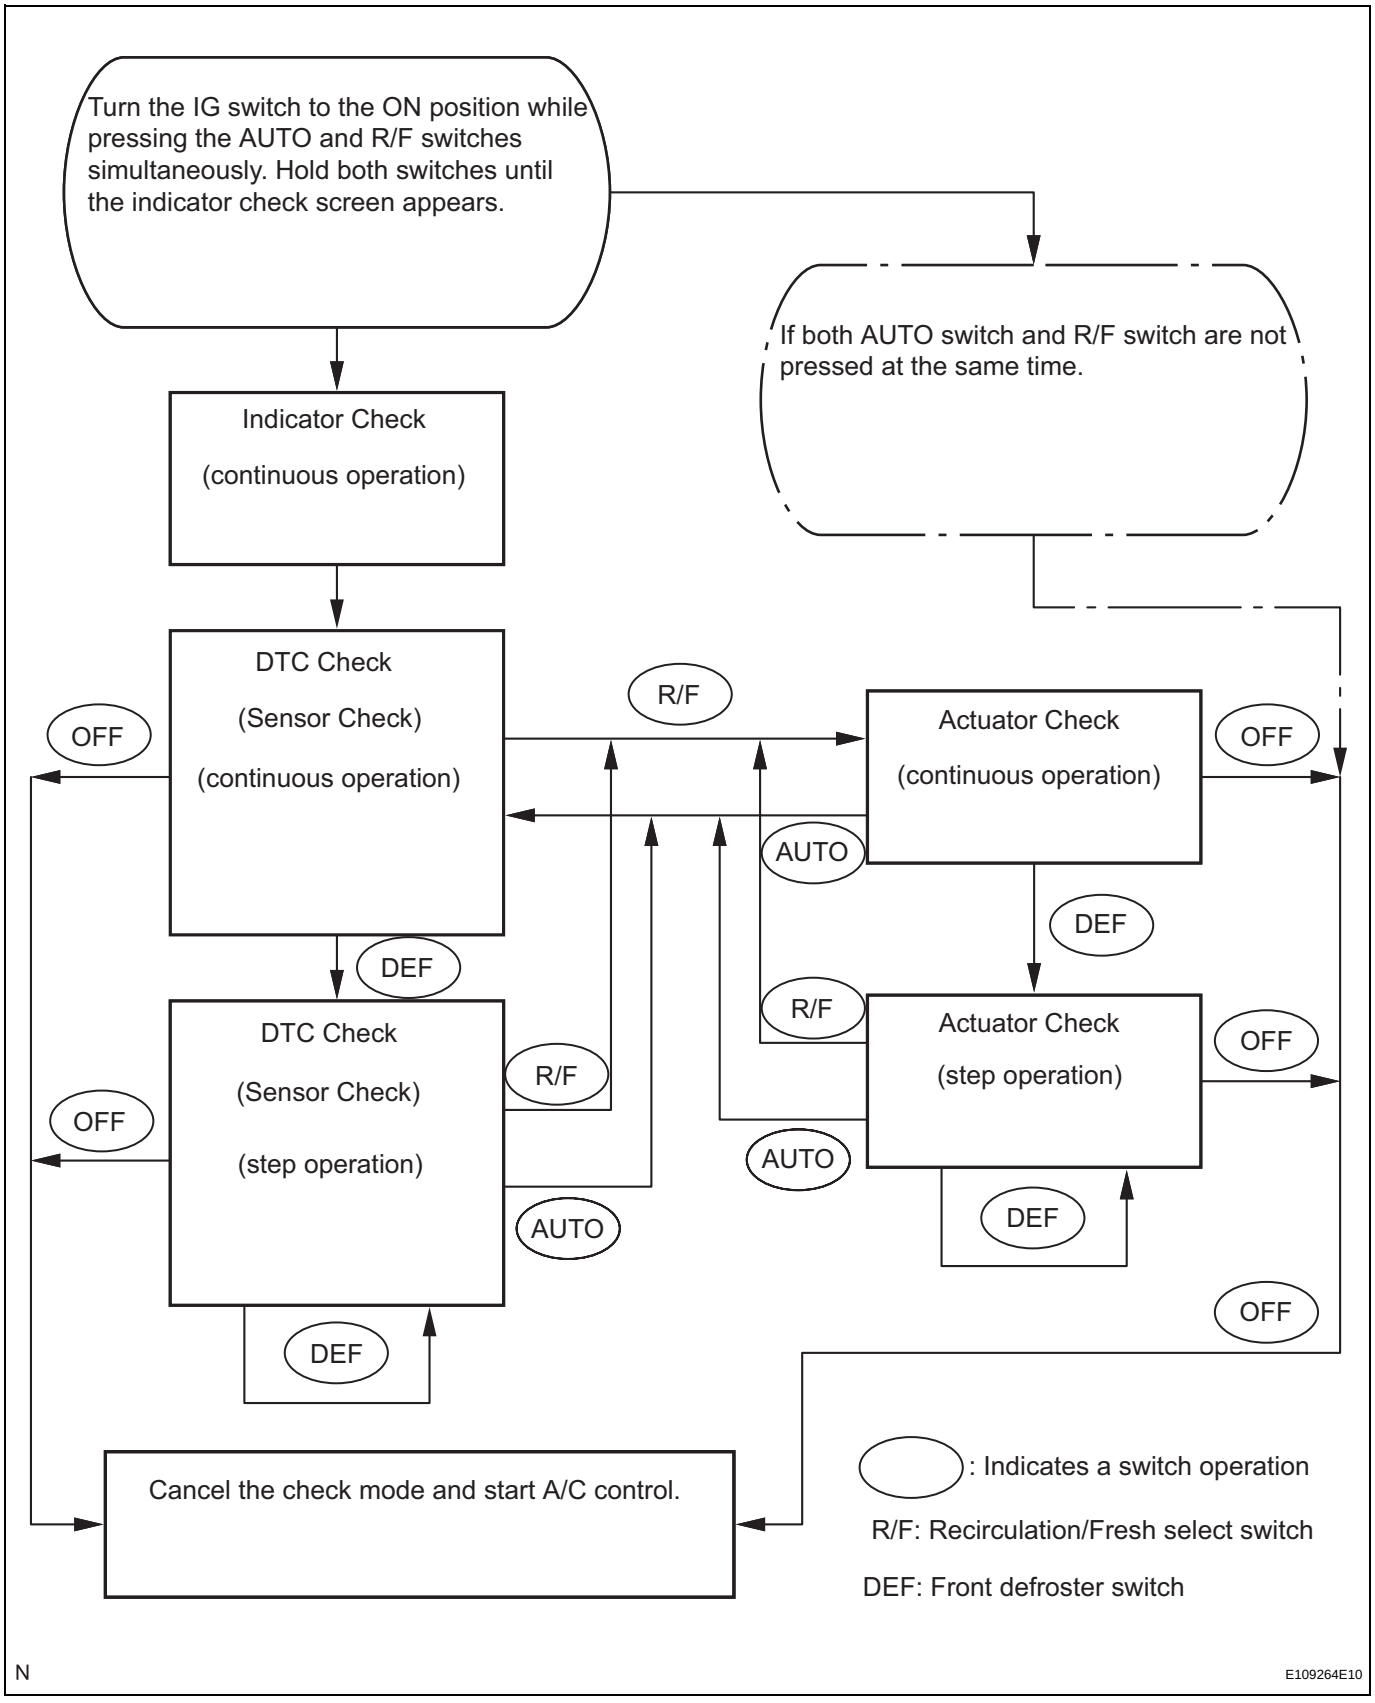
CHECK MODE PROCEDURE

1. LIST OF OPERATION METHODS

By operating each of the A/C control switches as shown in the diagram below, it is possible to enter the diagnosis check mode.


Turn the IG switch to the ON position while pressing the AUTO and R/F switches simultaneously. Hold both switches until the indicator check screen appears.
If both AUTO switch and R/F switch are not pressed at the same time.
Indicator Check
(continuous operation)
DTC Check
(Sensor Check)
(continuous operation)
OFF
R/F
Actuator Check
(continuous operation)
OFF
AUTO
DEF
DEF
DTC Check
(Sensor Check)
(step operation)
OFF
R/F
AUTO
R/F
Actuator Check
(step operation)
OFF
AUTO
DEF
OFF
DEF
Cancel the check mode and start A/C control.
: Indicates a switch operation
R/F: Recirculation/Fresh select switch
DEF: Front defroster switch
N
E109264E10