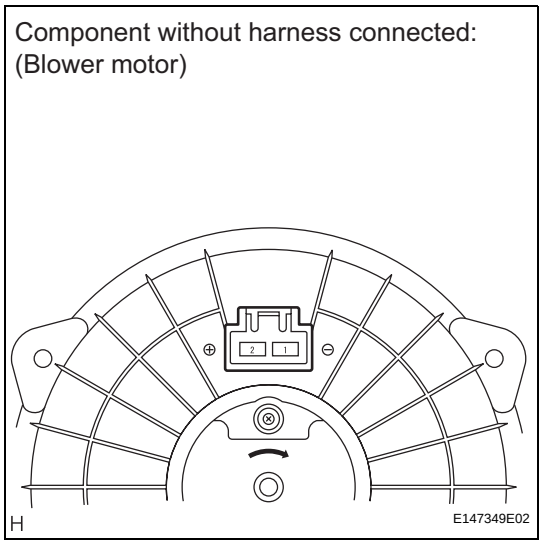

BLOWER MOTOR

ON-VEHICLE INSPECTION

1. INSPECT BLOWER WITH FAN MOTOR SUB-ASSEMBLY

(a) Connect the positive (+) lead from the battery to terminal 2 and negative (-) to terminal 1, then check that the motor operates smoothly.
If operation is not as specified, replace the blower motor.