Component without harness connected:
(Rear Blower Motor)

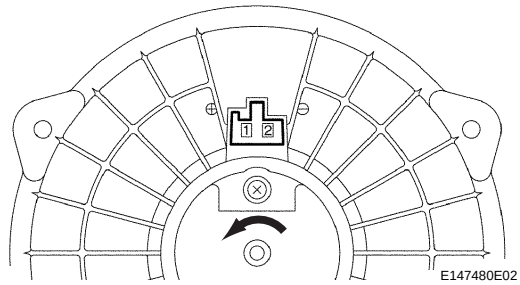

BLOWER MOTOR (for Rear Air Conditioning System)

ON-VEHICLE INSPECTION

1. INSPECT COOLING UNIT MOTOR SUB-ASSEMBLY WITH FAN

(a) Connect the positive (+) lead from the battery to terminal 1 and negative (-) to terminal 2, then check that the motor operates smoothly.
If operation is not as specified, replace the rear blower motor.