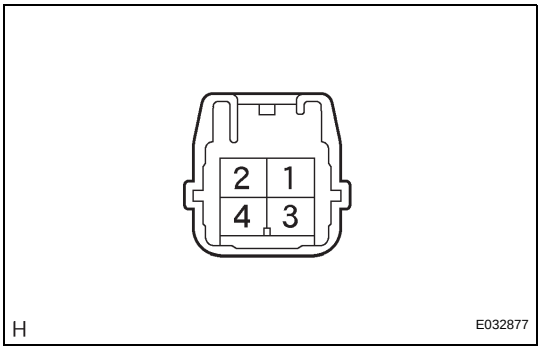

AC

BLOWER RESISTOR (for Manual Air Conditioning System)

ON-VEHICLE INSPECTION

1. INSPECT BLOWER RESISTOR (for Manual Air Conditioning System)

(a) Measure resistance between terminals, as shown in the table.

Tester connection	Specified condition
1 - 2	0.320 to 0.353 Ω
1 - 3	1.070 to 1.231 Ω
1 - 4	2.558 to 2.943 Ω

If resistance is not as specified, replace the blower resistor.