

Component without harness connected:
(Air Inlet Control Servo Motor)

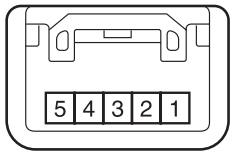

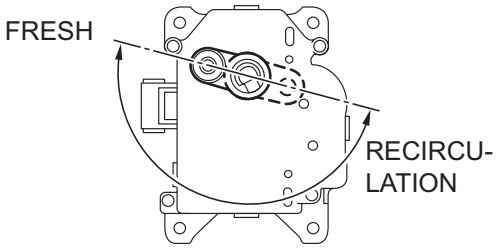

E145188E03

AIR INLET CONTROL SERVO MOTOR (for Automatic Air Conditioning System)

ON-VEHICLE INSPECTION

1. INSPECT AIR INLET CONTROL SERVO MOTOR

(a) Remove the air inlet control servo motor.

(b) Connect the positive (+) lead from the battery to terminal 4 and negative (-) lead to terminal 5, then check that the lever turns to "RECIRCULATION" side smoothly.

(c) Connect the positive (+) lead from the battery to terminal 5 and negative (-) lead to terminal 4, then check that the lever turns to "FRESH" side smoothly.

NOTICE:

While using the battery during inspection, do not bring the positive and negative tester probes too close to each other as a short circuit may occur.

If the operation is not as specified, replace the air inlet control servo motor.

AC