Component without harness connected:
(Air Inlet Control Servo Motor)

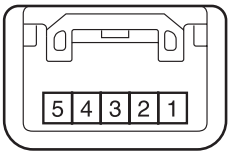


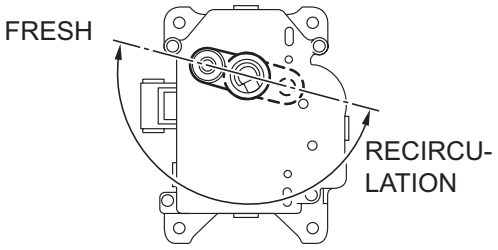


E145188E03

# AIR INLET CONTROL SERVO MOTOR (for Manual Air Conditioning System)

## ON-VEHICLE INSPECTION

**1. INSPECT AIR INLET CONTROL SERVO MOTOR**

(a) Remove the air inlet control servo motor.

(b) Connect the positive (+) lead from the battery to terminal 5 and negative (-) lead to terminal 1, then check that the lever turns to "RECIRCULATION" side smoothly.

(c) Connect the positive (+) lead from the battery to terminal 5 and negative (-) lead to terminal 2, then check that the lever turns to "FRESH" side smoothly.

**NOTICE:**

**While using the battery during inspection, do not bring the positive and negative tester probes too close to each other as a short circuit may occur.**

If the operation is not as specified, replace the air inlet control servo motor.