

Component without harness connected:
(Rear Air Outlet Control Servo Motor)

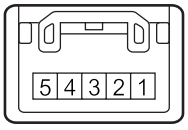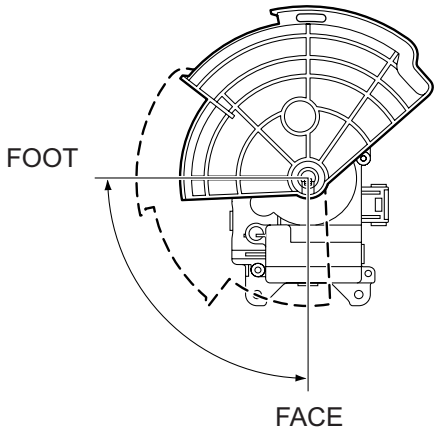


H

E145190E03

# AIR OUTLET CONTROL SERVO MOTOR (for Rear Air Conditioning System)

## ON-VEHICLE INSPECTION

**1. INSPECT REAR AIR OUTLET CONTROL SERVO MOTOR**

(a) Inspect servo motor operation.

(1) Connect the positive (+) lead from the battery to terminal 4 and negative (-) lead to terminal 5, then check that the arm turns to "FOOT" side smoothly.

(2) Connect the positive (+) lead from the battery to terminal 5 and negative (-) lead to terminal 4, then check that the arm turns to "FACE" side smoothly.

If the operations are not as specified, replace the rear air conditioning blower assembly (rear air outlet control servo motor).