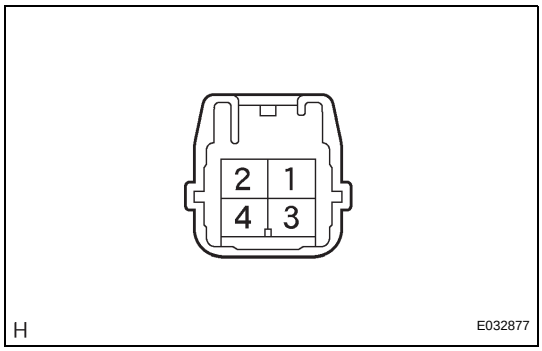


AC

REAR BLOWER RESISTOR

ON-VEHICLE INSPECTION

1. INSPECT REAR BLOWER MOTOR CONTROLLER

(a) Measure resistance according to the value(s) in the table below..

Standard resistance

Tester Connection	Condition	Specified Condition
3 - 4	Always	2.0 to 2.4 kΩ

If the resistance is not as specified, replace the rear blower motor controller.

(b) Inspect the rear blower motor controller.

(1) Connect the positive (+) lead to terminal 3 through a 12 V to 3.4 W test bulb and negative (-) lead to terminal 1.

(2) Connect the three 1.5 V dry cell batteries' positive (+) lead to terminal 2, and the negative (-) lead to terminal 1. Then check that the test bulb comes on.

OK:

The test bulb comes on.

If operation is not as specified, replace the rear blower motor controller.

