MAGNETIC CLUTCH RELAY


ON-VEHICLE INSPECTION

1. INSPECT MAGNETIC CLUTCH RELAY

(a) Remove the magnetic clutch relay.

(b) Measure the resistance according to the value(s) in the table below.

Standard resistance

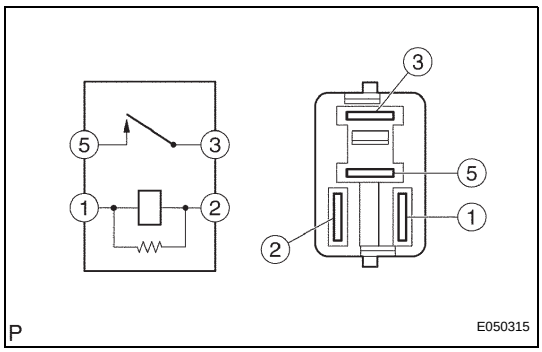

Tester Connection	Condition	Specified Condition
3 - 5	Always	10 kΩ or higher
	When battery voltage is applied to terminals 1 and 2	Below 1 Ω

If the resistance is not as specified, replace the magnetic clutch relay.