HEATER RELAY (for Rear Air Conditioning System)


ON-VEHICLE INSPECTION

1. INSPECT REAR HEATER RELAY

(a) Remove the rear heater relay.

(b) Measure the resistance according to the value(s) in the table below.

Standard resistance

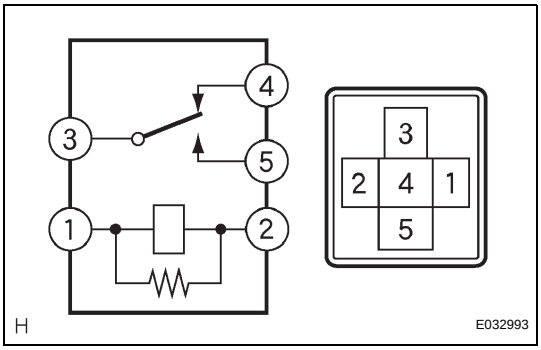

Tester Connection	Condition	Specified Condition
3 - 5	Always	10 kΩ or higher
	When battery voltage is applied to terminals 1 and 2	Below 1 Ω
3 - 4	Always	Below 1 Ω
	When battery voltage is applied to terminals 1 and 2	10 kΩ or higher

If the resistance is not as specified, replace the rear heater relay.