

AIR CONDITIONING CONTROL ASSEMBLY

COMPONENTS

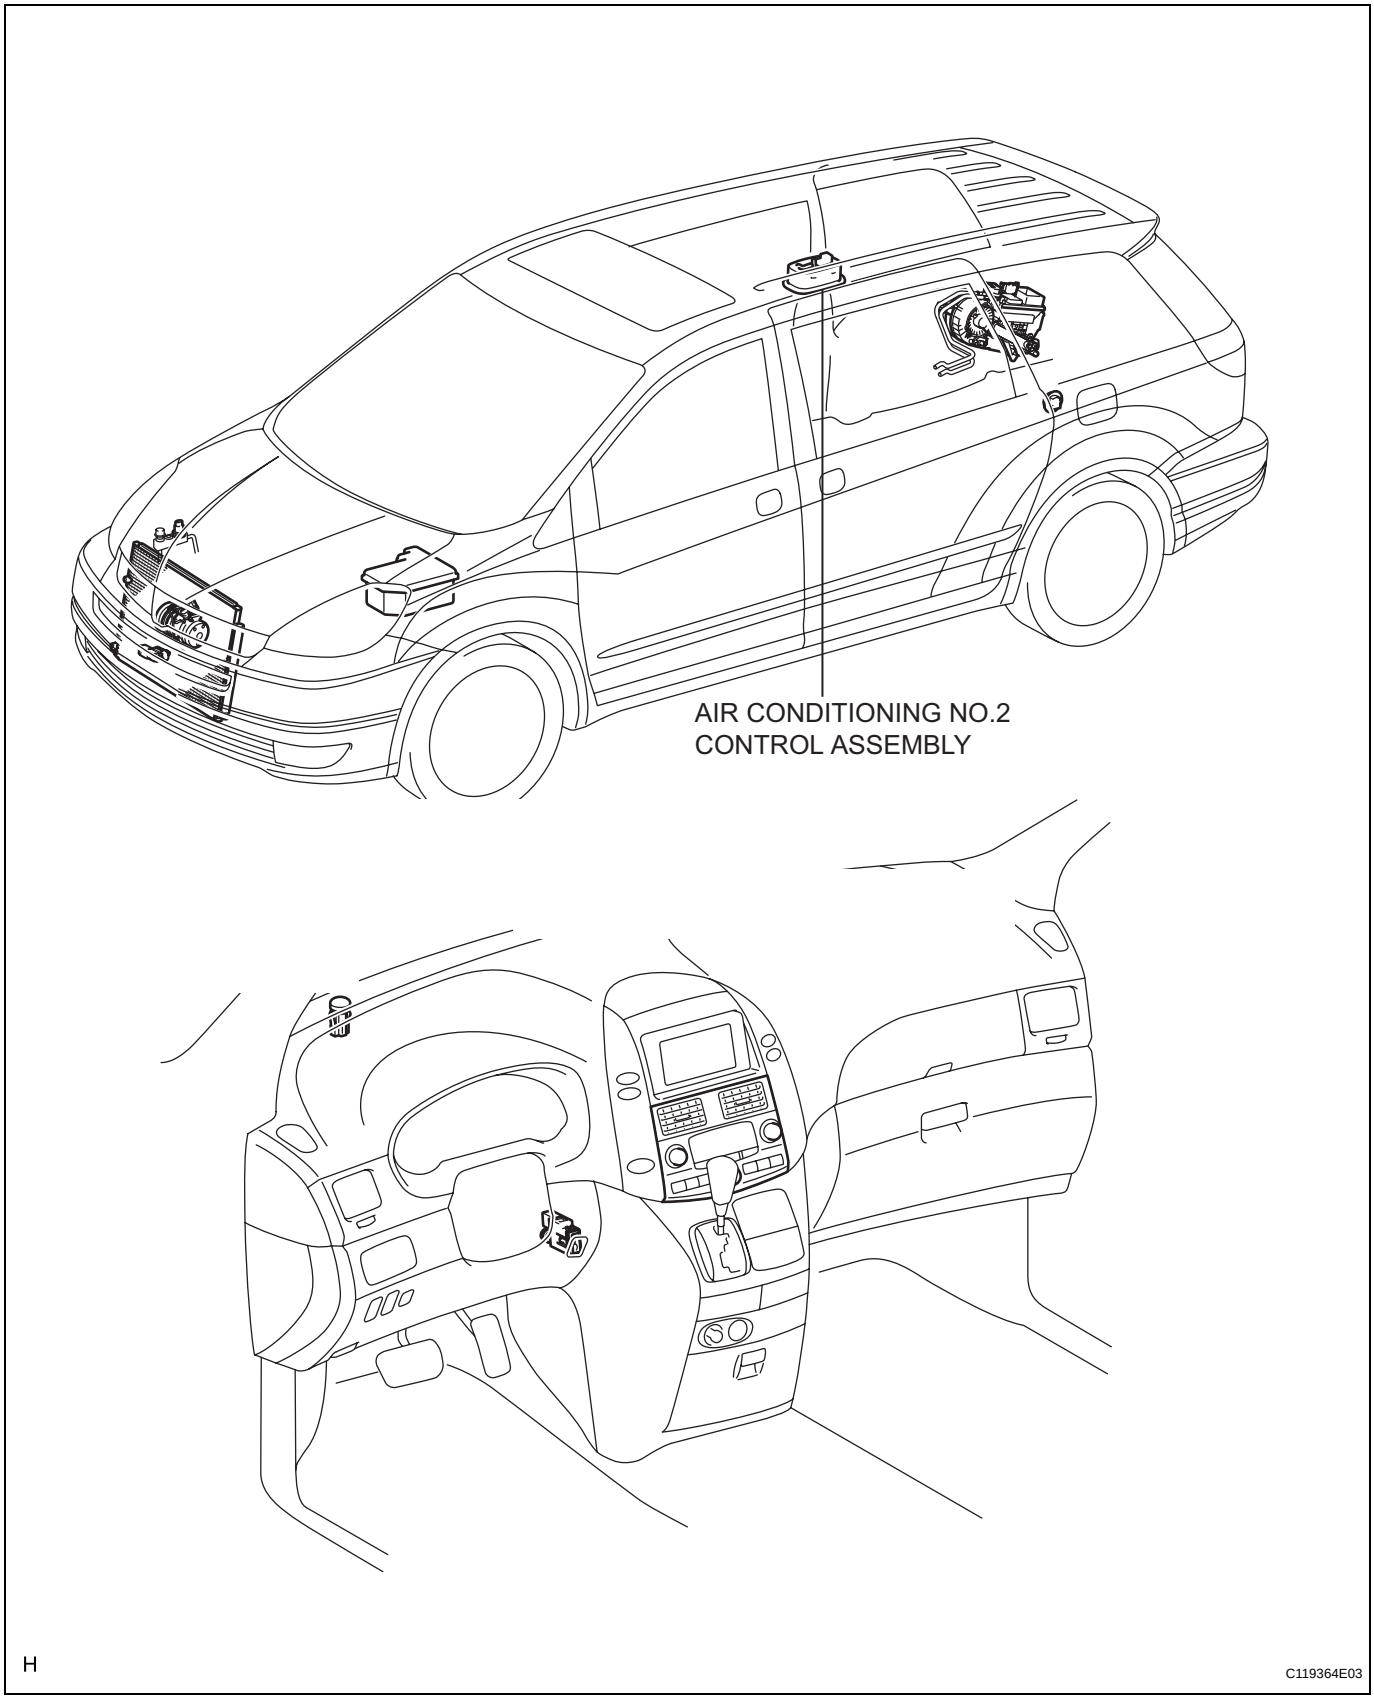


AC

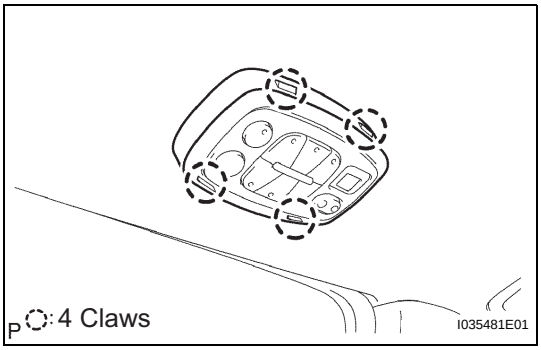


REMOVAL

1. **REMOVE AIR CONDITIONING NO.2 CONTROL ASSEMBLY**
   (a) Release the 4 claw fittings and release the air conditioning No. 2 control assembly.
   (b) Disconnect the connectors and remove the air conditioning No. 2 control assembly.

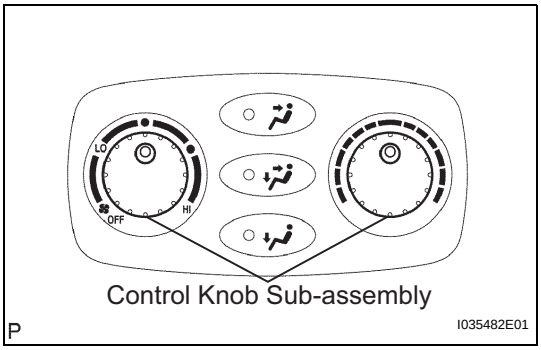

DISASSEMBLY

1. **REMOVE CONTROL KNOB SUB-ASSEMBLY (for Manual Air Conditioning System)**
   (a) Remove the control knob sub-assembly.

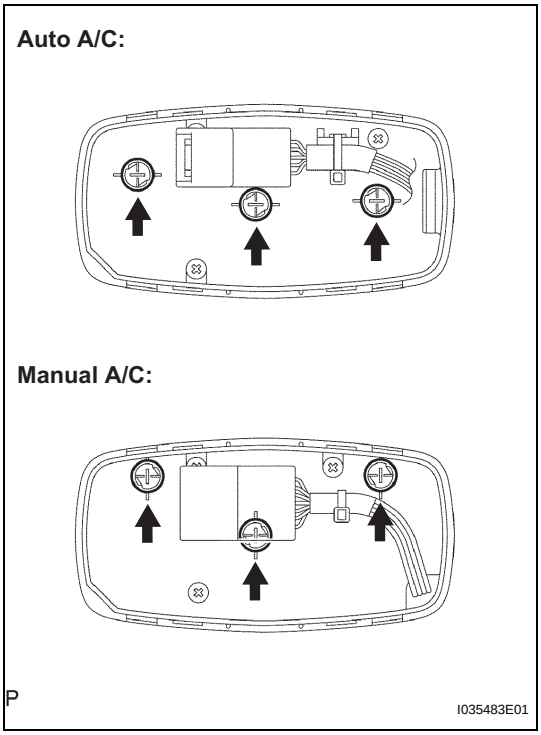

2. **REMOVE AIR CONDITIONING CONTROL BULB**
   (a) Remove the air conditioning control bulb.