DTC	B1633/82	Short to B+ in Rear Curtain Shield Squib RH Circuit

DESCRIPTION

The rear curtain shield squib RH circuit consists of the center airbag sensor assembly and the curtain shield airbag assembly RH.
The circuit instructs the SRS to deploy when deployment conditions are met.
DTC B1633/82 is recorded when a short to B+ is detected in the rear curtain shield squib RH circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B1633/82	• Short circuit in rear curtain shield squib RH wire harness (to B+) • Rear curtain shield squib RH malfunction • Center airbag sensor assembly malfunction	• Curtain shield airbag assembly RH (Rear curtain shield squib RH) • Center airbag sensor assembly • Floor wire No. 2

WIRING DIAGRAM

See page RS-279.

INSPECTION PROCEDURE

HINT:

- Perform the simulation method by selecting the "check mode" (signal check) with the intelligent tester (See page RS-38).
- After selecting the "check mode" (signal check), perform the simulation method by wiggling each connector of the airbag system or driving the vehicle on a city or rough road (See page RS-38).

1	CHECK CURTAIN SHIELD AIRBAG ASSEMBLY RH (REAR CURTAIN SHIELD SQUIB RH)

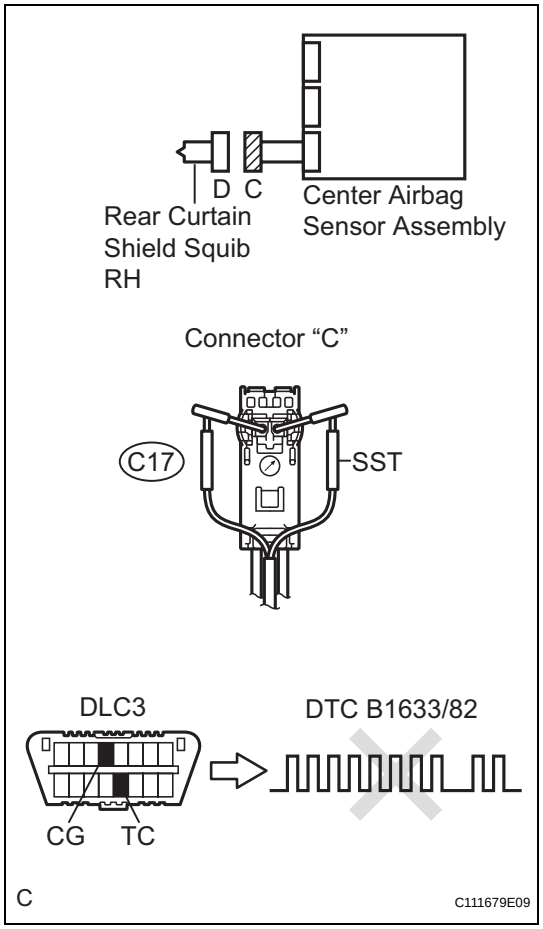

(a) Turn the ignition switch to the LOCK position.
(b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
(c) Disconnect the connectors from the curtain shield airbag assembly RH.
(d) Connect the white wire side of SST (resistance 2.1 Ω) to the floor wire No. 2.
CAUTION:
Never connect a tester to the curtain shield airbag assembly RH (Rear curtain shield squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.
NOTICE:
Do not forcibly insert the SST into the terminals of the connector when connecting.
Insert the SST straight into the terminals of the connector.
SST 09843-18060
(e) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
(f) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
(g) Clear the DTCs stored in memory (See page RS-35).
(h) Turn the ignition switch to the LOCK position.
(i) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
(j) Check the DTCs (See page RS-35).
OK:
DTC B1633/82 is not output.
HINT:
Codes other than DTC B1633/82 may be output at this time, but they are not related to this check.

NG → **Go to step 2**

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY RH

RS

2 CHECK FLOOR WIRE NO.2 (REAR CURTAIN SHIELD SQUIB RH CIRCUIT)

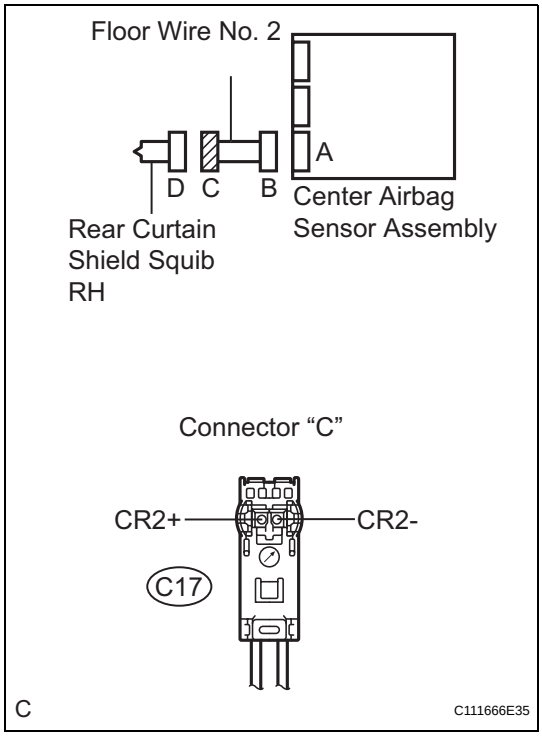

(a) Turn the ignition switch to the LOCK position.
(b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
(c) Disconnect the SST (resistance 2.1 Ω) from the floor wire No. 2.
(d) Disconnect the connector from the center airbag sensor assembly.
(e) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
(f) Turn the ignition switch to the ON position.
(g) Measure the voltage according to the value(s) in the table below.

Standard voltage

Tester connection	Condition	Specified condition
C17-1 (CR2+) - Body ground	Ignition switch ON	Below 1 V
C17-2 (CR2-) - Body ground	Ignition switch ON	Below 1 V

NG → **REPAIR OR REPLACE FLOOR WIRE NO.2**

OK

3 CHECK CENTER AIRBAG SENSOR ASSEMBLY

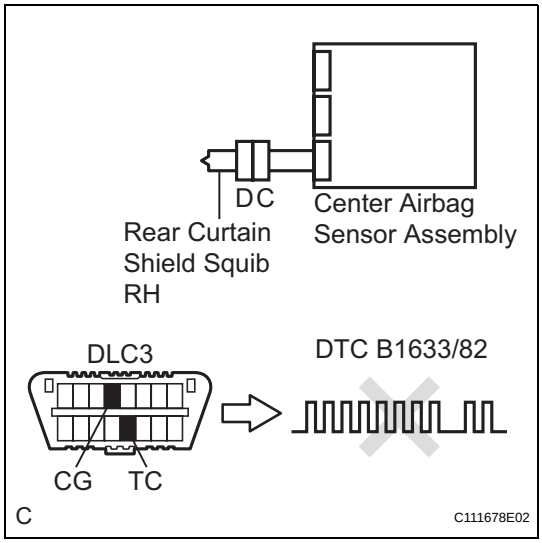

(a) Turn the ignition switch to the LOCK position.
(b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
(c) Connect the connectors to the curtain shield airbag assembly RH and the center airbag sensor assembly.
(d) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
(e) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
(f) Clear the DTCs stored in memory (See page RS-35).
(g) Turn the ignition switch to the LOCK position.
(h) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
(i) Check the DTCs (See page RS-35).

OK:

DTC B1633/82 is not output.

HINT:

Codes other than code B1633/82 may be output at this time, but they are not related to this check.

NG → **REPLACE CENTER AIRBAG SENSOR ASSEMBLY**

OK

USE SIMULATION METHOD TO CHECK