PROBLEM SYMPTOMS TABLE


HINT:
Proceed to the troubleshooting for each circuit in the table below.

AIRBAG SYSTEM

Symptom	Suspected Area	See page
The SRS warning light goes off after the primary check, but then comes on.	SRS Warning Light Remains ON	RS-307
When the ignition switch is turned to the ON position, the SRS warning light sometimes remains on even after approximately 6 seconds.	SRS Warning Light Remains ON	RS-307
The SRS warning light always comes on even when no DTC is output.	SRS Warning Light Remains ON	RS-307
When the ignition switch is turned to the ON position, the SRS warning light does not come on.	SRS Warning Light does not Come ON	RS-313
Although the SRS warning light operates normally, a DTC or a normal system code is not displayed.	Diagnosis Circuit	RS-316
Although terminals TC and CG are not connected, a DTC or normal system code is displayed.	Diagnosis Circuit	RS-316

TERMINALS OF ECU


1. CENTER AIRBAG SENSOR ASSEMBLY (w/ Side Airbag)

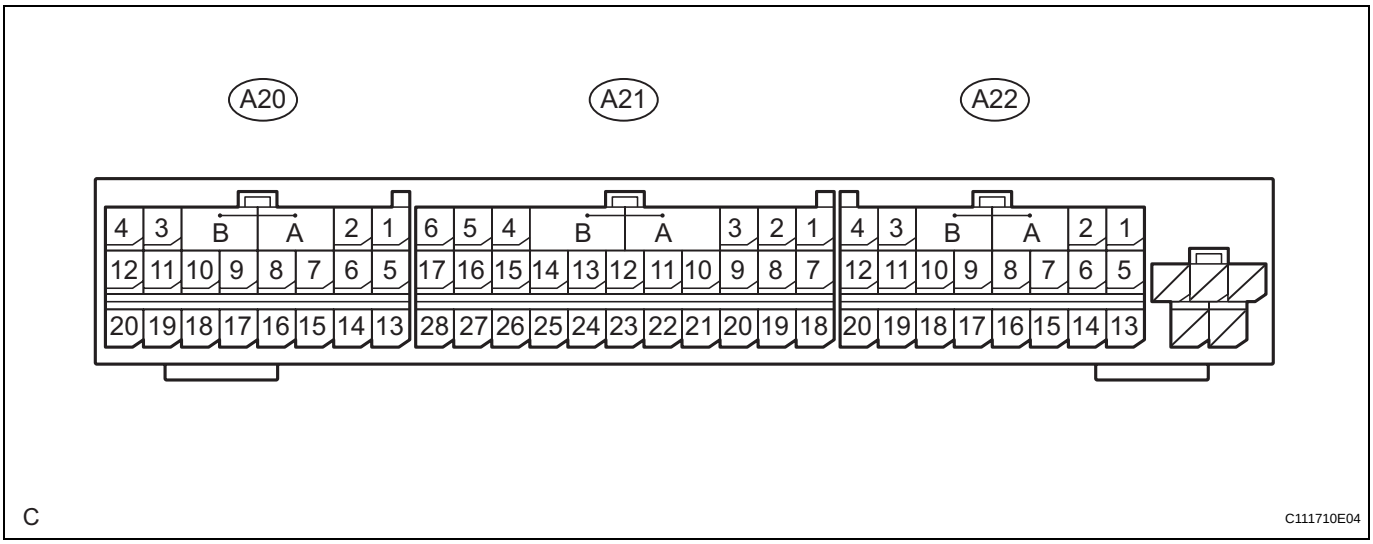

Terminal No.	Terminal Symbol	Terminal Description
A	-	Half Connection Detection Mechanism
B	-	Half Connection Detection Mechanism
A20-1	CSL-	Rear Airbag Sensor LH
A20-2	LBE-	Front Seat Inner Belt Assembly LH (Seat Belt Buckle Switch LH)
A20-3	LSP-	Seat Position Sensor
A20-4	LSP+	Seat Position Sensor
A20-5	CL2+	Curtain Shield Airbag Assembly LH (Rear Curtain Shield Squib LH)
A20-6	CL2-	Curtain Shield Airbag Assembly LH (Rear Curtain Shield Squib LH)
A20-7	PL-	Front Seat Outer Belt Assembly LH (Front Pretensioner Squib LH)
A20-8	PL+	Front Seat Outer Belt Assembly LH (Front Pretensioner Squib LH)
A20-9	ICL+	Curtain Shield Airbag Assembly LH (Curtain Shield Squib LH)
A20-10	ICL-	Curtain Shield Airbag Assembly LH (Curtain Shield Squib LH)
A20-11	SFL-	Front Seat Side Airbag Assembly (Side Squib LH)
A20-12	SFL+	Front Seat Side Airbag Assembly (Side Squib LH)
A20-13	ESCL	Rear Airbag Sensor LH
A20-14	VUCL	Rear Airbag Sensor LH
A20-15	CSL+	Rear Airbag Sensor LH
A20-16	VUPL	Side Airbag Sensor LH
A20-17	SSL+	Side Airbag Sensor LH
A20-18	ESL	Side Airbag Sensor LH
A20-19	LBE+	Front Seat Inner Belt Assembly LH (Seat Belt Buckle Switch LH)
A20-20	SSL-	Side Airbag Sensor LH
A21-1	P-AB	Passenger Airbag ON/OFF Indicator
A21-5	IG2	IGN Fuse

Terminal No.	Terminal Symbol	Terminal Description
A21-7	P2-	Front Passenger Airbag Assembly (Passenger Side Squib 2nd Step)
A21-8	P2+	Front Passenger Airbag Assembly (Passenger Side Squib 2nd Step)
A21-9	+SR	Front Airbag Sensor RH
A21-10	P+	Front Passenger Airbag Assembly (Passenger Side Squib)
A21-11	P-	Front Passenger Airbag Assembly (Passenger Side Squib)
A21-12	SIL	DLC3
A21-13	D-	Steering Pad (Driver Side Squib)
A21-14	D+	Steering Pad (Driver Side Squib)
A21-15	+SL	Front Airbag Sensor LH
A21-16	D2+	Steering Pad (Driver Side Squib 2nd Step)
A21-17	D2-	Steering Pad (Driver Side Squib 2nd Step)
A21-20	-SR	Front Airbag Sensor RH
A21-22	MPX2	Combination Meter Assembly
A21-24	MPX1	Body ECU
A21-25	PAON	Passenger Airbag ON/OFF Indicator
A21-26	-SL	Front Airbag Sensor LH
A21-27	E1	Ground
A21-28	E2	Ground
A22-1	FSR+	Occupant Classification ECU
A22-2	FSR-	Occupant Classification ECU
A22-4	CSR-	Rear Airbag Sensor RH
A22-5	SFR+	Front Seat Side Airbag Assembly (Side Squib RH)
A22-6	SFR-	Front Seat Side Airbag Assembly (Side Squib RH)
A22-7	ICR-	Curtain Shield Airbag Assembly RH (Curtain Shield Squib RH)
A22-8	ICR+	Curtain Shield Airbag Assembly RH (Curtain Shield Squib RH
A22-9	PR+	Front Seat Outer Belt Assembly RH (Front Pretensioner Squib RH)
A22-10	PR-	Front Seat Outer Belt Assembly RH (Front Pretensioner Squib RH)
A22-11	CR2-	Curtain Shield Airbag Assembly RH (Rear Curtain Shield Squib RH)
A22-12	CR2+	Curtain Shield Airbag Assembly RH (Rear Curtain Shield Squib RH)
A22-13	SSR-	Side Airbag Sensor RH
A22-15	ESR	Side Airbag Sensor RH
A22-16	SSR+	Side Airbag Sensor RH
A22-17	VUPR	Side Airbag Sensor RH
A22-18	CSR+	Rear Airbag Sensor RH
A22-19	VUCR	Rear Airbag Sensor RH
A22-20	ESCR	Rear Airbag Sensor RH

2. CENTER AIRBAG SENSOR ASSEMBLY (w/o Side Airbag)

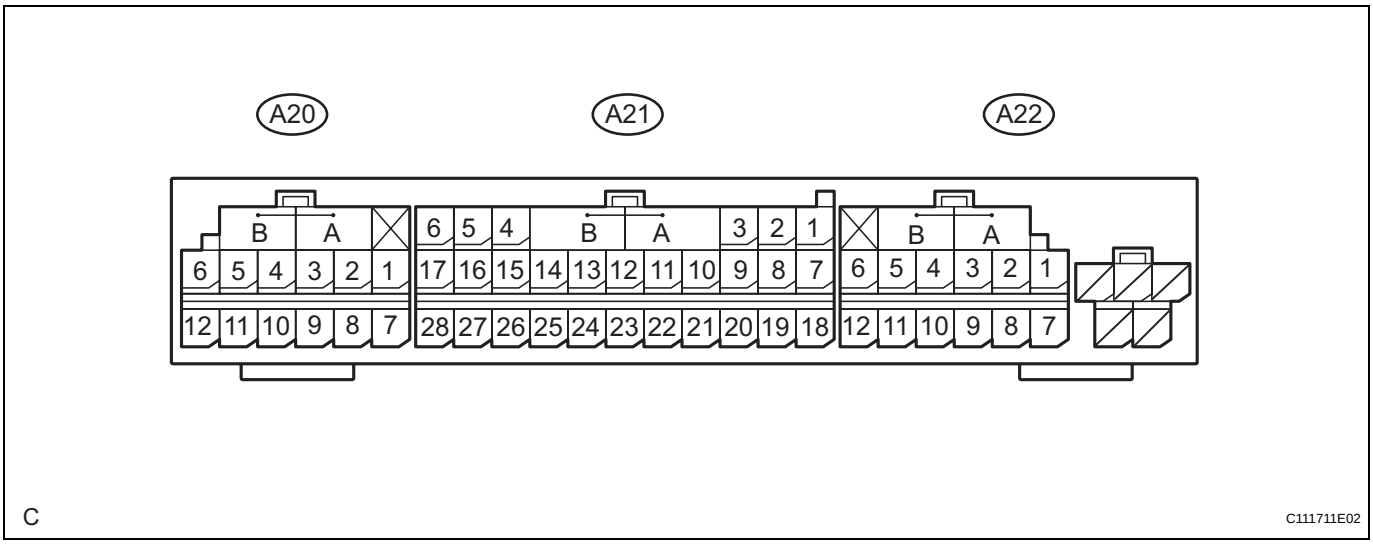

Terminal No.	Terminal Symbol	Terminal Description
A	-	Half Connection Detection Mechanism
B	-	Half Connection Detection Mechanism
A20-1	PL-	Front Seat Outer Belt Assembly LH (Front Pretensioner Squib LH)
A20-2	PL+	Front Seat Outer Belt Assembly LH (Front Pretensioner Squib LH)
A20-3	LSP+	Seat Position Sensor
A20-6	LBE-	Front Seat Inner Belt Assembly LH (Seat Belt Buckle Switch LH)
A20-8	LSP-	Seat Position Sensor
A20-11	LBE+	Front Seat Inner Belt Assembly LH (Seat Belt Buckle Switch LH)
A21-1	P-AB	Passenger Airbag ON/OFF Indicator
A21-5	IG2	IGN Fuse
A21-7	P2-	Front Passenger Airbag Assembly (Passenger Side Squib 2nd Step)
A21-8	P2+	Front Passenger Airbag Assembly (Passenger Side Squib 2nd Step)
A21-9	+SR	Front Airbag Sensor RH
A21-10	P+	Front Passenger Airbag Assembly (Passenger Side Squib)
A21-11	P-	Front Passenger Airbag Assembly (Passenger Side Squib)
A21-12	SIL	DLC3
A21-13	D-	Steering Pad (Driver Side Squib)
A21-14	D+	Steering Pad (Driver Side Squib)
A21-15	+SL	Front Airbag Sensor LH
A21-16	D2+	Steering Pad (Driver Side Squib 2nd Step)
A21-17	D2-	Steering Pad (Driver Side Squib 2nd Step)
A21-20	-SR	Front Airbag Sensor RH
A21-22	MPX2	Combination Meter Assembly
A21-24	MPX1	Body ECU
A21-25	PAON	Passenger Airbag ON/OFF Indicator
A21-26	-SL	Front Airbag Sensor LH
A21-27	E1	Ground