| DTC | B1168/86 | Short to B+ in Curtain Shield Squib LH Circuit |
|---|---|---|

## DESCRIPTION

The curtain shield squib LH circuit consists of the center airbag sensor assembly and the curtain shield airbag assembly LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
DTC B1168/86 is recorded when a short to B+ is detected in the curtain shield squib LH circuit.

| DTC No. | DTC Detecting Condition | Trouble Area |
|---|---|---|
| B1168/86 | • Short circuit in curtain shield squib LH wire harness (to B+)<br>• Curtain shield squib LH malfunction<br>• Center airbag sensor assembly malfunction | • Curtain shield airbag assembly LH (Curtain shield squib LH)<br>• Center airbag sensor assembly<br>• Floor wire |

RS

## WIRING DIAGRAM


See page RS-233.

## INSPECTION PROCEDURE

HINT:

- Perform the simulation method by selecting the "check mode" (signal check) with the intelligent tester (See page RS-38).
- After selecting the "check mode" (signal check), perform the simulation method by wiggling each connector of the airbag system or driving the vehicle on a city or rough road (See page RS-38).

| 1 | CHECK CURTAIN SHIELD AIRBAG ASSEMBLY LH (CURTAIN SHIELD SQUIB LH) |
|---|---|

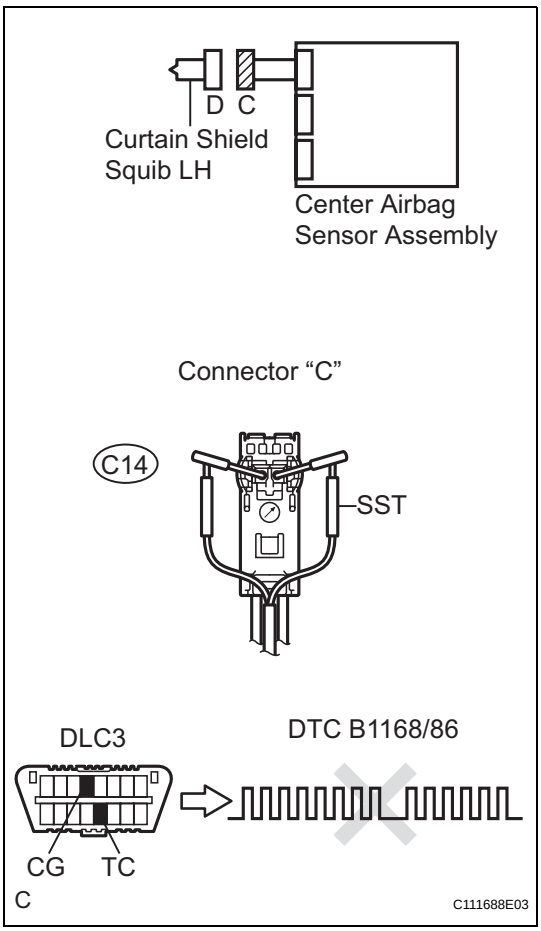


(a) Turn the ignition switch to the LOCK position.
(b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
(c) Disconnect the connectors from the curtain shield airbag assembly LH.
(d) Connect the white wire side of SST (resistance 2.1 Ω) to the floor wire.
**CAUTION:**
**Never connect a tester to the curtain shield airbag assembly LH (curtain shield squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.**
**NOTICE:**
**Do not forcibly insert the SST into the terminals of the connector when connecting.**
**Insert the SST straight into the terminals of the connector.**
**SST 09843-18060**
(e) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
(f) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
(g) Clear the DTCs stored in memory (See page RS-35).
(h) Turn the ignition switch to the LOCK position.
(i) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
(j) Check the DTCs (See page RS-35).

**OK:**
**DTC B1168/86 is not output.**
HINT:
Codes other than DTC B1168/86 may be output at this time, but they are not related to this check.


NG → **Go to step 2**

OK →

**REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY LH**

RS

## 2 CHECK FLOOR WIRE (CURTAIN SHIELD SQUIB LH CIRCUIT)

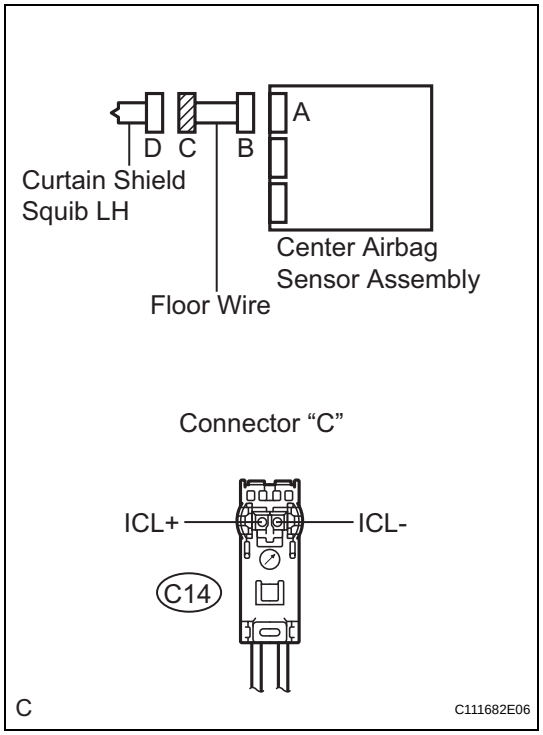


(a) Turn the ignition switch to the LOCK position.
(b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
(c) Disconnect the SST (resistance 2.1 Ω) from the floor wire.
(d) Disconnect the connector from the center airbag sensor assembly.
(e) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
(f) Turn the ignition switch to the ON position.
(g) Measure the voltage according to the value(s) in the table below.


**Standard voltage**

| Tester connection | Condition | Specified condition |
|---|---|---|
| C14-1 (ICL+) - Body ground | Ignition switch ON | Below 1 V |
| C14-2 (ICL-) - Body ground | Ignition switch ON | Below 1 V |

NG → **REPAIR OR REPLACE FLOOR WIRE**

OK →

| 3 | CHECK CENTER AIRBAG SENSOR ASSEMBLY |
|---|---|

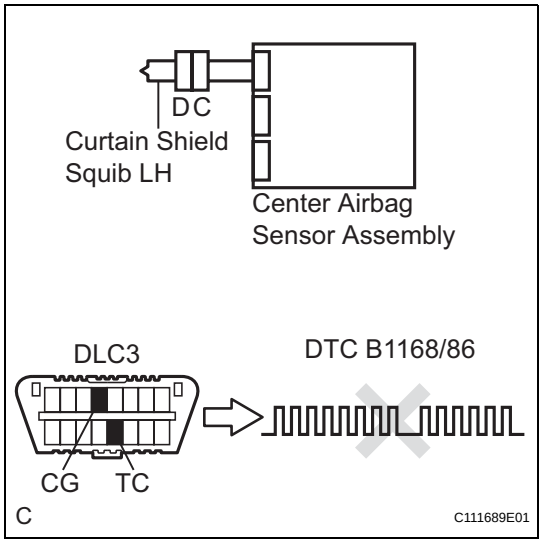


(a) Turn the ignition switch to the LOCK position.
(b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
(c) Connect the connectors to the curtain shield airbag assembly LH and the center airbag sensor assembly.
(d) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
(e) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
(f) Clear the DTCs stored in memory (See page RS-35).
(g) Turn the ignition switch to the LOCK position.
(h) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
(i) Check the DTCs (See page RS-35).

**OK:**

**DTC B1168/86 is not output.**

HINT:

Codes other than code B1168/86 may be output at this time, but they are not related to this check.

**NG** → **REPLACE CENTER AIRBAG SENSOR ASSEMBLY**

**OK**

**USE SIMULATION METHOD TO CHECK**